

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Georgia-Pacific](#) /
- › [Georgia-Pacific enMotion 10" Automated Touchless Paper Towel Dispenser \(Model 59460A\) User Manual](#)

Georgia-Pacific 59460A

Georgia-Pacific enMotion 10" Automated Touchless Paper Towel Dispenser User Manual

Model: 59460A

1. INTRODUCTION

This manual provides instructions for the installation, operation, and maintenance of the Georgia-Pacific enMotion 10" Automated Touchless Paper Towel Dispenser, Model 59460A. This dispenser is designed for hygienic, reliable, and efficient paper towel dispensing in various commercial environments.

Key Features:

- **Touchless Operation:** Provides hygienic, automated paper towel dispensing.
- **Whisper Quiet:** Engineered for virtually soundless operation.
- **Long Battery Life:** One set of batteries can dispense for approximately 4 years on average, or 200+ rolls based on back-to-back dispensing.
- **Jam-Free Dispensing:** Designed for consistent and reliable paper delivery.
- **Customizable Settings:** Allows adjustment for efficient dispensing to meet specific needs.



Figure 1: Front view of the enMotion 10" Automated Touchless Paper Towel Dispenser in Gray.

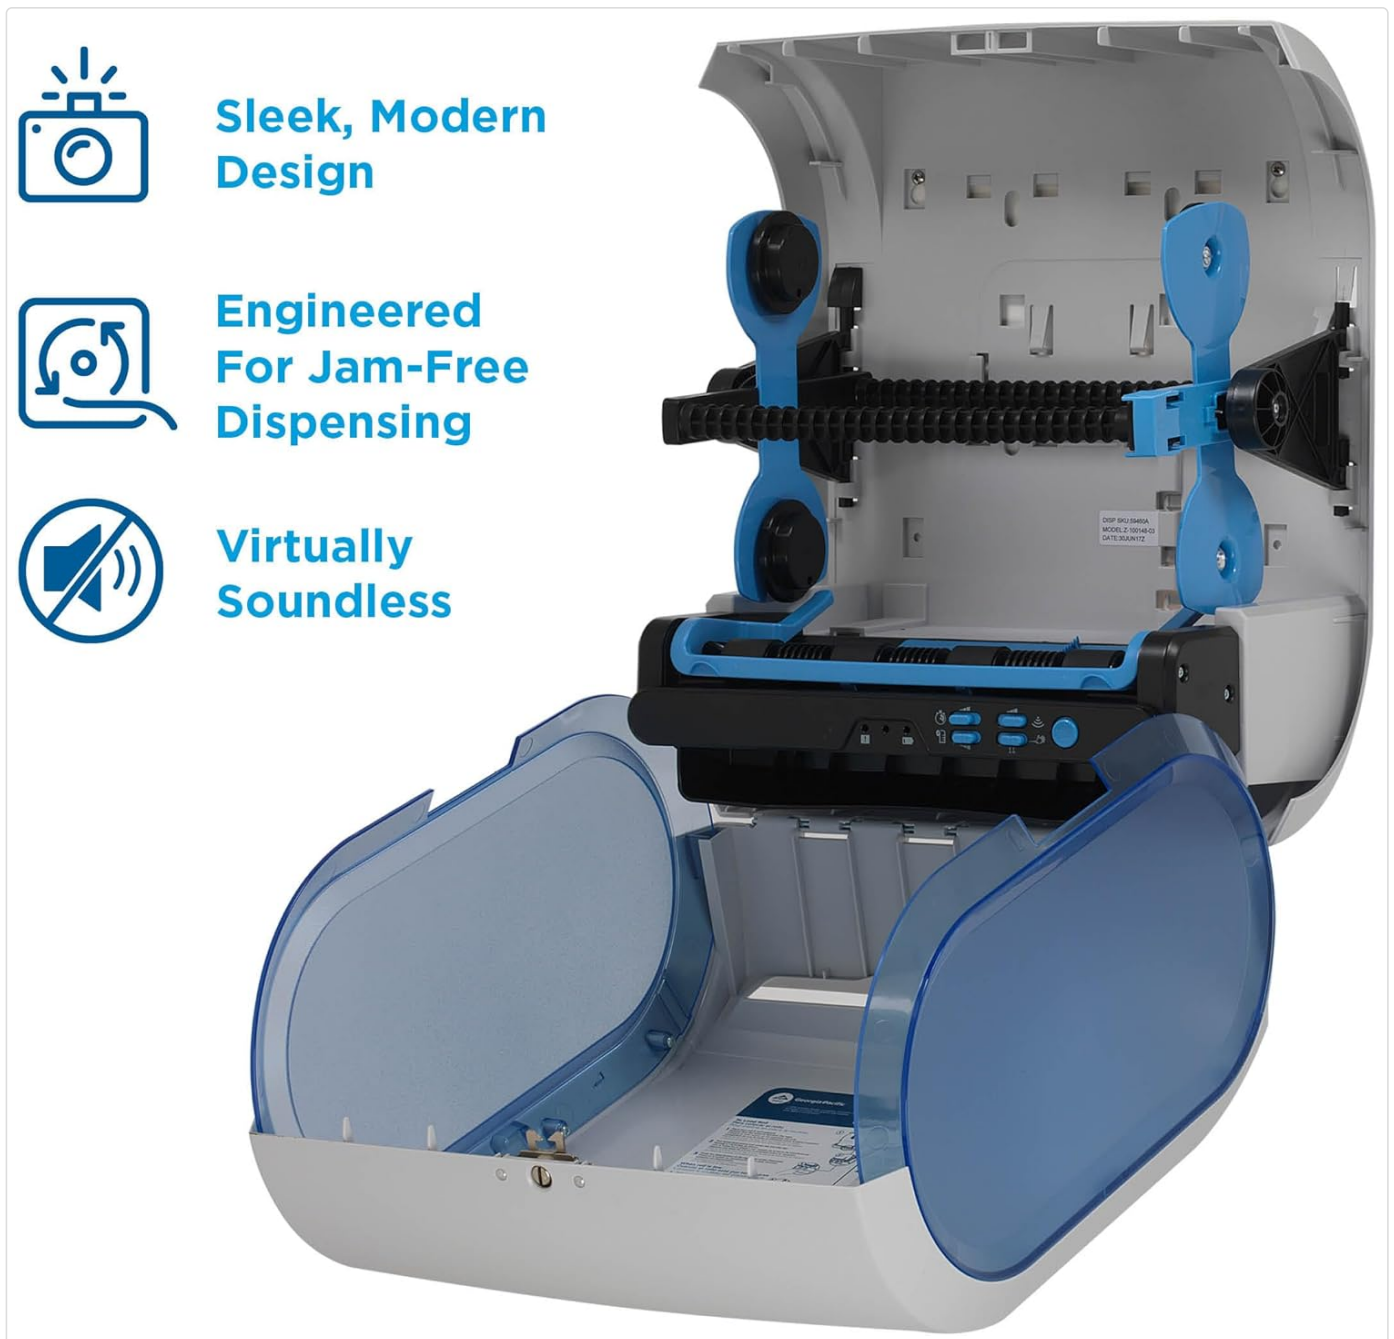


Figure 2: Internal components highlighting the jam-free design and quiet operation features.

2. SETUP AND INSTALLATION

2.1 Unpacking Contents

Carefully remove the dispenser from its packaging. Verify that all components are present:

- enMotion 10" Automated Touchless Paper Towel Dispenser
- Key kit
- Reference guide
- 4 D-cell batteries (included)

Note: Mounting screws are not included and must be supplied by the installer.



Figure 3: Included accessories: key kit, reference guide, and 4 D-cell batteries.

2.2 Battery Installation

1. Open the dispenser cover using the provided key.
2. Locate the battery compartment.
3. Insert the 4 D-cell batteries, ensuring correct polarity (+/-).
4. Close the battery compartment securely.

2.3 Mounting the Dispenser

The dispenser is designed for wall mounting. Choose a suitable location, considering accessibility and clearance for paper towel dispensing.

1. Mark the desired mounting points on the wall. Refer to the reference guide for specific mounting hole locations.
2. Drill pilot holes if necessary.
3. Secure the dispenser to the wall using appropriate screws (not included).



Figure 4: The enMotion dispenser securely mounted on a wall.

2.4 Loading Paper Towel Rolls

This dispenser is compatible with enMotion 10" paper towel refills (e.g., 89460, 89470, 89480, 89485, 89490).

1. Open the dispenser cover.
2. Place the paper towel roll onto the internal spindle, ensuring it is properly seated.
3. Feed the leading edge of the paper towel into the dispensing mechanism as indicated by internal guides.
4. Close the dispenser cover until it latches securely.

Compatible enMotion® 10" Automated Touchless Roll Paper Towel Dispensers and Refills

(Sold Separately)



59462A
enMotion® 10" Automated Touchless Paper Towel Dispenser
(Black, 1 Each)



59407A
enMotion® 10" Automated Touchless Paper Towel Dispenser
(White, 1 Each)



59460A
enMotion® 10" Automated Touchless Paper Towel Dispenser
(Gray, 1 Each)



59488A
enMotion® Impulse® 10" 1-Roll Automated Touchless Paper Towel Dispenser
(Black, 1 Each)



59447A
enMotion® Impulse® 10" 1-Roll Automated Touchless Paper Towel Dispenser
(White, 1 Each)



59487A
enMotion® Impulse® 10" 1-Roll Automated Touchless Paper Towel Dispenser
(Gray, 1 Each)



89460
enMotion® 10" Paper Towel Roll
White
800' per Roll
6 Each



89470
enMotion® 10" Recycled Paper Towel Roll
White
800' per Roll
6 Each



89480
enMotion® 10" Recycled Paper Towel Roll
Brown
800' per Roll
6 Each



89485
enMotion® 10" Recycled Paper Towel Roll
Brown
800' per Roll
3 Each



89490
enMotion® 10" Recycled Paper Towel Roll
White
800' per Roll
6 Each

Figure 5: Overview of compatible enMotion 10" paper towel rolls and other dispenser models.

3. OPERATING INSTRUCTIONS

3.1 Dispensing Paper Towels

The enMotion dispenser operates automatically. Simply place your hand in the sensor area below the dispenser opening. The dispenser will detect your hand and automatically present a sheet of paper towel.

3.2 Adjusting Settings

The dispenser features internal controls to customize dispensing settings, such as sheet length and delay between dispenses. These settings can help optimize paper usage and reduce waste.

1. Open the dispenser cover using the key.
2. Locate the control panel inside the dispenser.
3. Refer to the reference guide for detailed instructions on adjusting specific settings. Common adjustments include:

- **Sheet Length:** Adjusts the length of the dispensed paper towel.
 - **Sensor Sensitivity:** Modifies how easily the dispenser detects a hand.
 - **Delay Time:** Sets the time before another sheet can be dispensed after the previous one.
4. After making adjustments, close the dispenser cover securely.



Figure 6: Internal control panel for adjusting dispenser settings.

4. MAINTENANCE

4.1 Cleaning

To maintain hygiene and optimal performance, clean the dispenser regularly.

1. Open the dispenser cover.
2. Wipe down the exterior and interior surfaces with a soft, damp cloth and a mild, non-abrasive cleaner.
3. Ensure the sensor area is free from dust and debris.

4. Do not use harsh chemicals or abrasive materials, as these can damage the dispenser's finish.
5. Close the dispenser cover securely after cleaning.

4.2 Battery Replacement

When the batteries are low, the dispenser may indicate this with a light or reduced performance. Replace all four D-cell batteries simultaneously to ensure consistent power.

1. Open the dispenser cover.
2. Remove the old batteries from the compartment.
3. Insert new D-cell batteries, observing correct polarity.
4. Close the battery compartment and dispenser cover.

5. TROUBLESHOOTING

Problem	Possible Cause	Solution
Dispenser not dispensing paper.	Low or dead batteries. Paper roll empty or improperly loaded. Sensor obstructed.	Replace batteries. Load a new paper roll correctly. Clean sensor area.
Paper jams frequently.	Incorrect paper type. Paper improperly loaded. Internal mechanism obstruction.	Ensure use of compatible enMotion 10" rolls. Reload paper roll according to instructions. Inspect for debris and clear any obstructions.
Dispenser is noisy.	Unusual operation.	Verify paper is loaded correctly. If noise persists, contact support.
Paper towel length is inconsistent.	Settings require adjustment.	Refer to Section 3.2 for adjusting dispensing settings.

6. SPECIFICATIONS

Feature	Detail
Model Number	59460A
Brand	Georgia-Pacific
Color	Gray
Mounting Type	Wall Mount
Product Dimensions (L x W x H)	15.06"L x 10.06"W x 17.3"H (approximate)
Item Weight	11.48 pounds
Batteries Required	Yes (4 D-cell batteries)
Compatible Paper Towel Rolls	enMotion 10" Paper Towel Rolls (e.g., 89460, 89470, 89480, 89485, 89490)

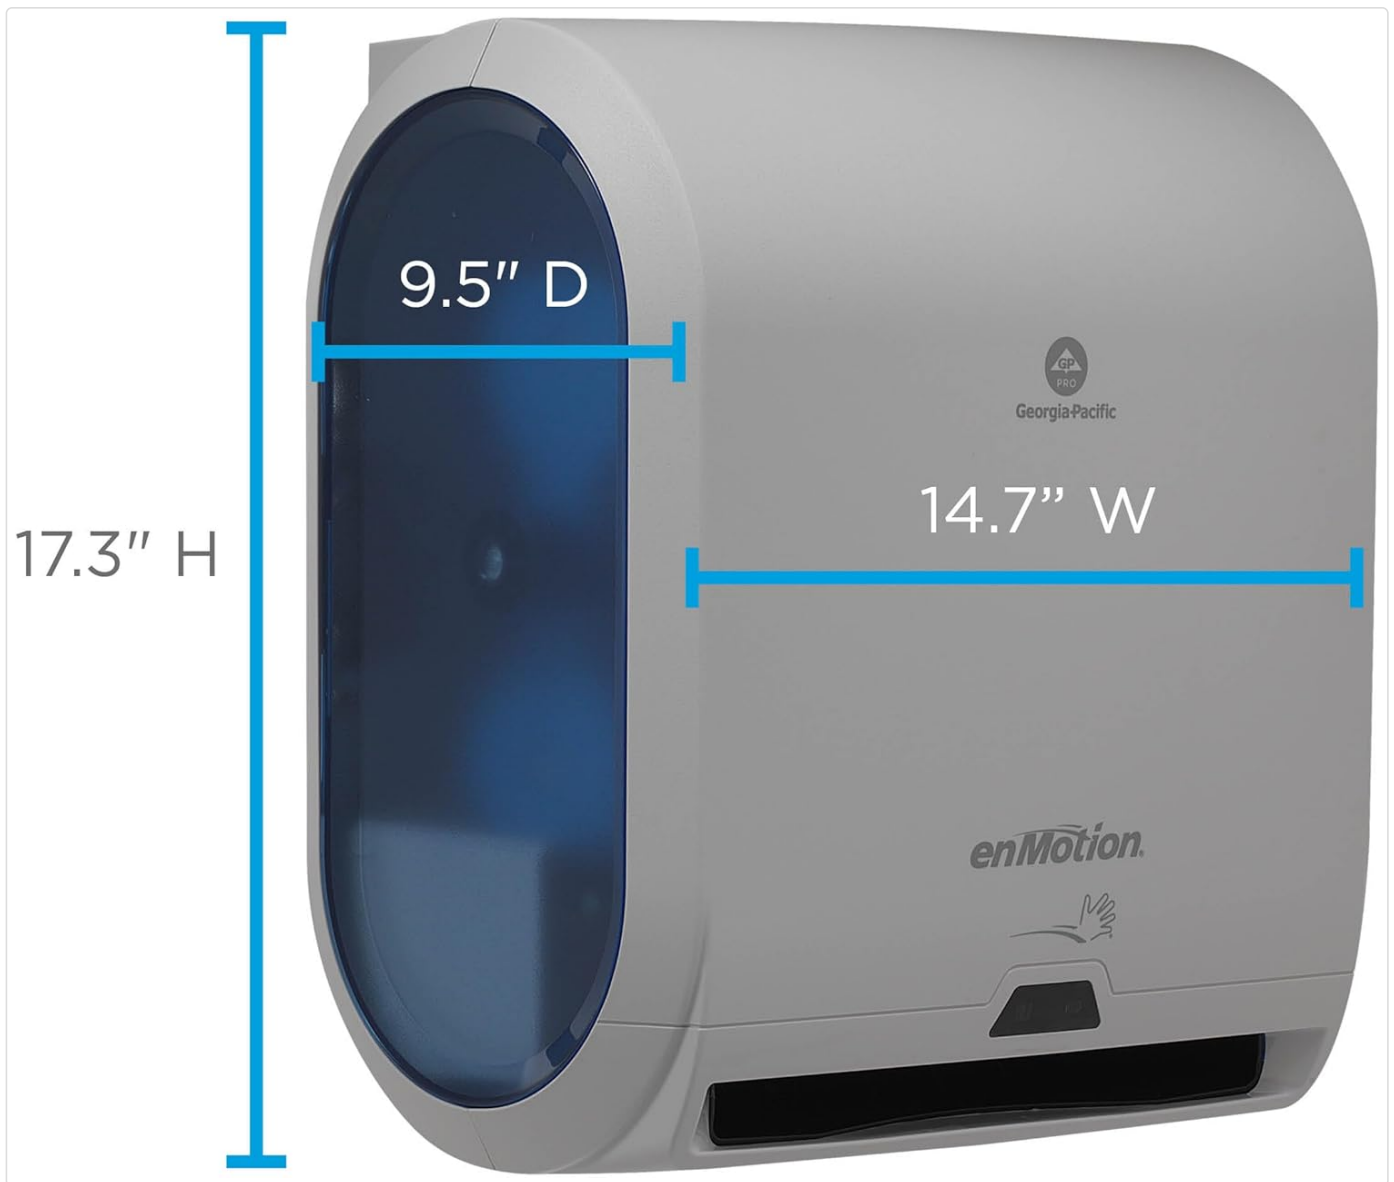


Figure 7: Dispenser dimensions for planning installation.

7. WARRANTY INFORMATION

This product is typically available via a one-time, lifetime lease agreement with GP PRO or an authorized distributor. For specific warranty terms and conditions, please refer to your lease agreement or contact Georgia-Pacific directly.

8. CUSTOMER SUPPORT

For further assistance, technical support, or to inquire about replacement parts, please contact Georgia-Pacific customer service or your authorized distributor.

Georgia-Pacific Contact Information:

Please visit the official Georgia-Pacific website or refer to the contact details provided in your product packaging or lease agreement for the most current support information.

