

[manuals.plus](#) /› [Awei](#) /› [Awei Y280 Wireless Bluetooth Speaker User Manual](#)**Awei Y280**

## Awei Y280 Wireless Bluetooth Speaker User Manual

Model: Y280

### 1. INTRODUCTION AND OVERVIEW

Thank you for choosing the Awei Y280 Wireless Bluetooth Speaker. This portable speaker is designed to deliver high-fidelity stereo sound for outdoor environments, featuring IPX4 water resistance and a robust battery life. Please read this manual carefully before using the product to ensure proper operation and to maximize its performance.



Image 1.1: Front view of the Awei Y280 Wireless Bluetooth Speaker, showcasing its compact and rugged design with a mesh grille and side grip.

## 2. PACKAGE CONTENTS

Please check the package for the following items:

- Awei Y280 Wireless Bluetooth Speaker
- USB Charging Cable
- Audio Cable (AUX)

- User Manual



Image 2.1: The Awei Y280 speaker shown within its retail packaging, highlighting key features like IPX4 water resistance, 12 hours music playback, and 4000mAh power bank capability.

### 3. PRODUCT FEATURES

- **Wireless Bluetooth Connectivity:** Seamless pairing with smartphones and other Bluetooth-enabled devices.
- **Portable Design:** Compact and lightweight for easy transport.
- **IPX4 Water Resistance:** Protected against splashing water from any direction, suitable for outdoor use.
- **High-Fidelity Stereo Sound:** Delivers clear and powerful audio.
- **Long Battery Life:** Up to 12 hours of music playback on a single charge.
- **Built-in Microphone:** For hands-free calling.
- **Power Bank Functionality:** 4000mAh battery can also charge other devices.



Image 3.1: Side view of the Awei Y280 speaker, showing the textured grip and robust casing, emphasizing its outdoor readiness.

## 4. SETUP

---

### 4.1. Charging the Speaker

1. Connect the small end of the USB charging cable to the charging port on the speaker.
2. Connect the large end of the USB charging cable to a USB power adapter (not included) or a computer's USB port.
3. The charging indicator light will illuminate. It takes approximately 4 hours for a full charge.
4. Once fully charged, the indicator light will change or turn off (refer to specific light behavior in product details if available).

### 4.2. Bluetooth Pairing

1. Ensure the speaker is fully charged.
2. Press and hold the Power button to turn on the speaker. A voice prompt or indicator light will confirm it's in pairing mode.
3. On your smartphone or Bluetooth device, enable Bluetooth and search for available devices.
4. Select "Awei Y280" from the list of devices.
5. Once paired, the speaker will provide an audible confirmation, and the indicator light will change.
6. The speaker will automatically reconnect to the last paired device when powered on, if the device is within range.

## 5. OPERATING INSTRUCTIONS

---

### 5.1. Power On/Off

- **Power On:** Press and hold the Power button for 2-3 seconds.
- **Power Off:** Press and hold the Power button for 2-3 seconds.

### 5.2. Music Playback

- **Play/Pause:** Press the Play/Pause button once.
- **Next Track:** Press the 'Next' button (usually '+') once.
- **Previous Track:** Press the 'Previous' button (usually '-') once.
- **Volume Up:** Press and hold the '+' button.
- **Volume Down:** Press and hold the '-' button.

### 5.3. Call Handling

- **Answer Call:** Press the Play/Pause button once when a call comes in.
- **End Call:** Press the Play/Pause button once during a call.
- **Reject Call:** Press and hold the Play/Pause button for 2 seconds when a call comes in.
- **Redial Last Number:** Double-press the Play/Pause button.

### 5.4. AUX Mode

Connect an audio cable from your device's headphone jack to the AUX-in port on the speaker. The speaker will automatically switch to AUX mode.

## 6. MAINTENANCE

- Clean the speaker with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- Avoid exposing the speaker to extreme temperatures, direct sunlight, or high humidity.
- Do not disassemble or attempt to repair the speaker yourself, as this will void the warranty.
- Store the speaker in a cool, dry place when not in use for extended periods.

## 7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Speaker does not turn on.	Low battery.	Charge the speaker fully.
Cannot pair with Bluetooth device.	Speaker not in pairing mode; device Bluetooth off; too far from speaker.	Ensure speaker is in pairing mode; turn on Bluetooth on device; move device closer (within 10m).
No sound.	Volume too low; incorrect input mode; device not playing.	Increase volume; check if in Bluetooth or AUX mode; ensure music is playing on connected device.
Sound distortion.	Volume too high; low battery; interference.	Reduce volume; charge speaker; move away from other electronic devices.

## 8. SPECIFICATIONS

Feature	Detail
Model Number	Awei Y280
Connectivity Technology	Bluetooth V4.2, Wireless
Speaker Type	Portable Bluetooth Speaker
Output Power	8W * 2 (Total 16W)
Frequency Response	20 KHz
Battery Capacity	4000 mAh / 3.7V
Charging Time	Approx. 4 hours
Music Playback Time	Approx. 12 hours
Transmission Distance	Up to 10 meters (33 feet)
Water Resistance Rating	IPX4
Built-in Microphone	Yes

Feature	Detail
Product Dimensions	10 x 20 x 10 cm
Product Weight	0.7 kg
Cabinet Material	Plastic

## 9. WARRANTY AND SUPPORT

Awei products are manufactured to the highest quality standards. For warranty information and customer support, please refer to the warranty card included in your product packaging or visit the official Awei website. Keep your purchase receipt as proof of purchase for any warranty claims.

For technical assistance or inquiries, please contact Awei customer service through their official channels.

© 2023 Awei. All rights reserved.