



Manuals.plus /

- › Rebel /
- › Rebel Tubes Masturbator 05930870000 Instruction Manual

Rebel 05930870000

Rebel Tubes Masturbator Instruction Manual

Model: 05930870000

INTRODUCTION

Thank you for choosing the Rebel Tubes Masturbator. This instruction manual provides essential information for the safe and effective use, maintenance, and care of your device. Please read it thoroughly before first use and retain it for future reference.

This device features three primary functions: vibration, heating, and an up-and-down movement. Each function can be controlled independently using the three dedicated buttons. It offers 7 vibration modes and 7 speeds for the up-and-down movement. The heating function reaches approximately 40 °C. The internal sleeve is integrated and not removable. The device is rechargeable via a USB cable.



Image 1: Front view of the Rebel Tubes Masturbator, showcasing its black body and grey opening.



Image 2: The Rebel Tubes Masturbator held in a hand, illustrating its ergonomic design and approximate size.

SETUP AND FIRST USE

1. **Unpacking:** Carefully remove the device from its packaging. Inspect for any signs of damage.
2. **Initial Charge:** Before first use, fully charge the device. Connect the provided USB charging cable to the charging port on the device and to a standard USB power adapter (not included). The charging indicator light will illuminate during charging and typically turn off or change color when fully charged.
3. **Cleaning:** Prior to initial use, and after every subsequent use, clean the device thoroughly. Refer to the "Maintenance and Cleaning" section for detailed instructions.
4. **Lubrication:** For optimal comfort and experience, apply a generous amount of water-based lubricant to the entrance and internal sleeve of the device.

OPERATING INSTRUCTIONS

The Rebel Tubes Masturbator features three control buttons for its various functions.



Image 3: Top view of the device, highlighting the three control buttons for power, vibration, and movement/heat.

- **Power Button (Central):** Press and hold for approximately 2-3 seconds to turn the device ON or OFF.
- **Vibration Button (Left):** Short press to activate and cycle through 7 distinct vibration modes.
- **Movement/Heat Button (Right):** Short press to activate and cycle through 7 speeds of the internal up-and-down movement. Hold this button for approximately 2-3 seconds to activate or deactivate the heating function (target temperature approximately 40 °C).

Experiment with the different modes and speeds to find your preferred settings. The device is designed to provide a stimulating experience.

MAINTENANCE AND CLEANING

Proper cleaning and maintenance are crucial for hygiene and extending the lifespan of your device.

1. **After Each Use:** Immediately after each use, clean the device.

2. **Cleaning Procedure:**

- Rinse the internal sleeve thoroughly with warm water.
- Apply a toy cleaner or mild antibacterial soap to the internal and external surfaces.
- Gently scrub with a soft cloth or sponge.
- Rinse thoroughly with warm water until all soap residue is removed.
- Ensure no water enters the charging port or control panel. While the device is rechargeable, specific waterproofing levels are not provided, so avoid submerging it. The internal sleeve is integrated and not removable for cleaning.

3. **Drying:** Pat dry with a lint-free cloth. Allow the device to air dry completely before storage.

4. **Storage:** Store the device in a clean, dry, and dust-free environment, away from direct sunlight and extreme temperatures. Keep it separate from other toys made of different materials to prevent material degradation.

5. **Charging:** Recharge the device when the battery is low. Do not overcharge.

Important: Do not use cleaners containing alcohol, petroleum, or acetone, as these can damage the silicone and polyurethane materials. Only use water-based lubricants with this device.

TROUBLESHOOTING

If you encounter any issues with your Rebel Tubes Masturbator, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Device does not turn ON.	Low or no battery charge.	Charge the device fully using the provided USB cable.
Vibration/Movement is weak or inconsistent.	Low battery.	Recharge the device.
Heating function not working.	Not activated correctly or low battery.	Ensure the Movement/Heat button is held to activate heat. Recharge the device.
Device makes unusual noises.	Normal operation sounds or internal component issue.	Some operational sounds are normal. If the noise is excessive or new, discontinue use and contact customer support.

If the problem persists after attempting these solutions, please contact Rebel customer support for further assistance.

SPECIFICATIONS

Product Name	Rebel Tubes Masturbator
Model Number	05930870000
Brand	Rebel
ASIN	B07JMZYJWH
Functions	Vibration (7 modes), Up-and-down movement (7 speeds), Heating (approx. 40 °C)
Material	Silicone with Polyurethane coating, ABS
Color	Black
Overall Dimensions (L x W x H)	23.5 x 10.5 x 10.5 cm
Weight	474 grams
Insertion Depth	7 cm
Internal Diameter	4 cm
Power Source	Rechargeable via USB cable
Country of Origin	China

WARRANTY AND SUPPORT

For information regarding warranty coverage, returns, or technical support, please refer to the retailer's policy where the product was purchased or visit the official Rebel brand website. Keep your proof of purchase for any warranty claims.

Contact Information: Please refer to the product packaging or the retailer's website for specific customer service contact details.

