

STANLEY J5CPD

STANLEY J5CPD Digital Portable Power Station Jump Starter

Model: J5CPD

1. PRODUCT OVERVIEW

The STANLEY J5CPD Digital Portable Power Station is a versatile device designed to provide reliable power for various automotive and outdoor needs. It functions as a jump starter for vehicles, an air compressor for inflating tires and other inflatables, and a portable power source with USB ports and an AC outlet.

Key features include:

- **1200 Peak Amps / 600 Instant Starting Amps:** Capable of jump-starting cars, trucks, SUVs, motorcycles, boats, RVs, ATVs, and tractors.
- **120 PSI Air Compressor:** For inflating vehicle tires, sports equipment, and other inflatables.
- **500W Power Inverter:** Provides a 120V AC outlet for powering small appliances.
- **3.1A USB Ports:** For charging electronic devices like smartphones and tablets.
- **High-Powered LED Light:** Rotates 270 degrees for illumination in dark conditions.
- **Integrated Charging Cube:** Allows charging with a standard household extension cord (sold separately).
- **Reverse Polarity Alarm:** Alerts the user to improper battery connections.



Figure 1.1: Front view of the STANLEY J5CPD Portable Power Station, showcasing the digital display, control panel, USB ports, AC outlet, and LED light.

1.1 What's in the Box

The STANLEY J5CPD package typically includes the following components:

- STANLEY J5CPD Jump Starter Unit
- Heavy-Duty Metal Powder Coated Clamps (attached)
- Nozzle Adapter for Air Compressor
- User Manual (this document)



Figure 1.2: Illustration of the typical contents included with the STANLEY J5CPD unit.

2. IMPORTANT SAFETY INFORMATION

Read and understand all safety warnings and instructions before operating this product. Failure to follow the warnings and instructions may result in electric shock, fire, and/or serious injury.

- **Eye Protection:** Always wear eye protection when working with batteries.
- **Ventilation:** Ensure adequate ventilation when charging or jump-starting.
- **Flammable Materials:** Keep sparks, flames, and smoking materials away from the battery.
- **Children and Pets:** Keep the unit out of reach of children and pets.
- **Reverse Polarity:** The unit features a reverse polarity alarm. If the alarm sounds, immediately disconnect the clamps and re-connect them correctly.
- **Charging:** Only charge the unit using the integrated AC charging cube. Do not use other chargers.
- **Proposition 65 Warning:** This product contains chemicals known to the State of California to cause cancer and birth defects or other reproductive harm. For more information, visit www.P65Warnings.ca.gov.

WHAT'S IN THE BOX



Figure 2.1: Visual representation of key safety features, including the reverse polarity warning.

3. SETUP AND INITIAL CHARGING

Before first use, or if the unit has not been used for an extended period, it is essential to fully charge the STANLEY J5CPD.

3.1 Initial Charging Procedure

1. Locate the integrated AC charging cube on the unit.

2. Plug a standard household extension cord (not included) into the AC charging cube.
3. Plug the other end of the extension cord into a standard 120V AC wall outlet.
4. The digital display will indicate charging status. Allow the unit to charge until the display shows a full charge. This may take several hours.
5. Once fully charged, disconnect the extension cord from the wall outlet and then from the unit.

Note: It is recommended to recharge the unit every 30 days when not in use to maintain optimal battery health.

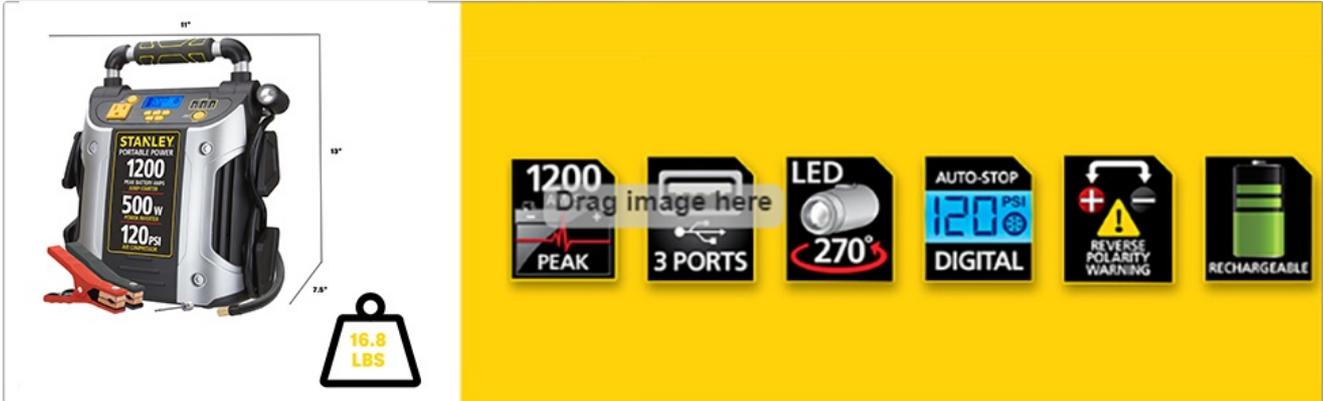


Figure 3.1: Component diagram of the STANLEY J5CPD, showing the location of the 120V AC outlet and USB ports.

4. OPERATING INSTRUCTIONS

4.1 Jump Starting a Vehicle

The STANLEY J5CPD can jump-start most 12V vehicle batteries.

1. Ensure the vehicle's ignition is off and all accessories are turned off.
2. Connect the **RED** positive (+) clamp to the positive (+) terminal of the vehicle's battery.
3. Connect the **BLACK** negative (-) clamp to a non-moving metal part of the vehicle's chassis, away from the battery and fuel lines. Do not connect to the negative battery terminal directly unless specified by vehicle manufacturer.
4. Turn on the "Jump Start" switch on the STANLEY J5CPD unit.
5. Attempt to start the vehicle. If it does not start within 5-8 seconds, wait at least 3 minutes before trying again.
6. Once the vehicle starts, turn off the "Jump Start" switch on the unit.
7. Disconnect the **BLACK** negative (-) clamp first, then the **RED** positive (+) clamp.
8. Store the clamps securely on the unit.



Figure 4.1: The STANLEY J5CPD in action, demonstrating its jump start capability.

4.2 Using the Air Compressor

The 120 PSI air compressor is suitable for inflating vehicle tires, bicycle tires, sports balls, and other small inflatables.

1. Attach the appropriate nozzle adapter (if needed) to the air hose.
2. Securely connect the air hose to the item you wish to inflate.
3. Turn on the "Air Compressor" switch on the unit.
4. Monitor the pressure on the digital display. The compressor will automatically shut off when the preset pressure is reached (if applicable) or when the maximum pressure is achieved.
5. Once the desired pressure is reached, turn off the "Air Compressor" switch.
6. Disconnect the air hose from the item.



Figure 4.2: The STANLEY J5CPD positioned next to a car tire, illustrating its use as an air compressor.

4.3 Using the USB Ports and AC Outlet

- **USB Ports:** Plug your USB charging cable into one of the 3.1A USB ports on the unit. Connect your electronic device to the other end of the cable. The unit will begin charging your device.
- **AC Outlet:** To use the 500W power inverter, ensure the inverter switch is turned ON. Plug your 120V AC appliance

(within the 500W limit) into the AC outlet.

4.4 Using the LED Light

The high-powered LED light can be rotated 270 degrees to illuminate your work area. Simply press the light button to turn it on or off.

5. MAINTENANCE

Proper maintenance ensures the longevity and optimal performance of your STANLEY J5CPD.

- **Recharging:** Recharge the unit after each use, especially after jump-starting a vehicle or using the air compressor extensively. For optimal battery life, recharge the unit every 30 days when not in use.
- **Cleaning:** Clean the unit with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- **Storage:** Store the unit in a cool, dry place, away from direct sunlight and extreme temperatures. Ensure the clamps are securely stored in their designated holders to prevent accidental contact.
- **Battery Replacement:** The internal battery is not user-replaceable. Contact qualified service personnel for battery service.

6. TROUBLESHOOTING

This section addresses common issues you might encounter with your STANLEY J5CPD.

Problem	Possible Cause	Solution
Unit does not turn on / No display	Battery is fully discharged.	Charge the unit fully using the integrated AC charging cube.
Vehicle does not jump start	Improper clamp connection; Vehicle battery severely discharged; Unit battery low.	Check clamp connections (ensure correct polarity); Charge the unit fully; Allow vehicle battery to charge for a few minutes before attempting to start again.
Reverse polarity alarm sounds	Clamps connected incorrectly (positive to negative, or vice versa).	Immediately disconnect clamps and reconnect them correctly: RED to positive (+), BLACK to chassis ground.
Air compressor not inflating / low pressure	Hose not securely connected; Unit battery low; Leak in hose/adaptor.	Ensure hose and adaptor are tightly connected; Charge the unit fully; Check hose for damage.
USB ports not charging devices	Unit battery low; Device requires more power than available.	Charge the unit fully; Ensure device is compatible with 3.1A USB output.

7. TECHNICAL SPECIFICATIONS

Detailed specifications for the STANLEY J5CPD Portable Power Station.

Feature	Specification
Model Number	J5CPD

Feature	Specification
Peak Amperage	1200 Amps
Instant Starting Amperage	600 Amps
Power Inverter Output	500 Watts (120V AC)
Air Compressor Pressure	120 PSI
USB Port Output	3.1 Amps (total)
Product Dimensions (D x W x H)	11" x 7.5" x 13"
Item Weight	10.01 pounds
Battery Type	Lithium Ion (1 required)
Certifications	ETL, ECE Listed



Figure 7.1: Dimensions of the STANLEY J5CPD unit.

8. WARRANTY AND SUPPORT

The STANLEY J5CPD Digital Portable Power Station includes a limited 1-year manufacturer's warranty from the date of

purchase. This warranty covers defects in materials and workmanship under normal use.

The warranty does not cover:

- Damage caused by misuse, abuse, or neglect.
- Damage caused by unauthorized repairs or modifications.
- Normal wear and tear.
- Damage from accidents or natural disasters.

For warranty claims or technical support, please contact STANLEY customer service. Keep your proof of purchase for warranty validation.

For the most up-to-date contact information, please refer to the official STANLEY website or the product packaging.

© 2024 STANLEY. All rights reserved. This manual is for informational purposes only.

Related Documents


	<p>Stanley J5CPD Portable Power Station Instruction Manual</p> <p>Learn how to operate and maintain your Stanley J5CPD Portable Power Station with this comprehensive instruction manual. Covers jump-starting, power inversion, air compression, safety, and troubleshooting.</p>
	<p>Stanley SS4LS Lithium Jump-Starter / Power Bank Instruction Manual</p> <p>This manual provides instructions for the Stanley SS4LS Lithium Jump-Starter / Power Bank, including safety guidelines, operating instructions, charging procedures, troubleshooting, and specifications. It covers how to jump-start a vehicle, charge the unit, and use the USB ports and LED light.</p>
	<p>STANLEY 1000A Jump-Starter with Compressor - Instruction Manual</p> <p>This instruction manual provides comprehensive details on operating, charging, and maintaining the STANLEY 1000A Jump-Starter with Compressor. It includes safety guidelines, troubleshooting tips, and warranty information.</p>
	<p>Stanley 1800A Lithium Jump Starter & USB Power Bank Instruction Manual (LJ18FC)</p> <p>Comprehensive instruction manual for the Stanley 1800A Lithium Jump Starter and USB Power Bank (Model LJ18FC). Covers safety guidelines, operating procedures for jump-starting vehicles and using USB power ports, charging instructions, troubleshooting tips, care and maintenance, warranty information, and technical specifications.</p>



[Stanley J5CPD Portable Power Station Instruction Manual](#)

Learn how to operate and maintain your Stanley J5CPD Portable Power Station with this comprehensive instruction manual. Covers jump-starting, power inversion, air compression, safety, and troubleshooting.

lang:es score:27 filesize: 1.71 M page_count: 11 document date: 2021-06-08

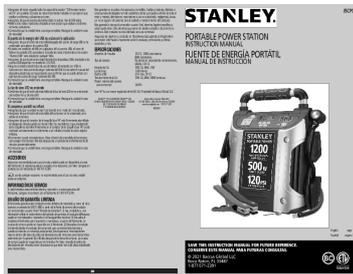

[\[pdf\] User Manual](#)

User Manual STANLEY J5CPD Digital Portable Power Station Jump Starter 1200 Peak 600 Instant Amps 500W Inverter 120 PSI Air Compressor 3 1A USB Ports Battery Clamps Automotive A1RtV7Xr5zL m media amazon images | |||

Asegrese de haber seguido todos los pasos de la seccion 120 tomacorrientes de CA con cuidado. Cons ... ESTE MANUAL PARA FUTURAS CONSULTAS. 2021 Baccus Global LLC Boca Raton, FL 33487 1-877-571-2391 1 **J5CPD** English page 5 Español pagina 12 BC FEATURES / CARACTERSTICAS 1 2 3 4 5 6 7 8 9 10 11 1...

lang:es score:23 filesize: 1.41 M page_count: 10 document date: 2021-09-10