

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Real Flame](#) /

› [Real Flame Beau 59" Landscape Electric Fireplace with Mantel - Instruction Manual](#)

Real Flame 8080E-DW

Real Flame Beau 59" Landscape Electric Fireplace with Mantel - Instruction Manual

Model: 8080E-DW

INTRODUCTION

This manual provides essential instructions for the safe assembly, operation, and maintenance of your Real Flame Beau 59" Landscape Electric Fireplace with Mantel. Please read all instructions carefully before use and retain this manual for future reference.

IMPORTANT SAFETY INFORMATION

- Do not place a television directly on top of the mantel. The mantel supports up to 30 lbs.
- Ensure the fireplace is plugged into a standard three-prong outlet.
- Keep combustible materials at least 3 feet (0.9 meters) away from the front of the fireplace.
- This appliance is equipped with an automatic safety shut-off feature to prevent overheating.
- An anti-topple safety device is included and must be installed to prevent accidental tipping.



Image: The Real Flame Beau Electric Fireplace shown with a television mounted above it, demonstrating the recommended setup where the TV is not placed directly on the mantel.

SETUP AND ASSEMBLY

Assembly of the Real Flame Beau Electric Fireplace is required. It is recommended that two adults perform the assembly. The unit ships in two boxes.

1. Unpacking and Inspection

1. Carefully remove all components from the packaging.
2. Inspect all parts for any damage. Contact customer support immediately if any damage is found.
3. Ensure all hardware and components listed in the packing list are present.


2. Assembly Steps

1. Lay out all pieces and hardware in the intended assembly area.

2. Follow the detailed assembly instructions provided in the separate assembly guide (not included in this manual). An Allen wrench is typically the only tool necessary for mantel assembly.
3. Once the mantel is assembled, carefully slide the electric firebox insert into the designated opening from the rear.
4. Secure the firebox with the provided wood screws. A drill and screwdriver may be required for this step.

3. Placement and Power Connection

1. Place the assembled fireplace on a flat, stable surface.
2. Ensure the unit is positioned near a standard three-prong electrical outlet. The power cord is 6 feet long with a lay-flat plug.
3. Install the anti-topple safety device as per the assembly guide to secure the unit to a wall stud.

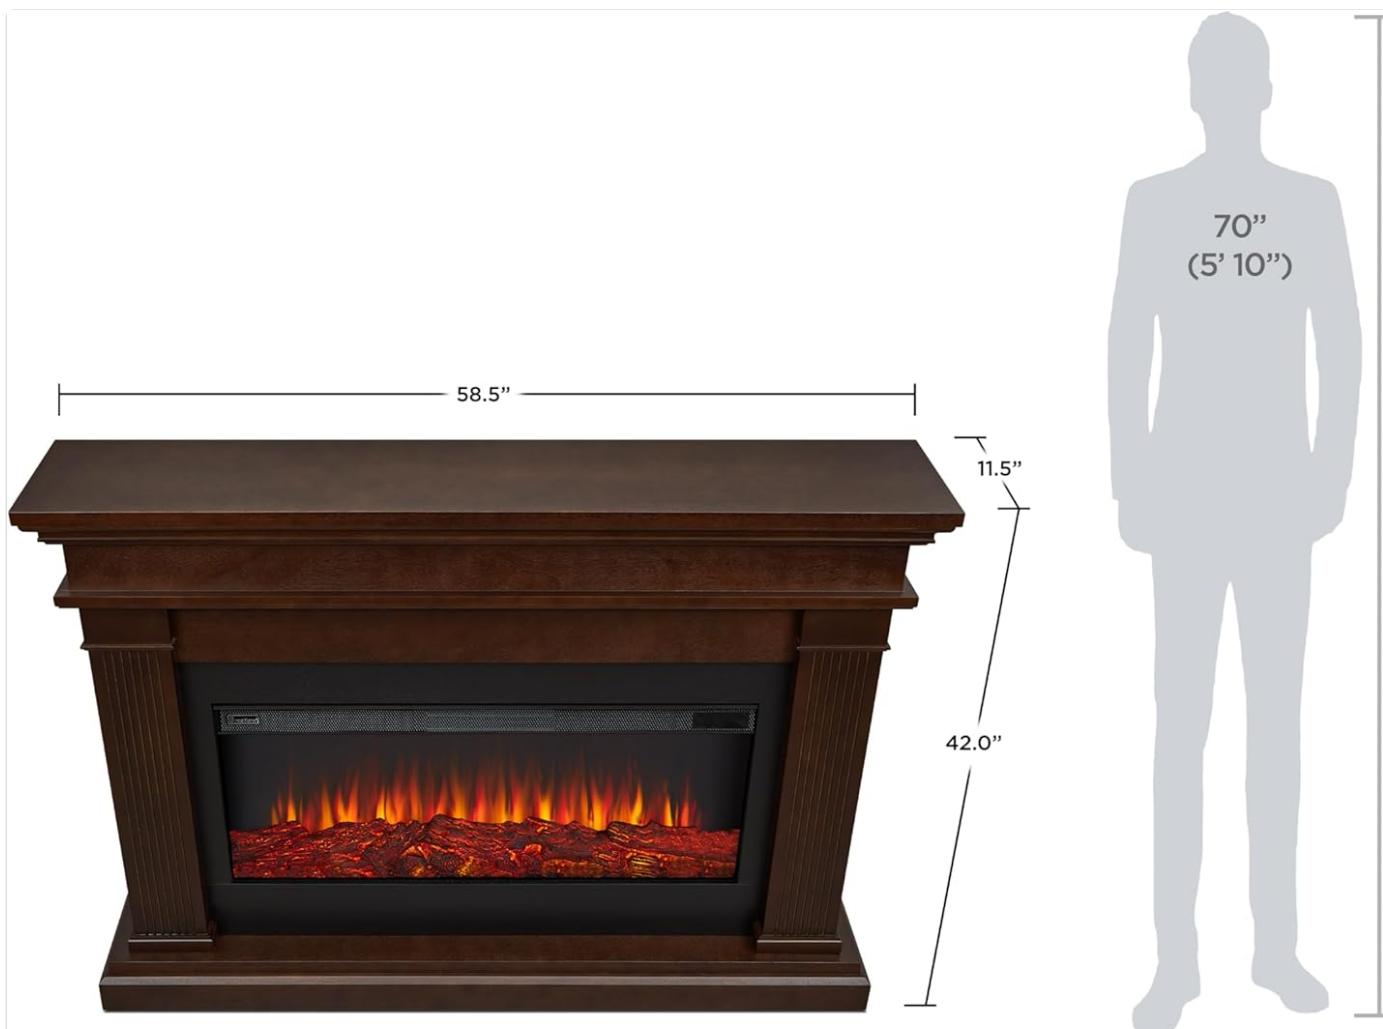

Assembled
Weight



Number of
Boxes Shipped



Assembly
Required

Image: A diagram illustrating the dimensions (58.5" W x 11.5" D x 42" H) and assembled weight (123 lbs) of the Real Flame Beau Electric Fireplace, along with icons indicating it ships in 2 boxes and requires assembly.

OPERATING INSTRUCTIONS

The Real Flame Beau Electric Fireplace can be operated using the touch controls on the unit or the included remote control.

1. Power On/Off

- Press the power button on the control panel or remote to turn the unit on or off.

2. Flame Effect Adjustment

The fireplace features realistic flames with six color options and five brightness levels.

- Use the flame color button to cycle through the six available flame colors.
- Use the flame brightness buttons to adjust the intensity of the flame effect.

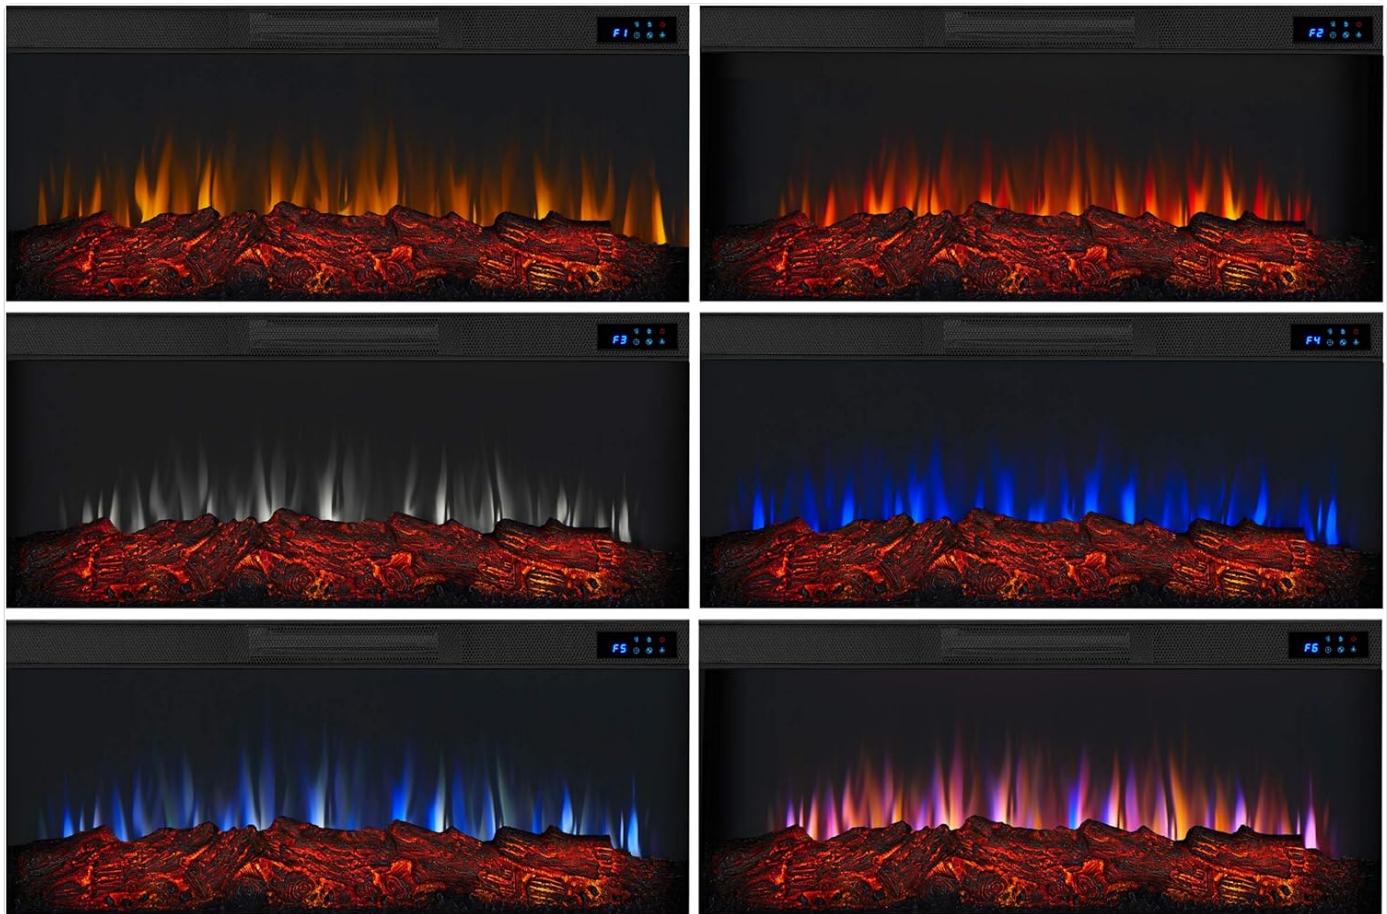


Image: A collage of six images demonstrating the various flame color options available on the Real Flame electric fireplace, including shades of orange, red, white, blue, and a multi-color setting.

3. Heater Function

The replaceable electric fireplace heater insert provides supplemental heat for areas up to 1,000 sq ft with a heat output of 5100 BTUs.

- Press the heater button to activate the heating function.
- Use the thermostat controls to set your desired room temperature. The heater will cycle on and off to maintain this temperature.
- To enjoy the ambiance without heat, turn off the heater function while keeping the flame effect active.

4. Timer Function

- Activate the timer function to set the fireplace to automatically turn off after a specified duration. Refer to the full operating manual for specific timer settings.

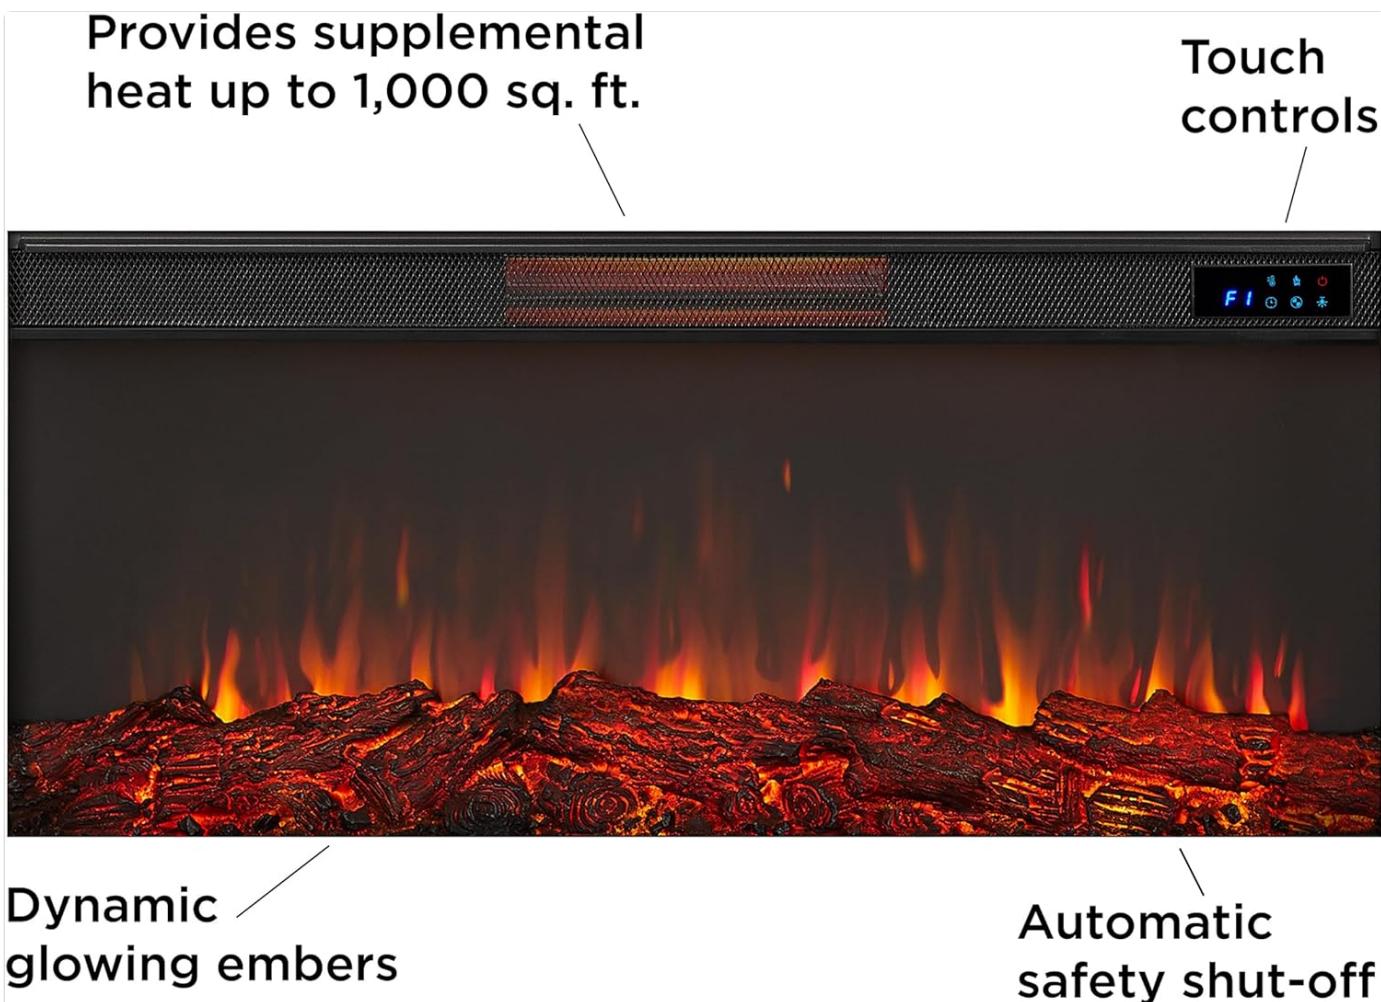


Image: A detailed view of the electric fireplace insert, highlighting the touch controls, the dynamic glowing embers, and the heat output vent, indicating supplemental heat up to 1,000 sq ft and automatic safety shut-off.

MAINTENANCE

Regular maintenance ensures the longevity and optimal performance of your electric fireplace.

- **Cleaning:** Wipe the exterior surfaces of the mantel and firebox with a clean, soft cloth. Do not use abrasive cleaners or solvents.
- **Dust Removal:** Periodically dust the air intake and exhaust vents to ensure proper airflow for the heater.
- **Bulb Replacement:** If the flame effect diminishes, refer to the full operating manual for instructions on replacing the light bulbs within the firebox.

TROUBLESHOOTING

If you encounter issues with your fireplace, consult the following common troubleshooting steps:

- **No Power:** Ensure the power cord is securely plugged into a working three-prong outlet. Check the circuit breaker.
- **Heater Not Working:** Verify the thermostat setting is higher than the current room temperature. Check if the automatic safety shut-off has been activated due to overheating; unplug the unit for 15 minutes and try again.
- **Flame Effect Not Visible:** Check if the unit is powered on and if the flame brightness is set to a visible level.
- **Remote Control Not Responding:** Replace the batteries in the remote control. Ensure there are no obstructions

between the remote and the fireplace sensor.

For further assistance, contact Real Flame customer support.

SPECIFICATIONS

| | |
|----------------------------|---|
| Brand | Real Flame |
| Model Name | Beau 59" Landscape Electric Fireplace with Mantel |
| Item Model Number | 8080E-DW |
| Product Dimensions | 11.5"D x 58.5"W x 42"H |
| Item Weight | 123 Pounds |
| Material | Engineered Wood |
| Finish Type | Painted |
| Color | Dark Walnut |
| Power Source | Corded Electric |
| Heat Output | 5100 British Thermal Units (BTUs) |
| Heating Coverage | Up to 1,000 sq ft |
| Installation Type | Freestanding |
| Ventilation Type | Vent Free |
| Included Components | Mantel, Remote Control, Electric Firebox |
| Assembly Required | Yes |
| Certifications | CSA, FCC Certified |




CSA Certified



FCC Certified



One-Year
Limited Warranty

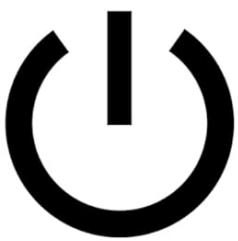

Automatic
Safety Shut-Off

Image: Icons indicating the product is CSA Certified, FCC Certified, comes with a 1 Year Limited Warranty, and features Automatic Safety Shut-Off.

WARRANTY AND SUPPORT



Warranty Information

The Real Flame Beau Electric Fireplace comes with a **90-day warranty**. Additionally, a **one-year limited warranty** is provided for the product. Please retain your proof of purchase for warranty claims.

Customer Support

For technical assistance, replacement parts, or warranty inquiries, please contact Real Flame customer support. Refer to the contact information provided with your product packaging or visit the official Real Flame website.

Related Documents - 8080E-DW
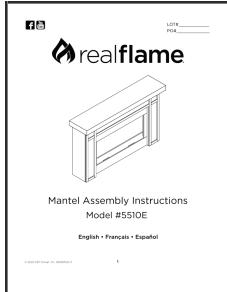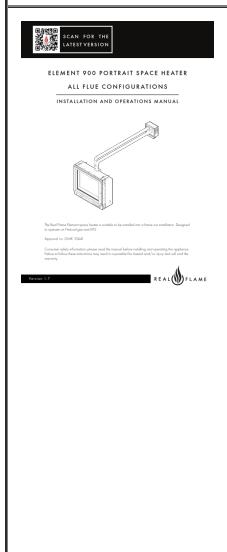
| | |
|--|--|
|  <p>realflame</p> <p>Mantel Assembly Instructions Model #5510E</p> <p>English • Français • Español</p> | <p>Real Flame 5510E Mantel Assembly Instructions</p> <p>Assembly instructions for the Real Flame 5510E mantel, including parts list, hardware details, and step-by-step assembly guidance. Also covers anti-topple device installation, warranty, and return policy.</p> |
|  <p>realflame</p> <p>Mantel Assembly Instructions Model #8700</p> <p>English • Français • Español</p> | <p>Real Flame Model 8700 Mantel Assembly Instructions</p> <p>Step-by-step assembly instructions for the Real Flame Model 8700 Chestnut Barnwood Mantel. Includes a detailed parts list, hardware guide, assembly steps, instructions for installing the 5099 Electric Firebox, and warranty and return policy information.</p> |
|  <p>realflame</p> <p>Mantel Assembly Instructions Model #5110E</p> <p>English • Français • Español</p> | <p>Real Flame 5110E Mantel Assembly Instructions</p> <p>Step-by-step assembly guide for the Real Flame 5110E Mantel, detailing parts, hardware, assembly steps, warranty, and return policy. This guide provides clear instructions for assembling your Real Flame fireplace mantel.</p> |
|  <p>realflame</p> <p>Mantel Assembly Instructions Model #13058E</p> <p>English • Français • Español</p> | <p>Real Flame 13058E Morris Mantel Assembly Instructions</p> <p>Step-by-step assembly instructions for the Real Flame 13058E Morris Mantel, including a detailed parts list, hardware guide, assembly steps, and warranty information.</p> |
|  <p>SCAN FOR THE ELECTRONIC MANUAL</p> <p>ELEMENT 900 PORTRAIT SPACE HEATER ALL FLUE CONFIGURATIONS INSTALLATION AND OPERATIONS MANUAL</p> <p>The Real Flame Electronic manual is available in the format you choose on our website. Be sure to select the correct model number for your purchase.</p> <p>Report to: 0340-0001</p> <p>Caution: When installing please read the manual before installing and operating the product. Failure to do so may result in personal injury or property damage.</p> <p>realflame</p> | <p>Element 900 Portrait Space Heater Installation and Operations Manual</p> <p>Comprehensive installation and operations manual for the Real Flame Element 900 Portrait Space Heater, covering all flue configurations. Includes user instructions, safety notices, specifications, and WiFi control setup.</p> |



[Vektor 1100 & 900 Space Heater Installation and Operations Manual](#)

Comprehensive installation and operations manual for the Real Flame Vektor 1100 and 900 space heaters. Covers all flue configurations, user instructions, remote control operation, WiFi connectivity, and safety precautions.