

[Manuals.plus](#) /

› [GoWISE](#) /

› GoWISE USA GW22921-S 8-in-1 Digital Air Fryer User Manual

GoWISE GW22921-S

GoWISE USA GW22921-S 8-in-1 Digital Air Fryer User Manual

Model: GW22921-S

INTRODUCTION

This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your GoWISE USA GW22921-S 8-in-1 Digital Air Fryer. Designed for healthier cooking, this appliance utilizes rapid air technology to fry, bake, grill, and roast with minimal to no oil. Please read this manual thoroughly before first use and retain it for future reference.



Figure 1: GoWISE USA GW22921-S 8-in-1 Digital Air Fryer, showcasing its sleek black design and digital touch screen.

SETUP AND FIRST USE

1. **Unpacking:** Carefully remove the air fryer and all accessories from the packaging. Retain packaging for storage or future transport.
2. **Initial Cleaning:** Before first use, wipe the exterior of the air fryer with a damp cloth. Remove the frying basket and crisper tray, wash them thoroughly with warm, soapy water, and rinse well. Ensure all parts are completely dry before reassembling.
3. **Placement:** Place the air fryer on a stable, heat-resistant surface, away from walls or other appliances to allow for proper air circulation. Ensure there is adequate space around the unit.

4. **Power Connection:** Plug the power cord into a grounded electrical outlet.

OPERATING INSTRUCTIONS

Control Panel and Digital Display

The GoWISE USA GW22921-S features a modern touch screen design for easy operation. The digital display shows time and temperature settings, along with various preset icons.



Figure 2: Close-up of the digital touch screen control panel with various cooking icons.

Cooking Process

1. **Prepare Food:** Place your ingredients into the frying basket. For best results and to prevent sticking, a light coating of oil or cooking spray can be applied to the food or the crisper tray.



Figure 3: The air fryer basket, ready to be inserted into the unit with food.

2. **Insert Basket:** Slide the frying basket firmly into the air fryer until it clicks into place.

3. **Select Setting:**

- **Preset Functions:** Choose from 8 pre-programmed cooking functions: fries/chips, pork, chicken, steak, shrimp, cake, fish, and pizza. Simply touch the corresponding icon on the digital display.
- **Manual Control:** Adjust the temperature (180°F to 400°F) and time (up to 30 minutes) using the manual controls to customize your cooking.

4. **Start Cooking:** Press the Start/Stop button to begin the cooking cycle. The unit will automatically preheat if necessary.

5. **Shake Reminder:** The air fryer includes a built-in alarm function to remind you to shake your ingredients in 5, 10, and 15-minute increments, ensuring even cooking and crispiness.

6. **Mid-Cycle Adjustment:** You can change your program mid-cycle using the Start/Stop button.

7. **Completion:** Once the timer reaches zero, the air fryer will beep, indicating that cooking is complete. Carefully pull out the basket using the handle.



Figure 4: Cooked food being removed from the air fryer basket.

8. **Serving:** Remove food from the basket. Be cautious as the basket and food will be hot.

For specific recipes and cooking times, refer to the included recipe book designed for GoWISE USA Air Fryers.

MAINTENANCE AND CLEANING

Proper maintenance ensures the longevity and optimal performance of your air fryer.

- **Cleaning the Basket and Tray:** After each use, allow the basket and crisper tray to cool completely. Wash them with warm, soapy water. While some reviews mention dishwasher safety, the manufacturer specifies it is **not dishwasher safe**. Hand washing is recommended to preserve the non-stick coating.
- **Cleaning the Interior:** Wipe the interior of the air fryer with a damp cloth. For stubborn residue, use a non-abrasive sponge with a small amount of mild detergent. Ensure the interior is dry before storage.
- **Cleaning the Exterior:** Wipe the exterior with a soft, damp cloth. Do not use abrasive cleaners or scouring pads.
- **Storage:** Ensure the air fryer is clean and dry before storing. Store it in a cool, dry place.

TROUBLESHOOTING

If you encounter issues with your GoWISE USA Air Fryer, please refer to the following common solutions:

- **Appliance Not Turning On:**
 - Check if the power cord is securely plugged into a grounded outlet.
 - Ensure the frying basket is fully inserted into the unit. The air fryer has a safety mechanism that prevents operation if the basket is not properly closed.
- **Food Not Cooked Evenly:**
 - Ensure you are not overcrowding the basket. Cook in smaller batches if necessary.
 - Shake the basket periodically during cooking, especially for items like fries or smaller pieces of food. The air fryer has a built-in reminder for this.
 - Verify that the correct temperature and time settings are selected for your food type.
- **White Smoke Emitting:**
 - This can occur if there is excess oil or grease from fatty foods dripping into the bottom pan. Clean the pan after each use.

- Ensure the crisper tray is properly seated in the basket.

- **Appliance Emits Odor:**

- A slight odor may be present during the first few uses due to manufacturing residues. This is normal and will dissipate. Ensure good ventilation.

For persistent issues or further assistance, please contact GoWISE USA customer support.

SPECIFICATIONS

Feature	Detail
Brand	GoWISE
Model Name	GW22921-S
Capacity	4.73 Liters (5-Qt)
Color	Black
Material	Plastic
Special Feature	Manual, Programmable
Recommended Uses	Bake, Roast
Item Weight	13.2 Pounds
Wattage	1500 watts
Voltage	120
Nonstick Coating	Yes
Dishwasher Safe	No
Controller Type	Touch
UPC	819687021822
Manufacturer	GoWISE USA
First Available	January 15, 2018

WARRANTY AND SUPPORT

GoWISE USA is committed to providing quality products and customer satisfaction.

- **Protection Plans:** Extended protection plans are available for purchase, including 3-Year, 4-Year, and a monthly "Complete Protect" option. Please refer to your purchase documentation for details on these plans.
- **Official User Manual:** A detailed PDF user manual is available for download. You can access it via this link:[GoWISE USA GW22921-S User Manual \(PDF\)](#).
- **Customer Service:** For any questions, concerns, or support needs not covered in this manual, please visit the official GoWISE USA website or contact their customer service department.

