

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

Manuals.plus /

› [DAM](#) /

› DAM Tekkiwear Smartwatch DMZ012BK User Manual

DAM DMZ012BK

DAM Tekkiwear Smartwatch DMZ012BK User Manual

Model: DMZ012BK

1. INTRODUCTION

This manual provides detailed instructions for the setup, operation, and maintenance of your DAM Tekkiwear Smartwatch DMZ012BK. Please read this manual thoroughly before using your device to ensure proper functionality and to maximize your user experience.



Image 1.1: The DAM Tekkiwear Smartwatch displaying time and date, with icons indicating features like Android OS, Wi-Fi, GPS, SIM card support, and pedometer.

2. PRODUCT OVERVIEW

The DAM Tekkiwear Smartwatch DMZ012BK is a versatile wearable device powered by Android 5.1, featuring a 1.3 GHz Quad Core processor. It offers a 1.39-inch OGS touchscreen display with a resolution of 360x360 pixels, integrated GPS, Wi-Fi, and support for 2G/3G networks via a SIM card. This smartwatch allows for independent calls, SMS/MMS, and access to a wide range of applications through Google Play.

- **Operating System:** Android 5.1
- **Processor:** MTK 6580 Quad Core 1.3 GHz
- **Display:** 1.39-inch OGS Touchscreen, 360x360 px resolution
- **Memory:** 1GB RAM, 16GB ROM
- **Connectivity:** Wi-Fi, Bluetooth, 2G/3G (SIM card support)
- **Features:** GPS, 3MP Camera, Music/Video Player, Alarm, Stopwatch, Calendar, Voice Recorder



Image 2.1: Front view of the DAM Tekkiwear Smartwatch, showcasing its round display with a vibrant watch face.

3. SETUP

3.1. Inserting a SIM Card

1. Locate the SIM card slot on the back of the smartwatch.
2. Carefully open the SIM card tray.
3. Insert a compatible 2G or 3G Nano-SIM card into the tray, ensuring correct orientation.
4. Close the SIM card tray securely.



Image 3.1: The rear view of the smartwatch, highlighting the SIM card slot and optical sensors for health monitoring.

3.2. Powering On/Off

- **To Power On:** Press and hold the power button (usually located on the side of the watch) until the screen illuminates.
- **To Power Off:** Press and hold the power button until a power-off menu appears. Select "Power Off" from the options.

3.3. Initial Setup

Upon first power-on or after a factory reset, you will be guided through an initial setup process:

1. **Language Selection:** Choose your preferred language.
2. **Wi-Fi Connection:** Connect to a Wi-Fi network for internet access and app downloads.
3. **Google Account:** Sign in with your Google account to access Google Play Store and synchronize data.
4. **Date and Time:** Set the correct date and time, or allow automatic synchronization via network.

4. OPERATING INSTRUCTIONS

4.1. Navigation

- **Swipe Up/Down/Left/Right:** Navigate through menus, notifications, and quick settings.

- **Tap:** Select an item or open an application.
- **Long Press:** Access context-sensitive menus or customize watch faces.
- **Power Button:** Press once to return to the home screen or wake/sleep the display.



Image 4.1: A selection of customizable watch faces available on the DAM Tekkiwear Smartwatch, demonstrating display versatility.

4.2. Communication

- **Making Calls:** Open the "Phone" app, dial a number, or select a contact to make a call directly from the smartwatch using the inserted SIM card.
- **Sending Messages:** Access the "Messages" app to compose and send SMS/MMS messages.

4.3. Applications

- **Google Play Store:** Access the Google Play Store to download and install additional applications.
- **Camera:** The integrated 3MP camera can capture photos and record HD video. Open the "Camera" app to use this feature.
- **GPS:** Utilize the built-in GPS module for navigation and location-based services. Compatible mapping applications can be downloaded from Google Play.



Image 4.2: The smartwatch screen showing a detailed GPS map, indicating its navigation capabilities.

4.4. Media Playback

- **Music Player:** Play MP3 files stored on the device or streamed via connected services.
- **Video Player:** View video files directly on the smartwatch display.

4.5. Other Functions

- **Alarm:** Set multiple alarms with customizable tones and vibrations.
- **Stopwatch:** Use the stopwatch for timing activities.
- **Calendar:** Manage your schedule and view appointments.
- **Voice Recorder:** Record audio notes and memos.
- **Image Viewer:** Browse photos stored on the device.



Image 4.3: A user wearing the smartwatch during a workout, demonstrating its "Sports Ready" functionality and fitness tracking display.

5. CONNECTIVITY

- **Bluetooth:** Connect to Bluetooth headphones, speakers, or synchronize with a smartphone for notifications and data transfer.
- **Wi-Fi:** Connect to wireless networks for internet access, app updates, and data synchronization.
- **2G/3G Networks:** With a compatible SIM card, the smartwatch can connect to cellular networks for calls, messages, and mobile data.

6. MAINTENANCE

6.1. Charging the Battery

To charge your smartwatch, connect the provided charging cable to the charging port on the device and a compatible USB power adapter. The battery indicator on the screen will show charging progress. Ensure the device is fully charged before first use.

6.2. Cleaning

Wipe the smartwatch screen and body with a soft, dry, lint-free cloth. Avoid using abrasive cleaners or

solvents that may damage the device. Do not submerge the device in water unless explicitly stated as waterproof.

6.3. Battery Care

- Avoid exposing the device to extreme temperatures.
- Do not allow the battery to fully discharge frequently.
- Use only the original or certified compatible charging accessories.

7. TROUBLESHOOTING

Problem	Possible Solution
Device does not power on.	Ensure the battery is charged. Connect to the charger for at least 30 minutes before attempting to power on again.
Cannot connect to Wi-Fi.	Check if Wi-Fi is enabled. Verify the Wi-Fi password. Restart the smartwatch and the Wi-Fi router.
SIM card not detected.	Ensure the SIM card is correctly inserted and is a compatible 2G/3G Nano-SIM. Restart the device.
Apps are slow or crashing.	Close unnecessary background applications. Clear app cache. If the issue persists, consider a factory reset (backup data first).

8. SPECIFICATIONS

Feature	Detail
Model Number	DMZ012BK
Operating System	Android 5.1
Processor	MTK 6580 Quad Core 1.3 GHz
Display	1.39-inch OGS Touchscreen, 360x360 pixels
RAM	1GB
ROM	16GB
Camera	3 Megapixels (HD video recording)
Connectivity	Wi-Fi, Bluetooth, 2G (850/900/1800/1900), 3G (850/2100/WCDMA)
GPS	Integrated GPS module
Battery	350 mAh
Material	PVC + Metal Alloy
Compatible Devices	Smartphone (Android, iOS)

9. SUPPORT

For further assistance or technical support, please refer to the manufacturer's official website or contact their customer service department. Keep your purchase receipt and model number (DMZ012BK) handy when seeking support.

Manufacturer: DAM