Manuals+

Q & A | Deep Search | Upload

manuals.plus /

- > NEDIS /
- > Nedis CRDRU2SM3BK Smart Card ID USB 2.0 Card Reader Instruction Manual

NEDIS CRDRU2SM3BK

Nedis CRDRU2SM3BK Smart Card ID USB 2.0 Card Reader Instruction Manual

Model: CRDRU2SM3BK

INTRODUCTION

This instruction manual provides essential information for the proper setup, operation, and maintenance of your Nedis CRDRU2SM3BK Smart Card ID USB 2.0 Card Reader. Please read this manual thoroughly before using the device to ensure optimal performance and safety. This device is designed for reading smart cards, commonly used for identification, secure login, and digital signatures on desktop computers.

SETUP


- 1. **Unpack the Device:** Carefully remove the Nedis CRDRU2SM3BK Smart Card Reader from its packaging. Ensure all components, including the card reader and USB cable, are present.
- 2. **Connect to Computer:** Plug the USB connector of the card reader into an available USB 2.0 port on your desktop computer. The device is designed for desktop use.
- 3. Driver Installation:
 - For most modern operating systems (Windows 10/11, macOS, Linux), the device should be recognized automatically as a Plug-and-Play device, and drivers will install without user intervention.
 - If automatic installation does not occur, or if you are using an older operating system, insert the
 provided driver CD (if included) into your computer's optical drive and follow the on-screen instructions
 to install the 'Smart Card Driver'. Alternatively, visit the official Nedis support website to download the
 latest drivers for your model.
- 4. **Verification:** After driver installation, check your computer's Device Manager (Windows) or System Information (macOS) to confirm that the 'Smart Card Reader' is listed and functioning correctly.



This image shows the Nedis CRDRU2SM3BK Smart Card Reader connected via its USB cable, alongside a driver CD labeled 'Smart Card Driver'. This illustrates the typical components included and the connection method for initial setup.

OPERATING INSTRUCTIONS

Insert Smart Card: Gently slide your smart card (e.g., ID card, bank card, digital signature card) into the
card slot of the Nedis CRDRU2SM3BK. Ensure the chip on the card faces upwards and is inserted fully
until it clicks into place or reaches the end of the slot. Refer to the arrow indicator on the device for
correct insertion direction.

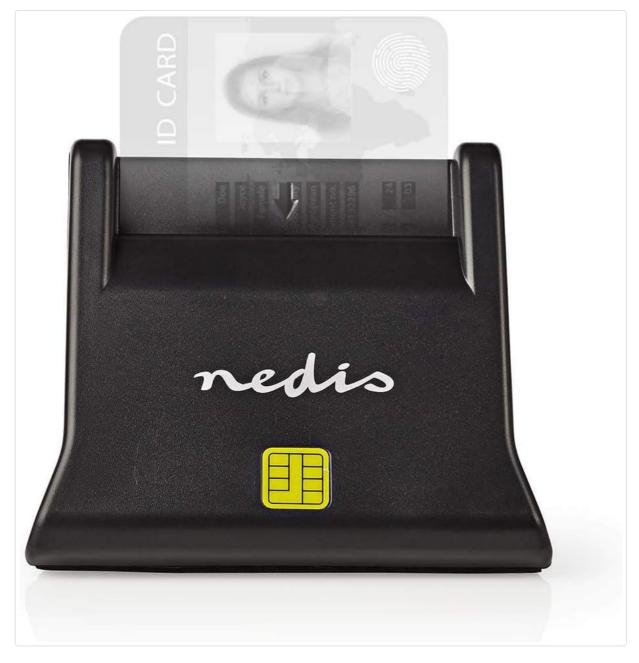

This image displays the Nedis CRDRU2SM3BK Smart Card Reader with an ID card partially inserted into its slot, demonstrating the correct orientation for card placement.

- 2. **Access Card Data:** Once the card is inserted, your computer's operating system or specific smart card applications will detect the card. You can then use compatible software to read data from the card, perform secure transactions, or authenticate your identity.
- 3. **Remove Smart Card:** When you have finished using the smart card, gently pull it out from the slot. Avoid forcing the card to prevent damage to both the card and the reader.



A clear front view of the Nedis CRDRU2SM3BK Smart Card Reader, highlighting its compact design and the smart card chip icon on its surface.

MAINTENANCE

- **Cleaning:** To clean the exterior of the card reader, use a soft, dry, lint-free cloth. Do not use liquid cleaners, aerosols, or abrasive materials, as these can damage the device.
- **Storage:** When not in use, store the card reader in a clean, dry environment, away from direct sunlight, extreme temperatures, and excessive dust.
- **Handling:** Avoid dropping the device or subjecting it to strong impacts. Do not attempt to open the casing, as this will void the warranty.

TROUBLESHOOTING

- Device Not Recognized:
 - Ensure the USB cable is securely connected to both the card reader and the computer.
 - Try connecting the card reader to a different USB port on your computer.
 - · Restart your computer.
 - Verify that the correct drivers are installed. Reinstall drivers if necessary.
- Smart Card Not Reading:

- Ensure the smart card is inserted correctly with the chip facing upwards and fully seated in the slot.
- Check if the smart card itself is clean and undamaged. Clean the card's chip with a soft, dry cloth if needed.
- Test with a different smart card if available to rule out a card issue.
- Ensure your smart card application software is running and configured correctly.

Slow Data Transfer:

- The device operates at USB 2.0 speeds (up to 480 Mbps). Ensure it is connected to a USB 2.0 or higher port for optimal performance.
- Other USB devices connected to the same hub might affect performance.

SPECIFICATIONS

Feature	Specification	
Model Number	CRDRU2SM3BK	
Brand	Nedis	
Interface	USB 2.0	
Data Transfer Rate	Up to 480 Mbps	
Compatibility	Computers (Desktop-oriented)	
Special Features	Compact design	
Dimensions (L x W x H)	6.3 cm x 8.1 cm x 7.4 cm	

WARRANTY INFORMATION

Nedis products are covered by a warranty. The specific terms and duration of the warranty may vary by region and product. Please refer to the warranty card included with your purchase or visit the official Nedis website for detailed warranty information. Keep your proof of purchase for any warranty claims.

SUPPORT

For technical assistance, driver downloads, or further product information, please visit the official Nedis support website. You can typically find contact information for customer service or a knowledge base to help resolve common issues. When contacting support, please have your product model number (CRDRU2SM3BK) and proof of purchase ready.

Related Documents - CRDRU2SM3BK



Nedis Zigbee Radiator Thermostat ZBHTR20WT Installation Guide

Step-by-step installation guide for the Nedis Zigbee Radiator Thermostat (model ZBHTR20WT). Learn how to install, set up, and connect your smart thermostat using the Nedis SmartLife app for efficient home heating control.



Nedis WIFICO20CWT Outdoor IP Camera Quick Start Guide

A quick start guide for the Nedis WIFICO20CWT Outdoor IP Camera, detailing setup, usage, safety, and maintenance in multiple languages.



Nedis ZBSM10WT Zigbee Motion Sensor Quick Start Guide

Quick start guide for the Nedis ZBSM10WT Zigbee motion sensor, covering setup, installation, and automation with the Nedis SmartLife app.

Zigbee Radiator Thermostat





Nedis Zigbee Radiator Thermostat ZBHTR20WT Safety Instructions

Safety instructions and user guide for the Nedis Zigbee Radiator Thermostat (ZBHTR20WT), covering intended use, warnings, and disposal.

nedis Bone Conduction Headphones





... ...

Nedis HPBT5400GY Bone Conduction Headphones - Quick Start Guide

Get started with Nedis HPBT5400GY Bone Conduction Headphones. Learn about wireless Bluetooth audio, internal storage, safe open-ear listening, and quick setup instructions.

Zigbee Curtain / Shutter Switch ZBCSN10RD



Nedis ZBCSN10RD Zigbee Curtain/Shutter Switch Safety Instructions & User Guide

Essential safety instructions and user guide for the Nedis ZBCSN10RD Zigbee Curtain/Shutter Switch. Learn about intended use, warnings, disposal, and compliance.