



[Manuals.plus](#) /

> [Home Basics](#) /

> Home Basics Multi-Purpose TV Tray, White Single Pack Instruction Manual

Home Basics TT45852

Home Basics Multi-Purpose TV Tray, White Single Pack Instruction Manual

Model: TT45852

1. INTRODUCTION

Thank you for choosing the Home Basics Multi-Purpose TV Tray. This manual provides essential information for the safe and effective use of your new folding tray table. Please read these instructions carefully before initial use and retain for future reference.

2. PRODUCT OVERVIEW

The Home Basics Multi-Purpose TV Tray is designed for versatility and convenience. Its folding design allows for easy storage, making it suitable for various uses in small spaces.

Key Features:

- **Multi-Purpose Design:** Suitable for eating, reading, games, or as an extra surface.
- **Folding Feature:** Allows for compact storage when not in use.
- **Durable Construction:** Features a solid MDF tabletop and sturdy tubular steel legs.
- **Compact Dimensions:** Measures approximately 19 inches (L) x 15 inches (W) x 26 inches (H).
- **Easy to Clean:** Laminate surface allows for simple wiping.



Image 2.1: The Home Basics Multi-Purpose TV Tray in its unfolded state, ready for use.

3. SAFETY INFORMATION

Please observe the following safety precautions to prevent injury or damage to the product:

- **Caution:** Keep fingers away from hinge areas when folding and unfolding the table to avoid pinching.
- Do not leave the table outdoors in harsh weather conditions, as this may cause damage to the materials.
- Ensure the table is placed on a flat, stable surface to prevent tipping.
- Do not exceed the maximum weight recommendation of 20 pounds (9.07 kg).
- This product is intended for indoor use only.

4. SETUP AND ASSEMBLY

The Home Basics Multi-Purpose TV Tray requires minimal assembly, primarily involving unfolding the legs.

Unfolding the Tray Table:

1. Carefully remove the tray table from its packaging.
2. Place the table on a flat surface with the tabletop facing down.
3. Gently pull the legs outwards until they are fully extended and locked into place. Ensure the locking mechanisms (if present) are engaged for stability.
4. Flip the table upright. Verify that all four legs are stable and the table does not wobble before placing items on it.



5. OPERATING INSTRUCTIONS

Using the Tray Table:

- Position the table as needed for your activity, such as eating, working on a laptop, or holding beverages.
- Ensure the weight of items placed on the table is evenly distributed and does not exceed the maximum weight capacity.

Folding for Storage:

1. Clear all items from the tabletop.
2. Carefully unlock the leg mechanisms (if applicable).
3. Gently push the legs inwards until they are flat against the underside of the tabletop. Exercise caution to avoid pinching fingers near hinges.
4. Store the folded table in a dry, safe place.



Image 5.1: The TV tray folded flat, illustrating its compact form for easy storage.

6. MAINTENANCE AND CARE

- **Cleaning:** Wipe the tabletop and legs with a damp cloth and mild soap. Avoid abrasive cleaners or harsh chemicals that could damage the finish.
- **Drying:** Ensure the table is completely dry after cleaning to prevent moisture damage.
- **Storage:** Store the table in a dry, indoor environment away from extreme temperatures and direct sunlight.
- **Inspection:** Periodically check all joints and hinges for tightness and stability.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Table wobbles or is unstable.	Legs not fully extended or locked; uneven surface.	Ensure legs are fully extended and locked. Move table to a flat, level surface.
Difficulty folding/unfolding.	Hinges may be stiff or obstructed.	Apply a small amount of silicone lubricant to hinges if necessary. Ensure no debris is obstructing movement.
Surface damage (scratches, stains).	Impact from sharp objects; prolonged exposure to liquids.	Use coasters and placemats. Clean spills immediately. Minor scratches may be reduced with furniture polish.

8. SPECIFICATIONS

Brand:	Home Basics
Model Number:	TT45852
Color:	White
Product Dimensions (Unfolded):	15"D x 19"W x 26"H (38.1 cm D x 48.26 cm W x 66.04 cm H)
Item Weight:	2.5 Pounds (1.13 kg)
Maximum Weight Recommendation:	20 Pounds (9.07 kg)
Material:	MDF (tabletop), Steel (frame)
Indoor/Outdoor Usage:	Indoor
Is Foldable:	Yes



Image 8.1: Dimensional diagram of the TV tray, indicating its length, width, and height.

9. WARRANTY AND SUPPORT

For any questions, concerns, or support regarding your Home Basics Multi-Purpose TV Tray, please contact the manufacturer or retailer where the product was purchased. Please have your model number (TT45852) and purchase information available when contacting support.

Manufacturer: HDS Trading Corp

While specific warranty details are not provided in this manual, standard consumer rights and return policies apply. Please refer to your purchase receipt or the retailer's website for more information on warranty coverage.

