

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [IRIS OHYAMA](#) /

› [IRIS OHYAMA Fully Automatic Washing Machine 5kg IAW-T502EN User Manual](#)

IRIS OHYAMA IAW-T502EN

IRIS OHYAMA Fully Automatic Washing Machine 5kg IAW-T502EN User Manual

Model: IAW-T502EN

1. INTRODUCTION

This manual provides essential information for the safe and efficient operation of your IRIS OHYAMA IAW-T502EN fully automatic washing machine. Please read it thoroughly before using the appliance and keep it for future reference.

2. SAFETY INFORMATION

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and injury to persons.

- Ensure the power supply voltage matches the rating label on the appliance.
- Do not operate the washing machine if the power cord or plug is damaged.
- Keep children away from the appliance during operation.
- Do not wash items that are waterproof or easily flammable.
- Always unplug the appliance before cleaning or performing maintenance.

3. PRODUCT OVERVIEW

The IRIS OHYAMA IAW-T502EN is a 5kg fully automatic washing machine designed for single-person households or small families (1-2 people). It features a room drying mode and a reservation timer for convenient laundry management.

Key Features:

- **5kg Washing Capacity:** Ideal for daily laundry needs of 1-2 individuals.
- **Room Drying Mode:** Reduces indoor drying time and helps prevent odors.
- **Reservation Timer:** Set washing completion time up to 24 hours in advance.
- **Stainless Steel Tub:** Durable, resistant to dirt, and inhibits black mold growth.
- **Child Lock:** Prevents accidental opening of the lid during operation.

Product View:

商品寸法+10cm以上の幅が必要です。

《搬入における確認項目》


※段差やコーナー箇所があり、直線ではない場合、+10cm以上の幅が必要となります。
※手すり・照明・装飾物などがある場合、そこから+10cmの幅が必要となります。

《商品の寸法》




《玄関の高さ》

商品寸法+10cm

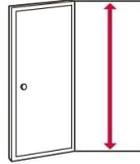


《玄関の幅》

商品寸法+10cm

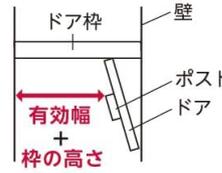


《廊下の幅》

商品寸法+10cm

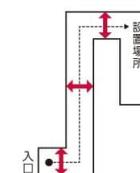


《エレベータの幅》

商品寸法+10cm

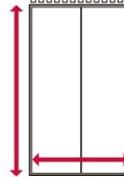


《階段の幅》

 商品寸法+10cm




《設置における確認項目》

・必要なスペースは商品によって異なるため、詳細はメーカーページなどでご確認ください。
・洗濯機の設置時にはドアを開閉するため上部のスペース確保が必要となります。

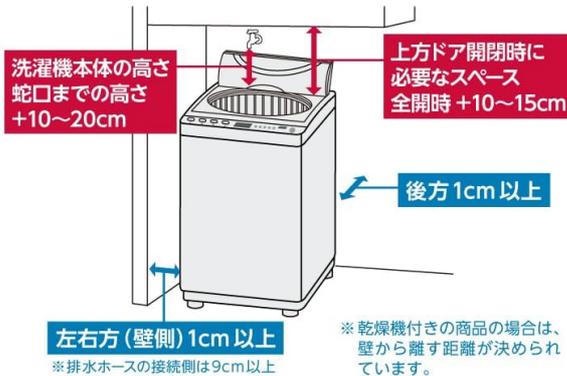

防水パンの有無と内側サイズをチェック

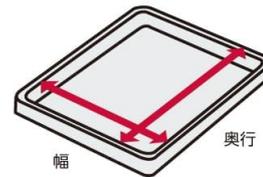

※排水エルボ・足台の有無と排水口位置によって、
追加費用がかかることがあります。

Image: Front view of the IRIS OHYAMA IAW-T502EN washing machine.

4. SETUP

Proper installation is crucial for the performance and safety of your washing machine. Please ensure sufficient space and correct connections.

Installation Space Requirements:

- Ensure a width of at least 10cm more than the product width for entry points (e.g., entrance, elevator).
- For installation, allow 10-20cm clearance above the washing machine height for the faucet.
- Maintain at least 1cm clearance on the left/right sides (wall side) and 1cm clearance at the rear for the drain hose.
- If installing in a washing machine pan, check the inner dimensions of the pan.



Image: Diagrams illustrating required clearances for installation and transport.

Connecting the Water Supply and Drain:

- Connect the provided water supply hose to the faucet and the washing machine's water inlet. Ensure a secure, leak-free connection.
- Position the drain hose to allow for proper water drainage. The machine's feet facilitate easy routing of the drain hose without needing an additional stand.



5. OPERATING INSTRUCTIONS

Familiarize yourself with the control panel and various washing modes for optimal results.

Washing Modes:

**豊富なモードで
いつものお洗濯～おしゃれ着・毛布も**

標準 すすぎ回数2回の 標準コース。	つけおき つけ置き後に 標準コースで洗濯します。
すすぎ1回 すすぎ回数を減らし 節水します。	お急ぎ 短時間で洗濯します。
 ドライ   1.5kgまでの セーターなどを やさしく洗います。	 毛布   2kgまでの毛布が お家で手軽に 洗濯できます。

Image: Overview of available washing courses on the control panel.

- **Standard:** The default course with two rinse cycles.
- **Soak:** Performs a standard wash cycle after a pre-soak period.
- **1 Rinse:** Uses one shower rinse and one tub rinse to conserve water.
- **Quick:** For washing clothes in a shorter duration.
- **Dry:** Gently washes delicate items such as sweaters (up to 1.5kg).
- **Blanket:** Allows for easy washing of blankets and towel blankets at home (up to 2kg).

Room Drying Mode:

This mode helps to reduce the moisture content in clothes, shortening indoor drying time and combating unpleasant odors.

- After a 6-minute spin cycle, the washing and spin-drying tub rotates for approximately 60 minutes to

facilitate drying.

- Note: This is not a hot air drying function.

部屋干しモード



**洗濯後60分間、衣類の水分を良く飛ばし、
乾燥時間を短縮！
乾きにくい季節や、部屋干しの嫌なニオイ対策に！**

Image: Visual representation of the room drying mode in action.

Reservation Timer:

Set the desired washing completion time in 1-hour increments, up to 24 hours in advance.

- Press the 'Reservation' button and use the arrow keys to adjust the desired completion time.
- The display will show the remaining time until completion.

洗濯完了時間を予約 (1時間単位・最大24時間)

洗濯終了時間をセット



洗濯完了までの時間も表示!



夜にセットすれば…



朝には洗濯完了!

Image: Display showing the reservation timer function, setting washing completion time.

Child Lock:

To activate the child lock, press the 'Wash' and 'Rinse' buttons simultaneously. This prevents the lid from opening during operation, enhancing safety.

6. MAINTENANCE

Regular maintenance ensures the longevity and hygiene of your washing machine.

Stainless Steel Tub Care:

The washing machine features a durable stainless steel tub that is resistant to dirt and helps prevent black mold. To maintain cleanliness, utilize the dedicated tub cleaning and drying courses.

- **Tub Cleaning Course:** Use this course periodically to clean the inside of the tub.
- **Tub Drying Course:** After washing, run this course to dry the tub and prevent mold growth.

清潔



洗濯槽のお手入れ機能付き

槽洗浄

槽乾燥

Image: Close-up of the stainless steel tub and controls for tub cleaning and drying.

General Cleaning:

- Wipe the exterior of the machine with a soft, damp cloth. Do not use abrasive cleaners.
- Clean the lint filter regularly to ensure efficient operation.

7. TROUBLESHOOTING

If you encounter any issues, please refer to the following common troubleshooting tips before contacting customer support.

- **Machine does not start:** Check if the power plug is securely inserted and if the water supply is open. Ensure the lid is properly closed.
- **Water does not drain:** Verify that the drain hose is not kinked or blocked. Check if the drain filter is clean.
- **Excessive vibration/noise:** Ensure the machine is level and all transit bolts (if any) have been removed. Distribute the laundry evenly in the tub.
- **Clothes not drying sufficiently in Room Drying Mode:** This mode is not a hot air dryer. Ensure the room is well-ventilated for best results.

8. SPECIFICATIONS

Specification	Detail
Model Number	IAW-T502EN
Brand Name	IRIS OHYAMA
Washing Capacity	5 kg
Product Dimensions (D x W x H)	52.5 x 55.5 x 92 cm
Product Weight	Approx. 31 kg
Power Supply	AC100V 50/60Hz
Power Consumption (50Hz/60Hz)	245W / 300W
Standard Water Usage	120 Liters
Operating Noise (Washing)	Approx. 36 dB
Operating Noise (Spin-drying)	Approx. 51 dB
Door Position	Top
Dryer Type	Electric (not hot air)
Control Panel Type	Push Button
Accessories	Water supply hose (approx. 82cm / with joint)

9. WARRANTY AND SUPPORT

Your IRIS OHYAMA IAW-T502EN washing machine comes with a manufacturer's 1-year warranty from the date of purchase. Please retain your proof of purchase for warranty claims.

Warranty Coverage:

The warranty covers defects in materials and workmanship under normal use. It does not cover damage caused by misuse, accident, unauthorized repairs, or normal wear and tear.

Customer Support:

For technical assistance, troubleshooting beyond this manual, or warranty service, please contact IRIS OHYAMA customer support. Refer to the contact information provided with your product packaging or on the official IRIS OHYAMA website.