

Arebos AR-HE-GK5NW

Arebos 8700W 5-Zone Ceramic Hob with Sensor Touch Control

Model: AR-HE-GK5NW | Brand: Arebos

1. INTRODUCTION

This manual provides essential information for the safe and efficient operation, installation, and maintenance of your Arebos 8700W 5-Zone Ceramic Hob, model AR-HE-GK5NW. Please read these instructions thoroughly before using the appliance and retain them for future reference. Proper use ensures optimal performance and longevity of your ceramic hob.

2. SAFETY INSTRUCTIONS

Your safety is paramount. Please observe the following safety guidelines:

- Electrical Connection:** Ensure the hob is connected to a suitable power supply by a qualified electrician. The appliance operates at 230 Volts and requires 8700 Watts.
- Overheat Protection:** The hob is equipped with an overheat protection system that automatically shuts off the appliance if temperatures become excessively high.
- Residual Heat Indicator:** After use, cooking zones will display a residual heat indicator (e.g., 'H') to warn that the surface is still hot. Avoid touching hot surfaces.
- Child Safety Lock:** Activate the child safety lock to prevent accidental operation by children.
- Ventilation:** Ensure adequate ventilation around the appliance as specified in the installation instructions.
- Cookware:** Use only suitable cookware made of iron, stainless steel, or alloy. Ensure pots and pans cover the cooking zones appropriately.
- Cleaning:** Always switch off the hob and allow it to cool before cleaning. Do not use abrasive cleaners or sharp objects that could damage the ceramic surface.
- Supervision:** Never leave the hob unattended during operation, especially when cooking with oil or fat.



Image: Overview of the hob's safety and convenience features.

3. PRODUCT FEATURES

The Arebos Ceramic Hob offers advanced features for a versatile cooking experience:

- **5 Cooking Zones:** The hob features five radiant cooking zones with varying power outputs and sizes to accommodate different cookware.
- **8700W Total Power:** High power output for rapid heating and efficient cooking.
- **Slide-Touch Control:** Intuitive touch controls allow for precise adjustment of power levels (1 to 9) by sliding your finger across the control panel.
- **Integrated Timer:** A 1-99 minute timer can be set for individual cooking zones, providing convenience and preventing overcooking.
- **Flexible Zone Configuration:** Includes a triple zone (700W + 800W + 1000W) and a roasting zone (900W + 1100W) for enhanced cooking flexibility.



Image: Detailed view of cooking zones and their power specifications.

AREBOS



SLIDE-TOUCH-CONTROL

UNE NOUVELLE TECHNOLOGIE POUR CUISINER AVEC PLUS DE PLAISIR

Image: Demonstrating the Slide-Touch control for power adjustment.

4. SETUP AND INSTALLATION

The Arebos Ceramic Hob is designed for drop-in installation. Due to its electrical nature, professional installation by a qualified technician is strongly recommended to ensure safety and compliance with local regulations.

4.1 Dimensions and Cut-out

The hob has overall dimensions of 77 cm (Length) x 52 cm (Width) x 5.8 cm (Height). Refer to the installation template provided with your product for precise cut-out dimensions for your countertop.



Image: Product dimensions for installation planning.

4.2 Electrical Connection

The appliance requires a 230 Volt power supply and has a total power rating of 8700 Watts. Ensure the electrical circuit can handle this load and is properly grounded.

5. OPERATING INSTRUCTIONS

5.1 Powering On/Off

1. To turn on: Press and hold the main power button (usually indicated by a circle or power symbol) for a few seconds.
2. To turn off: Press and hold the main power button again.

5.2 Selecting a Cooking Zone and Adjusting Power

1. After powering on, select the desired cooking zone by touching its corresponding sensor button.
2. Use the Slide-Touch control to adjust the power level from 1 (low) to 9 (high). Slide your finger along the control bar to increase or decrease heat.

5.3 Using the Timer Function

1. Select the cooking zone for which you want to set the timer.
2. Press the timer button (often indicated by a clock symbol).
3. Use the '+' and '-' buttons or the Slide-Touch control to set the desired cooking time (1-99 minutes).
4. The timer will count down and automatically switch off the selected cooking zone when finished.

5.4 Activating/Deactivating Child Safety Lock

1. To activate: With the hob off or on, press and hold the child lock button (often a key or lock symbol) for a few seconds until an indicator light appears.
2. To deactivate: Press and hold the child lock button again until the indicator light disappears.



Image: Child safety lock feature.

6. MAINTENANCE AND CLEANING

Regular cleaning and maintenance will keep your Arebos Ceramic Hob in excellent condition.

6.1 Daily Cleaning

The black ceramic glass surface is easy to clean. After each use, allow the hob to cool down completely. Wipe the surface with a damp cloth and a small amount of mild detergent. Dry thoroughly with a clean cloth.

6.2 Removing Stubborn Stains

For burnt-on food or stubborn stains, use a specialized ceramic hob cleaner and the included scraper. Hold the scraper at a shallow angle and carefully push it under the residue. Avoid using abrasive sponges, scouring pads, or harsh chemicals, as these can scratch or damage the surface.

AREBOS



Image: Cleaning the ceramic hob with a scraper and cloth.

7. TROUBLESHOOTING

If you encounter issues with your ceramic hob, refer to the following common problems and solutions:

- **Hob not turning on:** Check if the appliance is properly connected to the power supply. Ensure the child safety lock is not activated.
- **Cooking zone not heating:** Verify that the correct cooking zone is selected and the power level is set above zero. Ensure the cookware is suitable for ceramic hobs and correctly positioned.
- **Error codes:** If an error code appears on the display, consult the full product manual (if available) or contact customer support. Common codes may indicate overheating or an issue with cookware detection.
- **Automatic shut-off:** This may be due to the overheat protection system. Allow the hob to cool down before attempting to use it again.

If the problem persists after attempting these solutions, please contact Arebos customer support or a qualified service technician.

8. SPECIFICATIONS

Specification	Value
Brand	Arebos
Model Number	AR-HE-GK5NW
Product Dimensions (L x W x H)	77 x 52 x 5.8 cm
Weight	12.3 kg
Installation Type	Drop-In
Heating Element Type	Radiant
Number of Cooking Zones	5
Color	Black
Voltage	230 Volts
Power	8700 Watts
Material	Ceramic Glass
Control Type	Touch
Included Components	Hob unit only

9. WARRANTY AND SUPPORT

For warranty information, technical support, or service requests, please refer to the warranty card included with your product or visit the official Arebos website. Keep your purchase receipt as proof of purchase. For further assistance, you may contact the seller or manufacturer directly. Contact details are typically provided in the product packaging or on the manufacturer's website.