

[manuals.plus](#) /

› [Sunstech](#) /

› [Sunstech DVPmh225 Compact DVD Player Instruction Manual](#)

Sunstech DVPmh225

Sunstech DVPmh225 Compact DVD Player Instruction Manual

Model: DVPmh225

1. SAFETY INFORMATION

Please read all safety instructions carefully before using this product. Keep this manual for future reference.

- **Power Source:** Connect the player only to the specified power supply (AC 100-240V, 50/60Hz).
- **Ventilation:** Ensure adequate ventilation. Do not block ventilation openings.
- **Water and Moisture:** Do not expose the unit to rain or moisture. Do not place objects filled with liquids on the unit.
- **Heat:** Keep the unit away from heat sources such as radiators, heat registers, stoves, or other heat-producing appliances.
- **Servicing:** Do not attempt to service this product yourself. Refer all servicing to qualified service personnel.
- **Laser Safety:** This product is a Class 1 laser product. Avoid direct exposure to the laser beam.

2. PRODUCT OVERVIEW

The Sunstech DVPmh225 is a compact DVD player designed for versatile media playback. It supports various disc formats and offers multiple connectivity options for your home entertainment system.

2.1 Front Panel



Image 2.1: Front view of the Sunstech DVPmh225 DVD player, showing the disc tray, display, and control buttons.

The front panel features the disc loading tray, an LED display indicating playback status and time, and essential control buttons such as Play/Pause, Stop, and Power. A USB port is also located on the front for convenient media access.

2.2 Rear Panel



Image 2.2: Rear view of the Sunstech DVMH225 DVD player, displaying the various input and output ports.

The rear panel provides connectivity options including HDMI output for high-definition video and audio, composite video (VIDEO OUT) and stereo audio (AUDIO OUT L/R) for standard definition connections, and a SCART output for older televisions. The power input socket is also located here.

2.3 Included Accessories

- AV Cable (Composite Video and Stereo Audio)
- Remote Control
- Instruction Manual (this document)

3. SETUP

3.1 Unpacking

Carefully remove the DVD player and all accessories from the packaging. Retain the packaging materials for future transport or storage.

3.2 Connecting to a Television

Choose one of the following connection methods based on your television's available inputs.

1. HDMI Connection (Recommended for best quality):

Connect one end of an HDMI cable (not included) to the **HD OUT** port on the DVD player's rear panel and the other end to an HDMI input on your television.

2. SCART Connection:

Connect one end of a SCART cable (not included) to the **SCART OUTPUT** port on the DVD player's rear panel and the other end to a SCART input on your television.

3. AV (Composite Video & Audio) Connection:

Using the supplied AV cable, connect the yellow plug to the **VIDEO OUT** port, the white plug to the **AUDIO OUT L** port, and the red plug to the **AUDIO OUT R** port on the DVD player. Connect the other end of the cable to the corresponding inputs on your television.

3.3 Power Connection

After connecting the video and audio cables, plug the power cord into the AC power input on the rear of the DVD player, then plug the other end into a standard wall outlet.

4. OPERATING INSTRUCTIONS

4.1 Powering On/Off

- Press the **POWER** button on the front panel or the remote control to turn the player on or off.
- Ensure your television is set to the correct input source (HDMI, SCART, or AV) corresponding to your connection.

4.2 Disc Playback

1. Press the **OPEN/CLOSE** button on the front panel or remote control to open the disc tray.
2. Place a DVD or CD (DVD±R/+RW, CD/-R/-RW) onto the disc tray with the label side facing up.
3. Press the **OPEN/CLOSE** button again to close the tray. The player will automatically begin reading the disc.
4. If the disc does not start automatically, press the **PLAY** button on the remote control.

4.3 USB Media Playback

1. Insert a USB flash drive into the **USB** port on the front panel.
2. The player should automatically detect the USB device and display its contents. If not, press the **USB** button on the remote control to switch to USB mode.
3. Navigate through the folders and files using the arrow keys on the remote control.
4. Press **PLAY/ENTER** to select and play a file. Supported formats include MPEG4 (video), MP3/WMA (audio), and JPEG (image).

4.4 Basic Playback Controls

- **Play/Pause:** Press to start or pause playback.
- **Stop:** Press to stop playback.
- **Skip:** Use the **NEXT/PREV** buttons to skip to the next or previous track/chapter.
- **Fast Forward/Rewind:** Use the **FF/REW** buttons to fast forward or rewind through content.
- **Zoom:** Available for images and some video content via the remote control.
- **Slow Motion:** Available for video content via the remote control.

4.5 OSD (On-Screen Display) Menu

Press the **SETUP** button on the remote control to access the OSD menu. Here you can configure various settings such as:

- **Language:** Select OSD language, audio language, subtitle language.
- **Video Settings:** Adjust aspect ratio (16:9, 4:3), video output (PAL/NTSC).
- **Audio Settings:** Configure audio output options.
- **Parental Control:** Set ratings for disc playback (requires password).

Use the arrow keys to navigate and **ENTER** to confirm selections. Press **SETUP** again to exit the menu.

4.6 Child Lock Function

The child lock feature allows you to restrict playback of certain discs based on their rating. Access this setting through the OSD menu under "Parental Control". You will need to set a password to enable and manage this feature.

4.7 Automatic Playback

The player is designed to automatically begin playback of a disc once it is inserted and the tray is closed, provided the disc is a standard movie DVD or music CD. For data discs or discs with multiple titles, a menu may appear requiring manual selection.

5. MAINTENANCE

5.1 Cleaning the Unit

- Disconnect the power cord before cleaning.
- Use a soft, dry cloth to wipe the exterior of the player.
- Do not use liquid cleaners, abrasive cleaners, or aerosol sprays, as these may damage the finish.

5.2 Disc Care

- Handle discs by their edges to avoid fingerprints on the playing surface.
- Store discs in their cases when not in use to prevent scratches and dust accumulation.
- Clean dirty discs with a soft, lint-free cloth, wiping gently from the center outwards.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
No power	Power cord not connected or power outlet is off.	Ensure the power cord is securely plugged into the player and a live wall outlet.
No picture on TV	Incorrect TV input selected or video cable loose/faulty.	Select the correct input source on your TV (HDMI, SCART, AV). Check all video cable connections.
No sound	Audio cable loose/faulty, TV volume low, or player muted.	Check audio cable connections. Increase TV volume. Ensure player is not muted.
Disc does not play	Disc is dirty, scratched, or unsupported format.	Clean the disc. Try another disc. Ensure the disc format (DVD, CD, DVD±R/+RW, CD/-R/-RW) is supported.
USB device not recognized	USB device is not formatted correctly or contains unsupported files.	Ensure USB device is FAT32 formatted. Check if media files are supported (MPEG4, MP3, WMA, JPEG). Try another USB device.

7. SPECIFICATIONS

Brand	Sunstech
Model Name	DVPMH225
Model Number	DVPMH225BK
Dimensions (W x D x H)	17.5 x 22.5 x 3.8 cm
Weight	750 g
Supported Disc Formats	DVD, DVD±R/+RW, CD, CD/-R/-RW
Supported Video Formats	MPEG4, VCD, SVCD
Supported Audio Formats	MP3, WMA
Supported Image Formats	JPEG
Aspect Ratio	4:3, 16:9

Video System	PAL, NTSC
Video Output	HDMI, Composite Video (RCA), SCART
Audio Output	Stereo RCA, SCART, HDMI (2-channel, 192 kHz/24 bit DC)
USB Port	1 (Front Panel)
Power Supply	AC 100-240V, 50/60Hz
Special Features	Compact design, OSD languages, Zoom, Fast Search, Slow Motion, Automatic Playback, Child Lock

8. WARRANTY AND SUPPORT

This Sunstech DVPMH225 DVD Player comes with a standard manufacturer's warranty. For specific warranty terms and conditions, please refer to the warranty card included with your product or contact Sunstech customer support.

For technical assistance, troubleshooting beyond this manual, or service inquiries, please visit the official Sunstech website or contact their customer service department. Contact information can typically be found on the product packaging or the manufacturer's website.

Related Documents - DVPMH225

 DEDALOIII MP3 PLAYER —————— USER GUIDE sunstech®	<p><u>Sunstech DEDALOIII MP3 Player User Guide</u></p> <p>User guide for the Sunstech DEDALOIII MP3 Player, detailing its features, operations, system settings, and safety warnings.</p>
 sunstech® TEL205 - Mobile phone English & Spanish 	<p><u>Sunstech TEL205 Mobile Phone User Manual</u></p> <p>User manual for the Sunstech TEL205 mobile phone, covering features like dual SIM, SMS, MP3, camera, FM radio, and safety precautions.</p>
 DTB210HD2 DVB-T2 RECEIVER —————— USB (GIGABIT) sunstech®	<p><u>Sunstech DTB210HD2 DVB-T2 Receiver User Guide</u></p> <p>Comprehensive user guide for the Sunstech DTB210HD2 DVB-T2 Receiver with USB recorder. Learn about installation, channel management, recording features, multimedia playback, and specifications.</p>

 RPDS32 DIGITAL AM/FM RADIO USER GUIDE 	<p>Suntech RPDS32 Digital AM/FM Radio User Guide</p> <p>User guide for the Suntech RPDS32 Digital AM/FM Radio, covering controls, operating instructions, specifications, and important warnings.</p>
 User Manual uSUN200 	<p>Suntech uSUN200 User Manual: Comprehensive Guide to Features and Operations</p> <p>Explore the full capabilities of your Suntech uSUN200 smartphone with this detailed user manual. Learn about setup, features, connectivity, applications, and troubleshooting.</p>
 DEDALOIII MP3 PLAYER USER GUIDE 	<p>Suntech DEDALOIII MP3 Player User Guide</p> <p>User guide for the Suntech DEDALOIII MP3 Player, detailing its features, operations, system settings, and safety warnings.</p>

Documents - Sunstech – DVPMH225



[pdf] Guide

Download Interactive key distribution DVPMH225 layout all remote controls co uk en 1068053 ||

Original Power Open/Close OSD 1 2 3 Step 4 5 6 DVD/USB 7 8 9 Mute 0/10 10

Replacement Power Eject ... <https://all-remote-controls.co.uk/en/Sunstech/1068053->

96648-replacement-remote-control-for-Sunstech-DVPMH225.html DVPMH225 Page 1

/ 2 Original Play Pause Stop Video Prog Clear A-B Repeat PBC Bet

lang:nl score:35 filesize: 390 48 K page_count: 2 document date: 2024-08-15



[pdf] Accessories

DVMH225 Sunstech HDMI USB Musta Techinn eng sunstech spec DVMH225BK cache tradeinn images especificaciones |||


DVMH225 DVD Players Play DVD Audio/Video/Photo MPEG4 HDMI connection

Scart DVD player compact and practical, with HDMI and USB input so you USB can

enjoy all your multimedia content with the highest digital quality. Remote control

Features Compact DVD player. Supports: DVD/R/ RW and CD/-R...

lang:it score:31 filesize: 85.98 K page_count: 1 document date: 2018-06-25

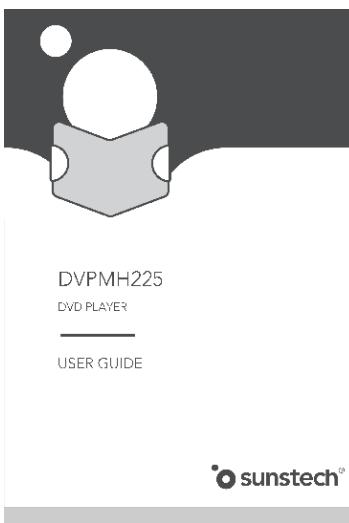

[pdf]

Sunstech DVMH225 HDMI USB Musta Techinn eng sunstech manu DVMH225BK cache tradeinn images manuales |||

, 6. , ...

lang:it score:22 filesize: 15.8 M page_count: 65 document date: 2020-11-24