

[Manuals.plus](#) /

> [ZdalaMit](#) /

> ZdalaMit AH59-02692A Remote Control User Manual for Samsung Soundbars

ZdalaMit AH59-02692A

ZdalaMit AH59-02692A Remote Control User Manual

For Samsung Soundbar Models: HW-J650, HW-J651, HW-J6500, HW-J6501, HW-J7500, HW-J7501, HW-J8500, HW-J8501, HW-J8500R, HW-J8501R, HW-J6501R, HW-J6500R, HW-J7500R, HW-J7501R, PS-WJ6500, PS-WJ6501, PS-WJ651, PS-WJ650.

INTRODUCTION

This manual provides comprehensive instructions for the ZdalaMit AH59-02692A replacement remote control. This remote is designed to be compatible with a wide range of Samsung Soundbar models, offering a direct replacement solution without the need for complex programming or pairing. Simply install the batteries, and the remote is ready for immediate use.

1. SETUP

1.1 Battery Installation

The AH59-02692A remote control requires two (2) 1.5V AAA Alkaline batteries for operation. Follow these steps to install the batteries:

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery compartment cover downwards or press the latch and lift to open.
3. Insert two AAA batteries, ensuring that the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Replace the battery compartment cover, sliding it back into place until it clicks securely.



Image: Back of the remote control with the battery cover removed, revealing the battery slots for two AAA batteries. This illustrates the correct orientation for battery insertion.

Note: Batteries are not included with the remote control. Always use new alkaline batteries for optimal performance.

2. OPERATING INSTRUCTIONS

The ZdalaMit AH59-02692A remote control is designed for immediate use with compatible Samsung Soundbar models without any programming or pairing. Once batteries are installed, point the remote directly at your soundbar to operate.

2.1 Button Functions



Image: Front view of the remote control, displaying all buttons including Power, Volume, Mute, Source, Playback, Sound Effect, Sound, Sound Control, Streaming Music, Woofer, and Anynet+.

- **Power (Red Button):** Turns the soundbar on or off.
- **Source:** Selects the input source for the soundbar (e.g., HDMI, Bluetooth, Optical).
- **Volume (+/-):** Increases or decreases the sound volume.
- **Mute:** Mutes or unmutes the sound.
- **Playback Controls (Rewind, Play/Pause, Fast Forward):** Controls media playback.
- **Sound Effect:** Cycles through available sound effects or modes.
- **Sound:** Adjusts general sound settings.
- **Sound Control:** Provides access to advanced sound adjustments.
- **Streaming Music:** Dedicated button for streaming music functions (if supported by soundbar).
- **Woofer:** Adjusts the subwoofer level.

- **Anynet+:** Activates Samsung's Anynet+ (HDMI-CEC) function for integrated control with compatible Samsung devices.

3. MAINTENANCE

3.1 Battery Replacement

Replace batteries when the remote control's response becomes sluggish or stops working. Refer to Section 1.1 for battery installation instructions. Always replace both batteries simultaneously with new AAA Alkaline batteries.

3.2 Cleaning

To clean the remote control, use a soft, dry cloth. Do not use liquid cleaners, sprays, or abrasive materials, as these can damage the remote's surface or internal components.

3.3 Storage

If the remote control will not be used for an extended period, it is recommended to remove the batteries to prevent leakage and potential damage.

4. TROUBLESHOOTING

Remote control is not responding:

- Ensure the batteries are installed correctly with the proper polarity.
- Replace old batteries with new AAA Alkaline batteries.
- Check for any obstructions between the remote control and the soundbar's infrared receiver.
- Ensure you are within the maximum operating range (approximately 33 feet) and pointing the remote directly at the soundbar.

No programming or pairing required:

This remote control is a direct replacement and does not require any programming or pairing steps. If it is not working, the issue is likely battery-related or an obstruction.

5. SPECIFICATIONS

Feature	Detail
Model Name	AH59-02692A
Brand	ZdalaMit
Compatible Devices	Samsung Soundbars (HW-J650, HW-J651, HW-J6500, HW-J6501, HW-J7500, HW-J7501, HW-J8500, HW-J8501, HW-J8500R, HW-J8501R, HW-J6501R, HW-J6500R, HW-J7500R, HW-J7501R, PS-WJ6500, PS-WJ6501, PS-WJ651, PS-WJ650 series)
Connectivity Technology	Infrared (IR)
Power Supply	2 x 1.5V AAA Alkaline Batteries
Maximum Range	Approximately 33 Feet (10 meters)

Controller Type	Button Control
Button Quantity	18
Color	Black
Item Dimensions (L x W x H)	5.36"L x 1.59"W x 0.55"H

6. WARRANTY INFORMATION

This ZdalaMit AH59-02692A remote control comes with a **1-year warranty** from the date of purchase. This warranty covers manufacturing defects under normal use. Please retain your proof of purchase for warranty claims.

7. CUSTOMER SUPPORT

Should you encounter any issues or have questions regarding your ZdalaMit AH59-02692A remote control, please do not hesitate to contact our customer support team. We are here to assist you.

For assistance, please refer to the contact information provided by your retailer or on the product packaging.