

Tristar MX-4817

Tristar MX-4817 Stand Mixer User Manual

1. INTRODUCTION

Thank you for purchasing the Tristar MX-4817 Stand Mixer. This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your appliance. Please read these instructions carefully before first use and keep them for future reference.

2. SAFETY INSTRUCTIONS

- Always ensure the appliance is unplugged before assembly, disassembly, or cleaning.
- Do not immerse the motor unit in water or any other liquid.
- Keep hands, hair, clothing, and utensils away from moving parts during operation to prevent injury.
- Supervise children closely when the appliance is in use.
- Do not operate the appliance with a damaged cord or plug, or if it has been dropped or damaged.
- Use only original accessories and attachments provided by the manufacturer.
- Place the appliance on a stable, flat, and dry surface during operation.
- Avoid touching hot surfaces if the appliance has been running for an extended period.

3. PRODUCT OVERVIEW

Components

The Tristar MX-4817 Stand Mixer includes the main motor unit, a stainless steel mixing bowl, and three essential attachments for various culinary tasks.

 


Image 1: The Tristar MX-4817 Stand Mixer, showcasing its main unit, mixing bowl, and control dial.

 


Image 2: The three primary attachments: a whisk for aerating, a dough hook for kneading, and a flat beater for mixing.

Controls

- **Speed Control Dial:** Located on the side of the unit, this dial allows you to select from 6 different speed settings.
- **Pulse Function:** A dedicated setting on the speed dial for short bursts of maximum power.
- **Head Release Lever:** Used to lift the mixer head for attaching/detaching accessories and the mixing bowl.

4. SETUP

1. **Unpack:** Carefully remove all components from the packaging.
2. **Clean:** Wash the mixing bowl and all attachments in warm, soapy water before first use. Rinse thoroughly and dry. Wipe the motor unit with a damp cloth.
3. **Position:** Place the stand mixer on a clean, dry, and stable surface.
4. **Attach Bowl:** Lift the mixer head using the release lever. Place the 5-liter stainless steel mixing bowl onto the base and turn it clockwise until it locks securely into place.

 


Image 3: Close-up view of the 5-liter stainless steel mixing bowl, designed for secure attachment to the mixer base.

5. **Attach Accessory:** Select the desired attachment (whisk, beater, or dough hook). Insert the attachment into the shaft on the mixer head and turn it slightly until it clicks into place.
6. **Lower Head:** Lower the mixer head until it locks into position.

 


Image 4: The stand mixer with its head tilted upwards, illustrating the mechanism for attaching and detaching accessories and the mixing bowl.

5. OPERATING INSTRUCTIONS

General Operation

1. Ensure the mixer is properly assembled and the head is locked down.
2. Add ingredients to the mixing bowl.
3. Plug the power cord into a suitable electrical outlet.
4. Turn the speed control dial to the desired setting (1-6). Start with a low speed and gradually increase as needed.
5. For quick bursts of power, turn the dial to the 'P' (Pulse) setting and hold briefly.
6. When finished, turn the speed dial to '0' (Off) and unplug the appliance.



Image 5: The Tristar MX-4817 Stand Mixer actively whisking ingredients in its bowl, demonstrating its planetary mixing action.

Recommended Speeds for Attachments

- **Whisk:** Ideal for whipping cream, egg whites, light batters, and meringues. Use speeds 4-6.
- **Flat Beater:** Suitable for mixing cakes, cookies, frostings, and mashed potatoes. Use speeds 2-4.
- **Dough Hook:** Designed for kneading heavy doughs like bread, pizza, and pasta. Use speeds 1-3.

6. CLEANING AND MAINTENANCE

- Always unplug the mixer before cleaning.
- Remove the mixing bowl and attachments. These parts are dishwasher safe or can be washed by hand in warm, soapy water.
- Wipe the exterior of the motor unit with a damp cloth. Do not use abrasive cleaners or immerse the motor unit in water.
- Ensure all parts are completely dry before reassembling or storing.
- Store the appliance in a dry place, away from direct sunlight.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Mixer does not start	Not plugged in; Speed dial not at '0'; Head not locked down.	Check power connection; Turn dial to '0' then select speed; Ensure mixer head is fully lowered and locked.
Attachment not mixing properly	Attachment not correctly installed; Too much or too little ingredient.	Re-install attachment; Adjust ingredient quantities according to recipe.
Loud noise during operation	Overloaded; Attachment loose.	Reduce load; Ensure attachment is securely fitted.







8. SPECIFICATIONS

Feature	Specification
Model Number	MX-4817
Power	1200 W
Bowl Capacity	5 Litres
Speed Settings	6 + Pulse Function
Dimensions (L x W x H)	31.4 x 23 x 39 cm
Weight	4.5 kg
Dishwasher Safe Parts	Bowl and Attachments

9. WARRANTY AND SUPPORT

This Tristar MX-4817 Stand Mixer comes with a 1-year warranty for spare parts availability from the date of purchase. For warranty claims, technical support, or inquiries regarding spare parts, please contact your retailer or the Tristar customer service department. Keep your proof of purchase for any warranty-related requests. For further assistance, please visit the official Tristar website or contact their customer support.

Related Documents - MX-4817

	<p>Tristar MX-4161 Multi Mixer with Bowl: Instruction Manual and User Guide</p> <p>Read the official Tristar MX-4161 multi mixer with bowl instruction manual for safe operation, usage tips, cleaning instructions, maintenance, and warranty information. Download the user guide.</p>
	<p>Tristar MX4817 Stand Mixer User Manual and Safety Instructions</p> <p>Comprehensive guide to the Tristar MX4817 stand mixer, covering safety precautions, parts description, first-time use, operation, cleaning, maintenance, and environmental disposal.</p>
	<p>Tristar MX-4822 Food Processor - User Manual and Instructions</p> <p>Comprehensive user manual for the Tristar MX-4822 food processor, covering safety instructions, parts description, usage, cleaning, and maintenance.</p>
	<p>Tristar BL-4019 Food Chopper Instruction Manual</p> <p>Comprehensive user manual for the Tristar BL-4019 food chopper, detailing safety precautions, parts identification, step-by-step usage instructions, cleaning and maintenance guidelines, and environmental disposal information.</p>
	<p>Tristar WK-1344 Stainless Steel Kettle: User Manual and Safety Instructions</p> <p>Comprehensive user manual for the Tristar WK-1344 stainless steel kettle, covering safety precautions, operating instructions, cleaning, maintenance, and environmental disposal information.</p>
	<p>Tristar VE-5971 Stand Fan Instruction Manual</p> <p>Comprehensive instruction manual for the Tristar VE-5971 stand fan, covering safety, parts description, assembly, usage, and technical specifications.</p>