

ALLIMITY 242254990301

ALLIMITY 242254990301 Replacement Remote Control for Philips TV YKF293-001

User Manual

INTRODUCTION

This manual provides instructions for the ALLIMITY 242254990301 Replacement Remote Control, designed for use with various Philips TV models. This remote control is a direct replacement and requires no programming or setup. Simply insert batteries to begin operation.

Compatible Philips TV Models include:

- 32PFL5306H/58, 32PFL6606, 32PFL6606H, 32PFL6606H/12, 32PFL6606K, 32PFL6626H, 32PFL6626K, 32PFL6636H, 32PFL6636K
- 37PFL6606, 37PFL6606H, 37PFL6606H/12, 37PFL6606K
- 40PFL5606H, 40PFL5606H/58, 40PFL6606, 40PFL6606H, 40PFL6606H/12, 40PFL6606K, 40PFL6626H, 40PFL6626H/12, 40PFL6626K, 40PFL6636, 40PFL6636H, 40PFL6636H/12
- 46PFL6606, 46PFL6606H, 46PFL6606H/12, 46PFL6606K, 46PFL6606K/02, 46PFL6626H/12, 46PFL6626K/02
- 55PFL6606H, 55PFL6606H/12, 55PFL6606K

This remote control is designed to function identically to the original Philips TV remote control YKF293-001.

SETUP

Battery Installation

The ALLIMITY 242254990301 remote control operates on standard alkaline batteries (not included). Follow these steps to install the batteries:

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery compartment cover downwards or press the latch and lift to open.
3. Insert two new alkaline batteries, ensuring the positive (+) and negative (-) terminals match the diagrams inside the compartment.

4. Replace the battery compartment cover, ensuring it clicks securely into place.

The remote control is ready for use immediately after battery installation. No additional configuration is required.





Image: Front view of the ALLIMITY 242254990301 Replacement Remote Control, displaying all buttons and ergonomic design.

OPERATING INSTRUCTIONS

This remote control provides full functionality for your compatible Philips TV. Below is a general guide to the main buttons and their functions:



Image: Top-down view of the ALLIMITY 242254990301 Replacement Remote Control, highlighting the button layout.

- **Power Button ():** Located at the top right. Press to turn the TV on or off.
- **Number Buttons (0-9):** For direct channel selection.
- **Channel Up/Down (CH+/-):** Located around the navigation pad. Press to change channels sequentially.
- **Volume Up/Down (VOL+/-):** Located below the navigation pad. Press to adjust the volume level.
- **Mute Button ():** Located near the volume buttons. Press to mute or unmute the TV sound.
- **Navigation Pad (Up, Down, Left, Right, OK):** Central circular pad. Used to navigate menus and confirm selections.
- **Source Button:** Selects input sources (HDMI, AV, etc.).
- **Menu/Options Button:** Accesses the TV's main menu or contextual options.
- **Exit Button:** Exits current menu or function.
- **Playback Controls (Play, Pause, Stop, Rewind, Fast Forward):** For controlling media playback.
- **Color Buttons (Red, Green, Yellow, Blue):** For specific functions within TV menus or interactive services.

MAINTENANCE

Cleaning

To maintain the remote control's performance and appearance:

- Wipe the surface with a soft, dry cloth.
- For stubborn dirt, lightly dampen the cloth with water or a mild, non-abrasive cleaner.
- Do not use harsh chemicals, solvents, or abrasive cleaning pads, as these can damage the remote's finish or internal components.

Battery Replacement

Replace batteries when the remote control's response becomes sluggish or stops working. Always replace both batteries at the same time with new alkaline batteries of the same type. Do not mix old and new batteries, or different types of batteries.

Storage

If the remote control will not be used for an extended period, remove the batteries to prevent leakage and potential damage to the device.

TROUBLESHOOTING

If you encounter issues with your remote control, refer to the following common solutions:

- **Remote control is not working:**
 - Ensure batteries are inserted correctly with the correct polarity (+/-).
 - Replace old batteries with new alkaline batteries.
 - Check for any obstructions between the remote control and the TV's infrared receiver.
 - Ensure you are within the effective operating range (up to 10 meters) and pointing the remote directly at the TV.

- **Some buttons are not responding:**

- This remote is designed for specific Philips TV models. Verify your TV model is listed as compatible.
- Clean the remote control, especially around the unresponsive buttons, to remove any dirt or debris.

- **TV is not responding consistently:**

- Ensure there are no strong light sources (like direct sunlight or bright fluorescent lights) interfering with the TV's IR receiver.
- Try resetting the TV by unplugging it from the power outlet for a few minutes, then plugging it back in.

SPECIFICATIONS

Model Number	242254990301
Brand	ALLIMITY
Compatible Devices	Philips Television (various models, including YKF293-001 series)
Connectivity Technology	Infrared (IR)
Number of Buttons	25
Maximum Range	10 Meters
Battery Type	Alkaline (2x AAA, not included)
Special Feature	Ergonomic design

WARRANTY AND SUPPORT

Specific warranty details for the ALLIMITY 242254990301 Replacement Remote Control are not provided in this manual. For information regarding warranty coverage, technical support, or replacement parts, please contact the manufacturer or your point of purchase directly.

When contacting support, please have your product model number (242254990301) and purchase information readily available.