

Manuals.plus /

› YING RAY /

› YING RAY Replacement Air Conditioner Remote Control User Manual

YING RAY 2018102807

YING RAY Replacement Air Conditioner Remote Control User Manual

Model: 2018102807

PRODUCT OVERVIEW

This manual provides instructions for the YING RAY Replacement Air Conditioner Remote Control, designed to operate various Soleus Air, Danby, and ARCTICAIRE air conditioner models. This remote control offers a direct replacement solution without the need for complex programming.





Image: Front view of the YING RAY Replacement Air Conditioner Remote Control.

SETUP

Battery Installation

The remote control requires two "AAA" 1.5V ordinary batteries (not included). Follow these steps to install them:

1. Locate the battery compartment cover on the back of the remote control.
2. Slide the cover downwards or in the direction indicated by an arrow to open it.
3. Insert two "AAA" batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Slide the battery compartment cover back into place until it clicks securely.

Initial Use

This replacement remote control is designed to work without any programming. Once batteries are installed, it is ready for immediate use with compatible air conditioner models.

OPERATING INSTRUCTIONS

Familiarize yourself with the buttons and display on your remote control:





Image: Close-up of the remote control display and main buttons, with temperature and heat mode highlighted.

Button Functions

- **I/O (Power) Button:** Turns the air conditioner unit On or Off.
- **MODE Button:** Cycles through operating modes such as Cool, Heat, Fan, Dry, and Auto.
- **FAN Button:** Adjusts the fan speed (e.g., Low, Medium, High, Auto).
- **SWING Button:** Controls the louver swing function for air direction.
- **SLEEP Button:** Activates or deactivates the sleep mode, which adjusts temperature for comfortable sleep and energy saving.
- **T-ON Button:** Sets the timer for the unit to turn On automatically.
- **T-OFF Button:** Sets the timer for the unit to turn Off automatically.
- **HOUR Button:** Used to set the hour for timer functions.
- **MIN Button:** Used to set the minute for timer functions.
- **+/- Buttons:** Adjusts the temperature setting or timer values.
- **-C/F- Button:** Toggles the temperature display between Fahrenheit (°F) and Celsius (°C).
- **RESET Button:** Resets the remote control settings. Use a pointed object to press this button.

Display Information

The LCD screen displays current settings and status:

- **Temperature:** Shows the set temperature in Fahrenheit or Celsius.
- **Mode Indicator:** Icons or text indicating the current operating mode (e.g., Cool, Heat, Fan).
- **Fan Speed:** Indicates the selected fan speed (e.g., HIGH, MED, LOW, AUTO).
- **Clock/Timer:** Displays the current time or timer settings.

MAINTENANCE

Battery Replacement

Replace batteries when the remote's display becomes dim or the remote becomes unresponsive. Always replace both batteries simultaneously with new "AAA" 1.5V batteries.

Cleaning

Wipe the remote control with a soft, dry cloth. Do not use liquid cleaners or abrasive materials, as they may damage the remote's surface or internal components.

Storage

If the remote control will not be used for an extended period, remove the batteries to prevent leakage and potential damage.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Remote not responding.	Dead or incorrectly installed batteries. Obstruction between remote and AC unit.	Replace batteries, ensuring correct polarity. Remove any obstructions. Ensure remote is pointed directly at the AC unit's receiver.
Display is dim or blank.	Low battery power.	Replace batteries.
Remote does not control the AC unit.	Incompatible AC model. Remote malfunction.	Verify your AC model is listed as compatible. Try resetting the remote by pressing the RESET button. If issues persist, contact support.

Compatible Models

This remote control is compatible with various Soleus Air, Danby, and ARCTICAIRE air conditioner models, including but not limited to:

- **Soleus Air:** LX-100, LX-100BL, LX-120, LX-120BL, LX-140, LX-140BL, PH5-12R-32S, PH5-13R-35S, PH5 Series, PH5-13R-35D, PH5-13R-3D, PH5-13R-32D, PH5-13R-35, PH4-10R-01, PH4-12R-01, PH4-13R-01, PH4-14R-01, PE3-09R-03, PE3-12R-03, PE1-09R-30, PA1-10R-32, PA1-12R-32, PA1-14R-32, MAC-10K, MAC-12K, HCB-P13HP-D, HCB-R135-A-ID, HCB-R135-A-OD, FE-08BA, EL-PAC-08E9, SE-PAC-08E9, KY-80E9.
- **Danby ARCTICAIRE:** APAC9036.
- **Danby Designer:** DPAC120068, DPAC10061, DPAC10030, DPAC10071, DPAC9006, DPAC9008.

Compatible with remote control list:



Image: Visual representation of the remote control and several compatible remote designs, emphasizing no programming is needed.

SPECIFICATIONS

- **Model Number:** 2018102807
- **Brand:** YING RAY
- **Compatible Devices:** Air Conditioner
- **Max Number of Supported Devices:** 1
- **Battery Type:** "AAA" 1.5V Ordinary Battery (2 required, not included)
- **Item Weight:** 1.44 ounces
- **Package Dimensions:** 7.24 x 3.35 x 1.34 inches
- **Special Feature:** Ergonomic design

SUPPORT

If you encounter any issues with your YING RAY Replacement Air Conditioner Remote Control or if it does not work for your specific air conditioner model, please contact the seller for assistance. Your satisfaction is important, and support is

available to help resolve any compatibility or functionality concerns.

