



[Manuals.plus](#) /
› [Easytry123](#) /
› Remote Control for GREE GWC12MB-D3DNA3D GWC18MC-D3DNA5F GWC18MC-D3DNA8D GWC18MC-D3DNC1D GWC18MC-D3DND3D Split Type Air Conditioner User Manual

Easytry123 Easytry3772

Remote Control User Manual

Model: Easytry3772 | Brand: Easytry123

INTRODUCTION

This manual provides essential information for the setup, operation, and maintenance of your Easytry123 replacement remote control. Please read this manual thoroughly before using the remote control to ensure proper function and longevity.

This is an infrared (IR) replacement remote control designed for specific GREE Split Type Air Conditioners, including models GWC12MB-D3DNA3D, GWC18MC-D3DNA5F, GWC18MC-D3DNA8D, GWC18MC-D3DNC1D, and GWC18MC-D3DND3D. It is important to note that this remote may not support all functions of the original remote control. Please refer to the button layout provided in this manual to confirm compatibility. Batteries and printed instructions are not included with the product; this document serves as your comprehensive guide.

PRODUCT OVERVIEW



Figure 1: Front View of the Remote Control. This image displays the front of the remote control, showing the LCD screen at the top and an array of buttons including OFF/ON, MODE, temperature adjustments (+/-), FAN, HEALTH, BLOW, HUMIDITY, TIME, TURBO, and SLEEP.



Figure 2: Back View of the Remote Control. This image shows the rear of the remote control, highlighting the battery compartment cover with an "OPEN" indicator, and two small screw holes at the top.

SETUP

1. Battery Installation

The remote control requires 2 AAA batteries (not included). Follow these steps to install them:

1. Locate the battery compartment on the back of the remote control (refer to Figure 2).
2. Slide the battery compartment cover downwards or press the "OPEN" tab and lift to remove it.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Replace the battery compartment cover by sliding it back into place until it clicks securely.

Note: Always use new batteries of the same type. Do not mix old and new batteries, or different types of batteries. Remove batteries if the remote control will not be used for an extended period.

OPERATING INSTRUCTIONS

This remote control is designed to operate specific GREE Split Type Air Conditioners. Point the remote control directly at the air conditioner's receiver when operating.

Key Functions:

Button	Function
OFF/ON	Powers the air conditioner on or off.
MODE	Cycles through operating modes (e.g., Cool, Heat, Fan, Dry, Auto).
+/-	Adjusts temperature settings.
FAN	Adjusts fan speed.
HEALTH	Activates or deactivates health-related functions (if supported by AC unit).

Button	Function
BLOW	Controls the air blow direction or function.
HUMIDITY	Manages humidity settings (if supported by AC unit).
TIME	Sets timer functions (e.g., auto on/off).
TURBO	Activates rapid cooling/heating mode.
SLEEP	Activates sleep mode for quiet and energy-efficient operation.

For detailed operation of specific modes and advanced functions, please refer to the user manual of your GREE Split Type Air Conditioner.

MAINTENANCE

Cleaning the Remote Control

- Wipe the surface of the remote control with a soft, dry cloth.
- For stubborn dirt, slightly dampen the cloth with water and a mild detergent, then wipe dry immediately.
- Do not use abrasive cleaners, alcohol, or corrosive liquids, as these may damage the surface or internal components.

Battery Care

- Replace batteries when the remote control's range decreases or it becomes unresponsive.
- Remove batteries if the remote control will not be used for an extended period (e.g., several months) to prevent leakage.
- Dispose of used batteries according to local regulations.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Remote control not working.	Batteries are dead or incorrectly installed.	Replace batteries with new ones, ensuring correct polarity (+/-).
Remote control range is poor.	Weak batteries; Obstruction between remote and AC unit.	Replace batteries. Ensure a clear line of sight to the air conditioner's receiver.
Certain functions do not work.	This is a replacement remote; the specific function may not be supported by this model.	Verify the remote's compatibility with your specific AC model's functions. Not all original functions may be replicated.

Problem	Possible Cause	Solution
LCD display is dim or blank.	Low batteries.	Replace batteries.

If the problem persists after trying these solutions, please contact customer support.

SPECIFICATIONS

Model: Easytry3772

Brand: Easytry123

Compatible Devices: GREE GWC12MB-D3DNA3D, GWC18MC-D3DNA5F, GWC18MC-D3DNA8D, GWC18MC-D3DNC1D, GWC18MC-D3DND3D Split Type Air Conditioners

Connectivity Technology: Infrared (IR)

Power Source: 2 x AAA Batteries (not included)

Special Feature: Replacement item, may not work with all functions as original.

WARRANTY AND SUPPORT

Warranty Information

This product is a replacement remote control. Specific warranty details are typically provided by the seller at the time of purchase. As per the product description, this item is sold without specific instructions or warranty information included in the package.

For return or replacement policies, please refer to the purchase platform's (e.g., Amazon.ca) return policy, which typically allows for returns within a specified period (e.g., 30 days).

Customer Support

For any issues or inquiries regarding this replacement remote control, please contact the seller directly through the platform where the purchase was made. Provide your order number and a detailed description of the issue for prompt assistance.

Seller: [Easytry123](#)