

[manuals.plus](#) /› [eufy](#) /› [eufy by Anker BoostIQ RoboVac 12 Robot Vacuum Cleaner Instruction Manual](#)**eufy 12**

eufy by Anker BoostIQ RoboVac 12 Robot Vacuum Cleaner Instruction Manual

INTRODUCTION

Welcome to the instruction manual for your new eufy by Anker BoostIQ RoboVac 12. This super-thin robotic vacuum cleaner is designed to provide efficient and quiet cleaning for your home, featuring 1500Pa strong suction and self-charging capabilities. It is suitable for cleaning hard floors and medium-pile carpets, ensuring a thorough clean without constant supervision.

Upgraded to **1500Pa** Suction

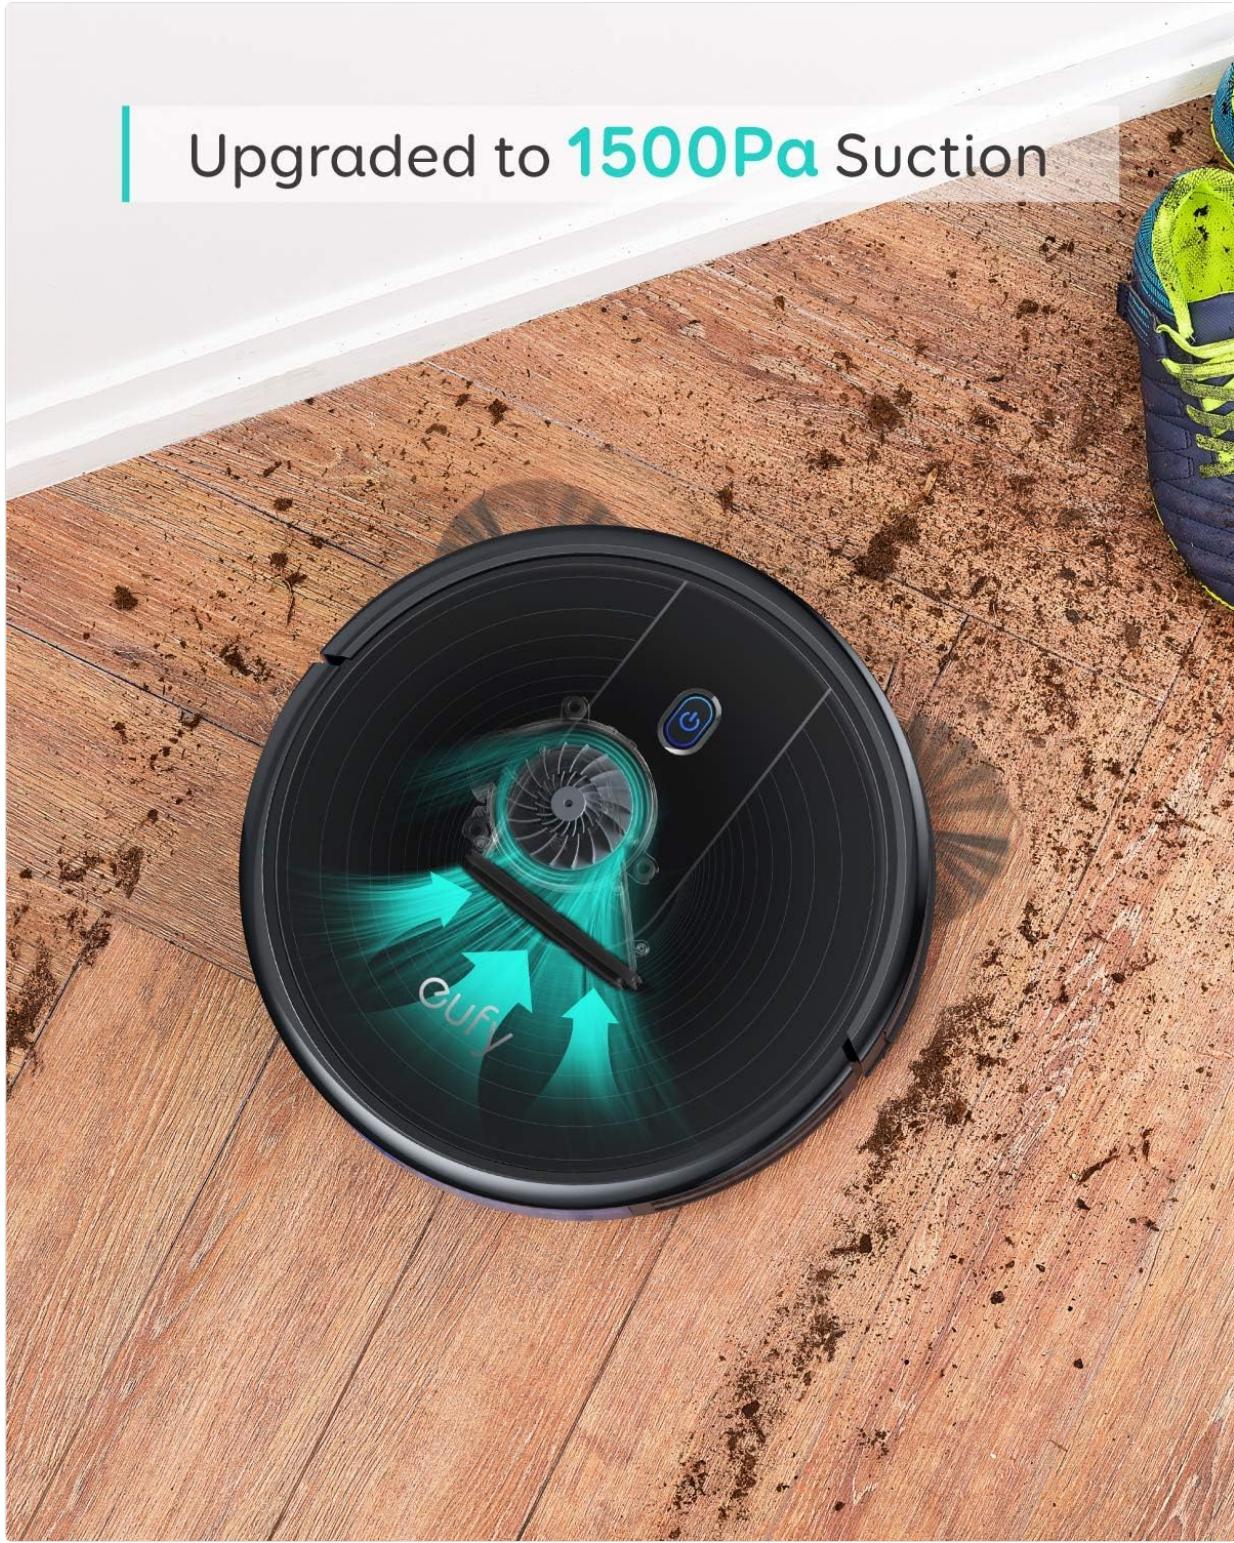


Image: The eufy BoostIQ RoboVac 12, a sleek, black circular robot vacuum, positioned on a hard floor.

WHAT'S IN THE Box

Your RoboVac 12 package includes the following components:

- RoboVac 12 Unit
- Remote control (2 AAA batteries included)
- Charging base
- AC power adapter
- Cleaning tool
- Extra set of high-performance filters

- 4 side brushes
- 5 cable ties
- Welcome guide

SETUP

Follow these steps to prepare your RoboVac 12 for its first cleaning:

1. **Unpack the RoboVac:** Carefully remove all components from the packaging.
2. **Install Side Brushes:** Attach the side brushes to the bottom of the RoboVac by pressing them onto the posts until they click into place.
3. **Position the Charging Base:** Place the charging base on a hard, level surface against a wall, ensuring there is at least 3 feet (1 meter) of clear space on both sides and 6 feet (2 meters) in front. Plug the AC power adapter into the charging base and a wall outlet.
4. **Initial Charge:** Place the RoboVac onto the charging base. Ensure the charging pins on the RoboVac align with those on the base. The indicator light on the RoboVac will show its charging status. For first-time use, fully charge the RoboVac, which may take several hours.
5. **Prepare the Cleaning Area:** Before operating, remove any cables, wires, or small objects from the floor that could entangle the RoboVac. Use the provided cable ties to organize wires.

OPERATING INSTRUCTIONS

Your RoboVac 12 offers various cleaning modes and features for optimal performance:

Cleaning Modes

Use the remote control to select your desired cleaning mode:

Multiple Cleaning Modes



Image: A hand holding the remote control for the eufy RoboVac 12, with icons representing different cleaning modes (Auto, Spot, Edge, Single Room) visible on the remote and above the vacuum.

- **Auto Cleaning:** The RoboVac automatically cleans your home, adjusting its path based on the environment.
- **Spot Cleaning:** Focuses on a specific area with concentrated cleaning.
- **Edge Cleaning:** Cleans along walls and furniture edges.
- **Single Room Cleaning:** Cleans a designated room thoroughly.

BoostIQ Technology

The RoboVac 12 features BoostIQ Technology, which automatically increases suction power within 1.5 seconds when extra vacuuming strength is needed, such as when transitioning from hard floors to carpets.

This ensures consistent and powerful cleaning across different surfaces.

BoostIQ™: Suction Auto-Optimization



Image: The eufy RoboVac 12 transitioning from a hard floor to a carpet, with an overlay illustrating BoostIQ™ suction auto-optimization for different surfaces.

Obstacle Avoidance

Equipped with infrared sensors, the RoboVac 12 effectively evades obstacles and utilizes drop-sensing technology to prevent falls from stairs or ledges. This dual anti-collision system helps ensure safe and uninterrupted cleaning.

Dual Anti-Collision Systems



Image: The eufy RoboVac 12 navigating around furniture on a hard floor, illustrating its dual anti-collision systems with circular sensor waves.

Quiet Operation

The RoboVac 12 operates at a volume no louder than an operating microwave, allowing for a quiet cleaning experience that won't disturb your daily activities.

A Quiet Clean



Image: The eufy RoboVac 12 cleaning a carpet in a living room while a man and child relax on a sofa, emphasizing its quiet operation.

Self-Charging

The RoboVac 12 automatically returns to its charging base when its battery is low, ensuring it's always ready for its next cleaning cycle.

MAINTENANCE

Regular maintenance is crucial for your RoboVac 12 to ensure optimal performance and longevity. Follow these guidelines for cleaning various components:

Cleaning the Dustbin and Filters

The RoboVac 12 features a 0.6L dustbin. It is recommended to clean the dustbin after every use and the high-performance filters weekly. Extra filters are available for purchase separately.

Cleaning the Rolling Brush and Side Brushes

Periodically check and clean the rolling brush and side brushes for tangled hair or debris. A cleaning tool is included to assist with this task. Replacement side brushes are available.

Detailed Maintenance Guide (Video)

For a visual guide on how to maintain and deep clean your RoboVac 12, please watch the video below. This user-generated content provides practical steps for disassembling, cleaning, and reassembling key components.

Your browser does not support the video tag.

Video: A user-generated guide demonstrating how to maintain and deep clean the eufy RoboVac 12, including removing and cleaning filters, brushes, and other components.

TROUBLESHOOTING

If your RoboVac 12 encounters an issue, it will emit a series of beeps and/or display a flashing or solid red indicator light. Refer to the full user manual for a comprehensive troubleshooting guide. Common issues and their solutions include:

- RoboVac is stuck:** Check for obstacles, tangled wires, or if the RoboVac is hanging in mid-air. Clear the path and reposition the unit.
- Dustbin or filter issues:** If suction is weak or the dustbin is full, empty the dustbin and clean the filters.
- Rolling brush or side brush issues:** If brushes are tangled or not rotating, clean them thoroughly and remove any obstructions.
- Low power:** Ensure the RoboVac is properly docked and charging.

SPECIFICATIONS

Brand	eufy
Model Name	eufy BoostIQ RoboVac 12
Item Model Number	AK-T2109112
Special Feature	Bagless
Color	Black
Product Dimensions	34"L x 44"W x 13"H
Filter Type	Disk
Battery Life	100 minutes
Voltage	120 Volts
Capacity	0.6 Liters
Power Source	Corded Electric

Control Method	Remote
Form Factor	Robotic
UPC	848061058222
Item Weight	5.73 pounds
Surface Recommendation	Hard Floor, Low- to Medium-Pile Carpets

WARRANTY & SUPPORT

Your eufy BoostIQ RoboVac 12 comes with a **24-month product service support**. This extended coverage ensures care-free cleaning for longer. Should you require any assistance or have questions regarding your RoboVac, please refer to the contact information provided in your welcome guide or visit the official eufy support website for friendly and helpful guidance.