

N'OVEEN HC 2000

Noveen HC 2000 Air Curtain Heater User Manual

Model: HC 2000

1. INTRODUCTION

Thank you for purchasing the Noveen HC 2000 Air Curtain Heater. This manual provides essential information for the safe and efficient operation, installation, and maintenance of your device. Please read these instructions carefully before use and retain them for future reference.

2. SAFETY INSTRUCTIONS

To reduce the risk of fire, electric shock, or injury, always follow basic safety precautions:

- Read all instructions before using this heater.
- Do not use this heater in bathrooms, laundry areas, or similar indoor locations where water may be present.
- Always plug heaters directly into a wall outlet/receptacle. Never use with an extension cord or relocatable power tap.
- Do not insert or allow foreign objects to enter any ventilation or exhaust opening as this may cause an electric shock or fire, or damage the heater.
- To prevent a possible fire, do not block air intakes or exhaust in any manner. Do not use on soft surfaces, like a bed, where openings may become blocked.
- A heater has hot and arcing or sparking parts inside. Do not use it in areas where gasoline, paint, or flammable liquids are used or stored.
- Unplug the heater when not in use.
- Keep combustible materials, such as furniture, pillows, bedding, papers, clothes, and curtains at least 3 feet (0.9 m) from the front of the heater and keep them away from the sides and rear.

3. PACKAGE CONTENTS

Please check the package for the following items:

- Noveen HC 2000 Air Curtain Heater Unit

- Remote Control
- Mounting Hardware (screws, wall anchors)
- User Manual (this document)

If any items are missing or damaged, please contact your retailer.

4. PRODUCT OVERVIEW

The Noveen HC 2000 is a wall-mounted air curtain heater designed to provide both warm and cool air. It features an intuitive LCD display and can be controlled via its integrated buttons or the included remote control.



The image shows the white Noveen HC 2000 Air Curtain Heater, designed for wall mounting. It features a front air outlet, an LCD display on the right showing '06', and indicator lights for 'HOLD', 'I', 'II', and 'FAN'. Below the display are buttons for 'MODE', 'TIMER', and 'RECEIVER'. A white remote control with buttons for 'ON/OFF', 'Mode', 'AUTO', 'LOCK', 'Delay', 'Timer', and '+'/'-' is also shown.

Unit Components:

- **Air Outlet:** Front grille for air distribution.
- **LCD Display:** Shows current settings (e.g., temperature, timer).
- **Indicator Lights:** HOLD (for holding a setting), I (Power Level 1), II (Power Level 2), FAN (fan-only mode).
- **Control Buttons:** MODE (to change operating mode), TIMER (to set timer), RECEIVER (infrared receiver for remote control).

Remote Control Functions:

- **ON/OFF:** Powers the unit on or off.
- **Mode:** Cycles through operating modes (e.g., Fan, Low Heat, High Heat).
- **AUTO:** Activates automatic operation based on ambient temperature.
- **LOCK:** Locks the unit's control panel.
- **Delay:** Sets a delay for operation.
- **Timer:** Sets the operational timer (up to 7.5 hours).
- **+/-:** Adjusts temperature or timer settings.
- **Set:** Confirms settings.

5. SETUP

The Noveen HC 2000 is designed for wall-mounted installation. Ensure the mounting location is suitable and provides adequate clearance for air circulation.

Installation Steps:

1. **Choose Location:** Select a wall location away from curtains, furniture, and other obstructions. Ensure there is a power outlet nearby.
2. **Mark Drilling Points:** Use the provided mounting template (if included) or measure the distance between the mounting holes on the back of the unit. Mark these points on the wall.
3. **Drill Holes:** Drill holes at the marked points using an appropriate drill bit for your wall type. Insert wall anchors if necessary.
4. **Secure Unit:** Mount the heater to the wall using the provided screws, ensuring it is level and securely fastened.
5. **Power Connection:** Plug the power cord into a grounded electrical outlet.

6. OPERATING INSTRUCTIONS

The heater can be operated using the control panel on the unit or the remote control.

Basic Operation:

1. **Power On/Off:** Press the **ON/OFF** button on the remote or the power button on the unit (if available) to turn the heater on or off.
2. **Mode Selection:** Press the **MODE** button to cycle through available modes: Fan (cool air), Low Heat (Power Level I), High Heat (Power Level II). The corresponding indicator light (FAN, I, or II) will illuminate.
3. **Temperature Adjustment:** In heating modes, use the **+** or **-** buttons on the remote to set your desired temperature. The LCD display will show the set temperature.

Timer Function:

The unit features a 7.5-hour timer.

1. Press the **TIMER** button on the unit or remote.
2. Use the **+** or **-** buttons to set the desired operating duration (e.g., 0.5, 1, 1.5 hours, up to 7.5 hours).
3. Press **SET** on the remote or wait a few seconds for the setting to be confirmed. The unit will automatically turn off after the set time.

Remote Control Usage:

Point the remote control directly at the RECEIVER on the unit. Ensure there are no obstructions between the remote and the unit.

7. MAINTENANCE

Regular maintenance ensures optimal performance and longevity of your heater.

Cleaning:

- Always unplug the heater from the power outlet before cleaning.
- Use a soft, damp cloth to wipe the exterior surfaces of the heater. Do not use abrasive cleaners or solvents.
- Gently vacuum the air intake and outlet grilles to remove dust and debris.
- Ensure the heater is completely dry before plugging it back in.

Storage:

When not in use for extended periods, store the heater in a cool, dry place, preferably in its original packaging, to protect it from dust and damage.

8. TROUBLESHOOTING

If you encounter issues with your Noveen HC 2000, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Heater does not turn on.	No power supply. Unit is not plugged in. Remote control batteries are dead.	Check power outlet. Ensure power cord is securely plugged in. Replace remote control batteries.
No heat output.	Unit is in Fan-only mode. Temperature setting is too low.	Press MODE to select Low Heat (I) or High Heat (II). Increase the temperature setting using the +/- buttons.
Remote control not working.	Batteries are dead or incorrectly inserted. Obstruction between remote and unit.	Replace batteries, ensuring correct polarity. Remove any objects blocking the signal path.
Unusual noise or smell.	Dust accumulation. Internal malfunction.	Unplug and clean the unit thoroughly. If problem persists, discontinue use and contact customer support.

If the problem persists after attempting these solutions, please contact customer support.

9. SPECIFICATIONS

Feature	Specification
---------	---------------

Feature	Specification
Brand	N'OVEEN
Model Name	HC 2000
Dimensions (L x W x H)	46 x 12 x 19 cm (18.1 x 4.7 x 7.5 inches)
Weight	2.1 Kilograms (4.6 lbs)
Power Source	Electric Cable
Control Method	Remote Control
Special Feature	Portable (refers to ease of relocation, unit is designed for fixed installation)
Display	LED Display
Timer	Up to 7.5 hours
Power Levels	2 (Cold / Warm selection)

10. WARRANTY AND SUPPORT

Specific warranty details and direct support contact information are not available in the provided product data. For warranty claims or technical assistance, please refer to the documentation included with your product packaging or visit the official N'OVEEN website. Keep your proof of purchase for warranty purposes.

© 2023 N'OVEEN. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question