

[Manuals.plus](#) /

› [Invicta](#) /

› Invicta Pro Diver Quartz Watch Model 28001 Instruction Manual

Invicta 28001

Invicta Pro Diver Quartz Watch Model 28001 Instruction Manual

Your guide to setup, operation, and maintenance.

INTRODUCTION

Thank you for choosing the Invicta Pro Diver Quartz Watch, Model 28001. This timepiece is designed for reliability and style, featuring a precise quartz movement, durable stainless steel case, and 100-meter water resistance. This manual provides essential information to help you set up, operate, and maintain your watch for optimal performance.



Image: Front view of the Invicta Pro Diver Quartz Watch Model 28001, showcasing the black dial, gold-tone case, and black silicone band.

SETUP

Before using your watch, please follow these steps to set the time and date.

Setting the Time

1. **Unscrew the Crown:** The crown is located on the right side of the watch case. For water-resistant watches, the crown is often a screw-down type. Rotate the crown counter-clockwise until it releases from the case.
2. **Pull the Crown to Position 2:** Gently pull the crown out to the second click position. This is the time-setting position.
3. **Adjust the Time:** Rotate the crown clockwise or counter-clockwise to move the hour and minute hands to the correct time. Ensure you account for AM/PM if your watch has a 24-hour indicator or date function.
4. **Push and Screw Down the Crown:** Once the time is set, push the crown back into the case. While pushing, rotate it clockwise to screw it back down tightly. This ensures water resistance.

Setting the Date and Day

Your Invicta Pro Diver Model 28001 features day, date, and 24-hour subdials.

1. **Unscrew and Pull the Crown to Position 1:** Rotate the crown counter-clockwise to release it, then gently pull it out to the first click position. This is typically the quick-set position for the date/day.
2. **Adjust the Date/Day:** Rotate the crown to change the date and day indicators. Some watches may require rotating in one direction for the date and the other for the day. Avoid setting the date between 9 PM and 3 AM, as this can interfere with the automatic date change mechanism.
3. **Push and Screw Down the Crown:** Once the date and day are set, push the crown back in and screw it down tightly to maintain water resistance.



Image: Angled view of the Invicta Pro Diver Quartz Watch Model 28001, highlighting the crown and subdials.

OPERATING YOUR WATCH

Your Invicta Pro Diver is a reliable quartz timepiece with additional functions.

Basic Timekeeping

Once the time is set, your watch will keep accurate time using its quartz movement. The second hand will move in individual steps.

Subdial Functions

- **Day Subdial:** Displays the current day of the week.
- **Date Subdial:** Displays the current day of the month.
- **24-Hour Subdial:** Indicates the current time in a 24-hour format, useful for distinguishing AM/PM.

Water Resistance

This watch is water resistant to 100 meters (330 feet). This means it is suitable for swimming and snorkeling, but not for scuba diving. Always ensure the crown is fully screwed down before exposing the watch to water. Do not operate the crown or pushers while the watch is wet or submerged.

MAINTENANCE

Proper care will ensure the longevity and performance of your Invicta watch.

Cleaning

- Wipe the watch case and band with a soft, dry cloth regularly to remove dirt and perspiration.
- For the silicone band, you can use a mild soap and water solution, then rinse thoroughly and dry completely.
- Avoid using harsh chemicals or abrasive materials, as these can damage the watch's finish or seals.

Battery Replacement

Your watch is powered by a nonstandard battery. When the watch stops or the second hand begins to skip, it indicates a low battery. Battery replacement should be performed by a qualified watch technician to ensure proper sealing and maintain water resistance.

Crystal Care

The watch features a Flame Fusion crystal, known for its scratch resistance. While durable, avoid impacts and abrasive surfaces to prevent damage. Clean the crystal with a soft, lint-free cloth.

Storage

When not wearing your watch, store it in a cool, dry place away from direct sunlight and extreme temperatures. The original watch box is ideal for storage.

TROUBLESHOOTING

Here are solutions to common issues you might encounter:

- **Watch Not Running:**
 - Check if the crown is fully pushed in and screwed down.
 - The battery may need replacement. Consult a professional watch technician.
- **Incorrect Time/Date:**
 - Refer to the "Setting the Time" and "Setting the Date and Day" sections to reset.
 - Ensure the crown is fully screwed down after adjustment.
- **Condensation Under Crystal:**

- This indicates a potential breach in water resistance. Have the watch inspected by a qualified technician immediately.

SPECIFICATIONS

Feature	Detail
Model Number	28001
Movement Type	Quartz
Case Material	Stainless Steel
Case Diameter	50 mm
Case Thickness	14 mm
Crystal Type	Flame Fusion
Water Resistance	100 Meters (330 Feet)
Band Material	Silicone
Band Color	Black
Band Width	26 mm
Dial Color	Black
Functions	Day, Date, 24 Hour Subdials
Clasp Type	Buckle
Item Weight	250 Grams

WARRANTY INFORMATION

Your Invicta Pro Diver Quartz Watch Model 28001 comes with a**Limited Warranty**. For specific details regarding the terms, conditions, and duration of your warranty, please refer to the warranty card included with your purchase or visit the official Invicta website. Keep your proof of purchase for warranty claims.

CUSTOMER SUPPORT

If you require further assistance, have questions not covered in this manual, or need service for your watch, please contact Invicta customer support. You can find contact information on the official Invicta website or through the retailer where you purchased the watch.

For more information, visit the [Invicta Store on Amazon](#).

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question