

ASHATA ASHATA 72-inch 16:9 Projector Screen (Model: ASHATAya120nfesc-02)

ASHATA 72-inch 16:9 Portable Projector Screen User Manual

Model: ASHATAya120nfesc-02

1. INTRODUCTION

Thank you for choosing the ASHATA 72-inch 16:9 Portable Projector Screen. This manual provides essential information for setting up, operating, and maintaining your projector screen to ensure optimal performance and longevity. Please read these instructions carefully before use.

Key Features:

- **High Quality Material:** Made from durable synthetic polyester fabric, ensuring a robust and long-lasting screen.
- **Portable Design:** Lightweight and foldable into a compact size, making it convenient for transport and storage.
- **Wrinkle-Free:** Designed to remain smooth and free of creases, regardless of how it's folded.
- **Easy Installation:** Features black borders and hanging holes for simple wall mounting or frame attachment.
- **Wide Application:** Ideal for outdoor camping movies, home theater, and office presentations. The translucent screen supports both front and rear projection.

2. PACKAGE CONTENTS

Please check the package contents to ensure all items are present:

- 1 x ASHATA 72-inch 16:9 Projector Screen
- 8 x Adhesive Hooks
- 8 x Hanging Hooks

3. SPECIFICATIONS

Feature	Specification
Brand	ASHATA
Model Number	ASHATAya120nfesc-02
Screen Size (Diagonal)	72 inches
Screen Dimensions (L x W)	159 cm x 90 cm (62.6 x 35.4 inches)
Aspect Ratio	16:9
Material	Synthetic Polyester Fabric
Black Border Size	3 cm (1.2 inches)
Mounting Type	Wall Mount
Batteries Required	No

4. SETUP AND INSTALLATION

The ASHATA projector screen is designed for easy and flexible installation. Follow these steps to set up your screen:

- 1. Unpack the Screen:** Carefully remove the projector screen and all accessories from its packaging.
- 2. Choose a Location:** Select a flat wall or a suitable frame where you intend to project. Ensure the area is clean and free from obstructions.
- 3. Attach Hooks:** Use the provided adhesive hooks or hanging hooks to secure the screen. The screen features grommets along its black borders for easy attachment. For adhesive hooks, ensure the surface is clean and dry before applying. For hanging hooks, you may need to use nails or screws (not included) depending on your wall type.
- 4. Stretch and Secure:** Gently stretch the screen to remove any remaining wrinkles and secure all grommets to the hooks. Ensure the screen is taut and flat for the best viewing experience.


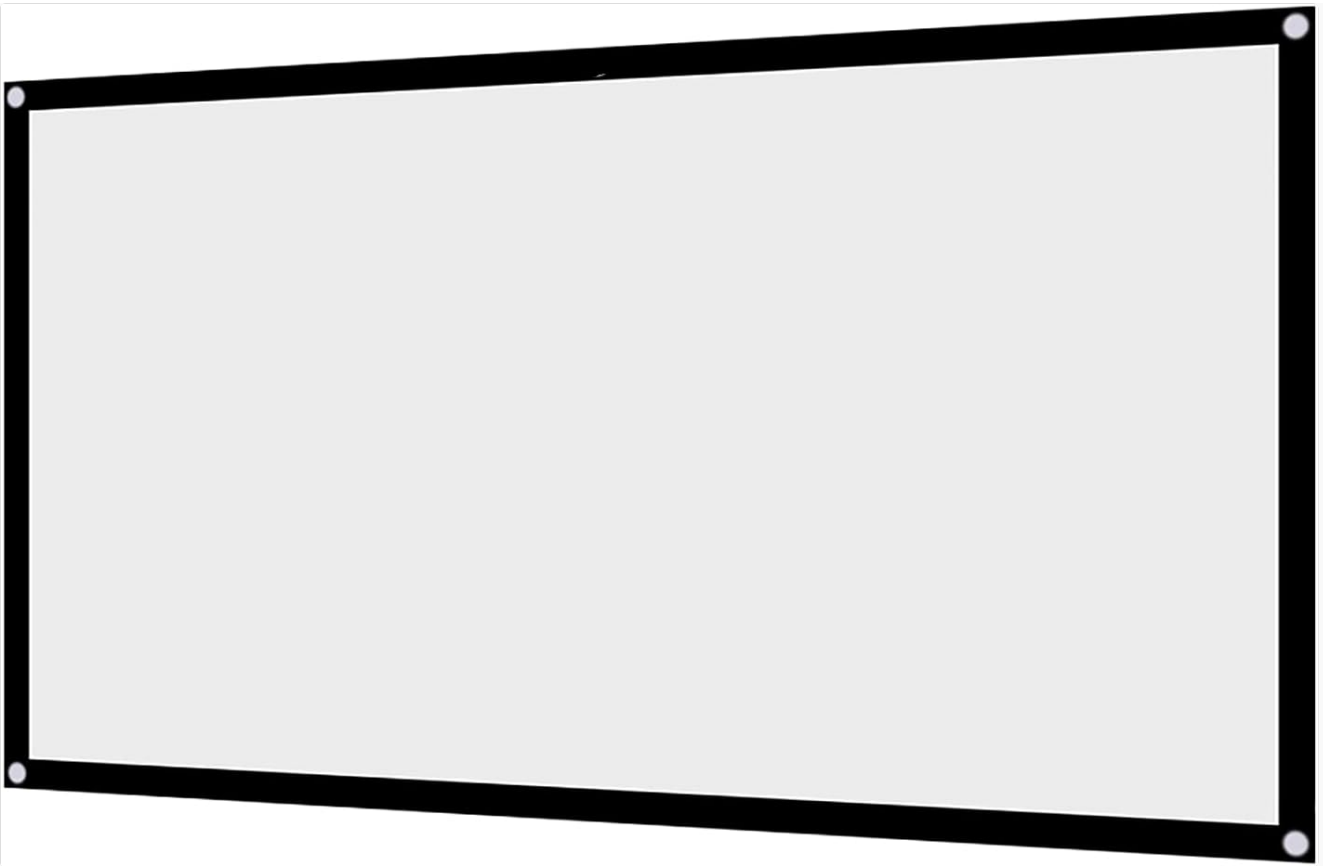


Image: Close-up view of the projector screen corner, showing a metal grommet for hanging.

16:9

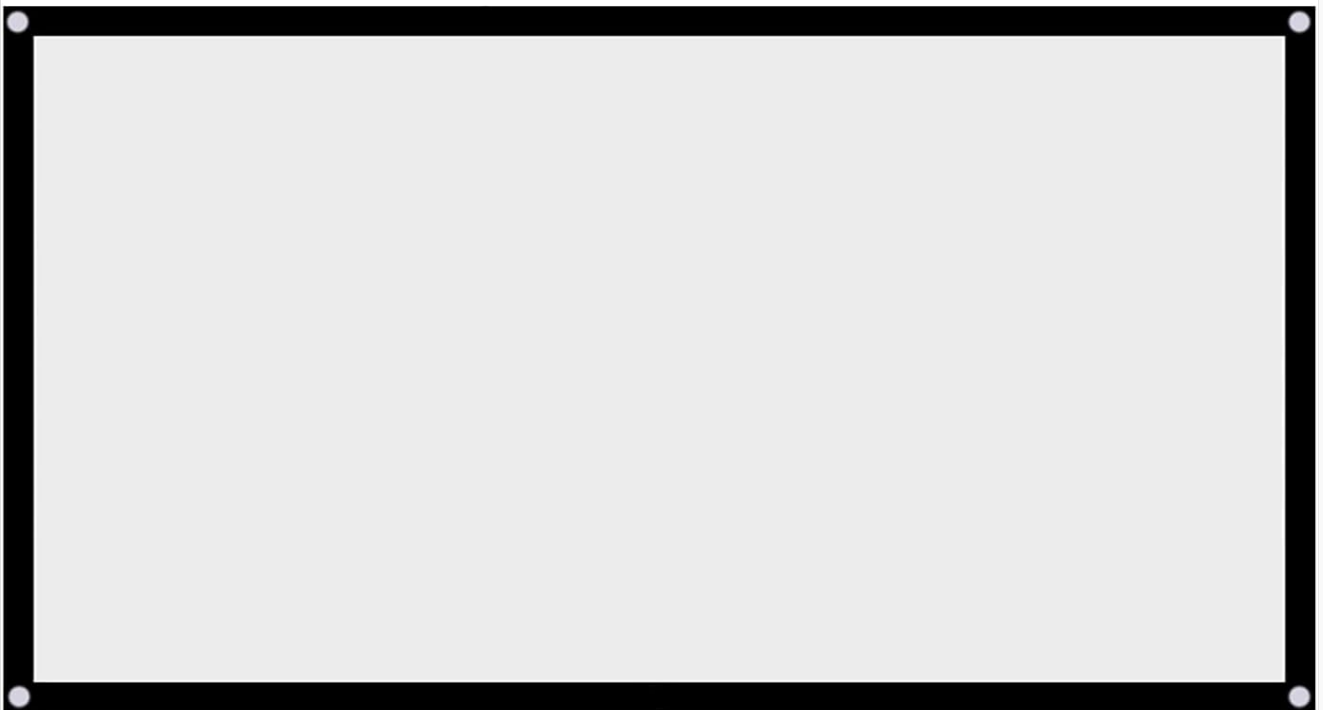

72inch

Image: The 72-inch projector screen laid flat, showcasing its black borders and evenly spaced grommets.

Your browser does not support the video tag.

Video: Demonstration of easy installation, showing how to attach the screen using ropes and hooks, highlighting a 179-degree viewing angle.

5. OPERATING INSTRUCTIONS

Once your screen is installed, you can begin using it with your projector. The screen is designed to provide a clear and vibrant image for various projection needs.

1. **Projector Placement:** Position your projector at an appropriate distance and angle to fill the screen completely. Adjust the projector's focus and keystone correction for a sharp, rectangular image.
2. **Viewing Angle:** The screen offers a wide viewing angle, ensuring good visibility from various positions in the room or outdoor setting.
3. **Front or Rear Projection:** This translucent screen supports both front and rear projection. For rear projection, ensure your projector has a rear projection mode and is placed behind the screen.



Image: The ASHATA 72-inch projector screen displaying a vibrant image, suitable for home theater use.

Your browser does not support the video tag.

Video: A demonstration of the projector screen's display quality, showing clear and vibrant images in various settings.

6. MAINTENANCE AND CARE

Proper care will extend the life and maintain the quality of your projector screen.

- **Cleaning:** To clean the screen, gently wipe it with a damp cloth. Do not use harsh chemicals, abrasive cleaners, or scrub vigorously, as this may damage the screen surface.
- **Washing:** Do not wash the screen by hand or machine.
- **Storage:** When not in use, fold the screen carefully and store it in a dry, cool place away from direct sunlight and extreme temperatures. Its foldable design allows for compact storage.
- **Handling:** Avoid touching the screen surface directly with your hands to prevent smudges or damage. Handle the screen by its black borders.



Image: The ASHATA projector screen folded for storage, demonstrating its portable and compact design.

7. TROUBLESHOOTING

If you encounter any issues with your projector screen, refer to the following common problems and solutions:

- **Wrinkles on the Screen:**

Solution: Ensure the screen is stretched tightly and evenly when installed. The material is designed to be wrinkle-free, but minor creases from packaging should disappear once properly stretched.

- **Poor Image Quality (Blurry/Distorted):**

Solution: This is usually related to the projector settings. Check your projector's focus, keystone correction, and resolution settings. Ensure the projector is aligned directly with the screen.

- **Screen Not Staying Flat:**

Solution: Verify that all hanging points are securely fastened and the screen is evenly tensioned. If using adhesive hooks, ensure the surface was clean and dry before application.

8. WARRANTY AND SUPPORT

For any product-related inquiries, technical support, or warranty claims, please contact the seller directly through your purchase platform. Keep your purchase receipt as proof of purchase.

The product is sold by Richer-R. For specific warranty details, please refer to the terms and conditions provided at the time of purchase or contact Richer-R customer service.