

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Homary](#) /

› [Homary Luxury 2-Function 8" Rain Shower System Wall Mounted Shower Combo Set Instruction Manual](#)

## Homary B07K193GXM

# Homary Luxury 2-Function 8" Rain Shower System Instruction Manual

Model: B07K193GXM

[Product Overview](#) [Specifications](#) [Installation](#) [Operation](#) [Maintenance](#) [Troubleshooting](#) [Support](#)

## INTRODUCTION

Thank you for purchasing the Homary Luxury 2-Function 8" Rain Shower System. This manual provides detailed instructions for the safe installation, proper operation, and effective maintenance of your new shower system. Please read this manual thoroughly before installation and retain it for future reference.

## PRODUCT OVERVIEW

### Components

The Homary Luxury 2-Function Shower System includes the following main components:

- Rain Shower Head:** 8-inch round shower head with air pressurization for enhanced water flow.
- Handheld Shower:** Provides targeted cleaning and washing.
- Divertor Knob:** Allows switching between the rain shower and handheld shower functions.
- Pressure-Balanced Valve:** Ensures consistent water temperature and prevents scalding.
- Single Lever Handle:** For effortless temperature and flow control.
- PVC Shower Hose:** Kink-free and flexible for ease of use.
- Wall Mount Rough-In:** 1/2 inch NPT connections for secure installation.



This image illustrates the main components of the Homary Luxury 2-Function Shower System, including the rain shower head, handheld shower, diverter knob, pressure-balanced valve, and single lever handle.

## SPECIFICATIONS

Feature	Detail
Brand	Homary
Model Number	B07K193GXM
Color	Matte Black
Number of Handles	1
Handle Material	Brass
Mounting Type	Wall Mount
Item Weight	5.69 pounds

Feature	Detail
Package Dimensions	19.6 x 16 x 6 inches
UPC	619960279809

## INSTALLATION INSTRUCTIONS

---


### Pre-Installation Checklist

- Ensure all components listed in the Product Overview section are present and undamaged.
- Verify that your plumbing system is compatible with 1/2 inch NPT connections.
- Turn off the main water supply before beginning installation.
- Consult local plumbing codes for any specific requirements.

### Required Tools

- Adjustable wrench
- Pipe sealant tape (Teflon tape)
- Screwdriver (Phillips and flathead)
- Drill with appropriate bits
- Level
- Measuring tape

### Mounting Dimensions

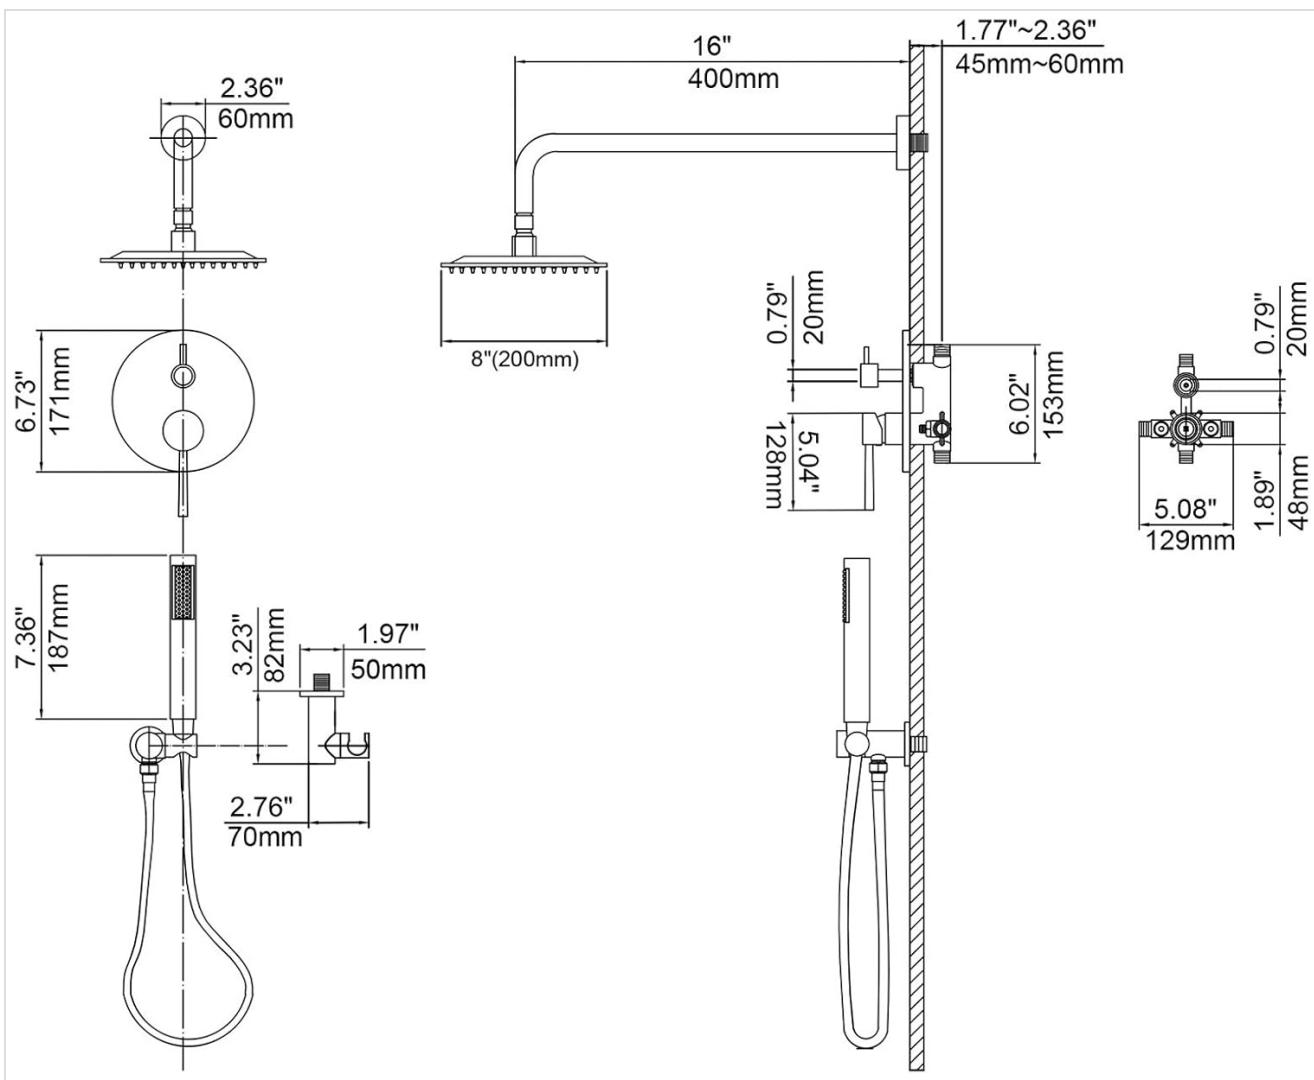

This diagram provides detailed dimensions for the shower system components and rough-in valve, crucial for proper wall-mounted installation. Refer to these measurements for accurate placement.

## Installation Steps

- 1. Prepare the Wall:** Ensure the wall surface is clean, dry, and structurally sound. Mark the desired location for the rough-in valve and shower components according to the dimensional diagram.
- 2. Install the Rough-in Valve:** Secure the rough-in valve body within the wall cavity, ensuring it is level and at the correct depth. Connect the hot and cold water supply lines to the designated inlets on the valve. Use pipe sealant tape on all threaded connections.
- 3. Connect Outlets:** Connect the plumbing lines from the valve outlets to the locations for the rain shower head and handheld shower. Ensure all connections are secure and leak-free.
- 4. Install Trim and Handle:** Once the wall is finished, install the decorative trim plate, single lever handle, and diverter knob onto the rough-in valve. Follow the manufacturer's instructions for securing these components.
- 5. Install Shower Arm and Head:** Thread the shower arm into the wall outlet, applying pipe sealant tape. Secure the 8-inch rain shower head onto the shower arm.
- 6. Install Handheld Shower and Hose:** Mount the handheld shower holder to the wall at a convenient height. Connect the PVC shower hose to the handheld shower and the wall outlet.
- 7. Test for Leaks:** Turn on the main water supply slowly and check all connections for leaks. Operate both the rain shower and handheld shower to ensure proper function and water flow.

## OPERATION GUIDE

## Water Flow and Temperature Control


The single lever handle controls both water flow and temperature:

- **To Turn On/Off:** Lift the handle to turn on the water. Push down to turn off.
- **To Adjust Flow:** The further you lift the handle, the greater the water flow.
- **To Adjust Temperature:** Rotate the handle left for hotter water and right for colder water. The pressure-balanced valve will maintain a consistent temperature once set.

## Diverter Function

The diverter knob allows you to switch between the rain shower and the handheld shower:

- Rotate the diverter knob to select either the rain shower head or the handheld shower.
- Ensure the knob is fully engaged in the desired position for optimal water flow from the selected outlet.

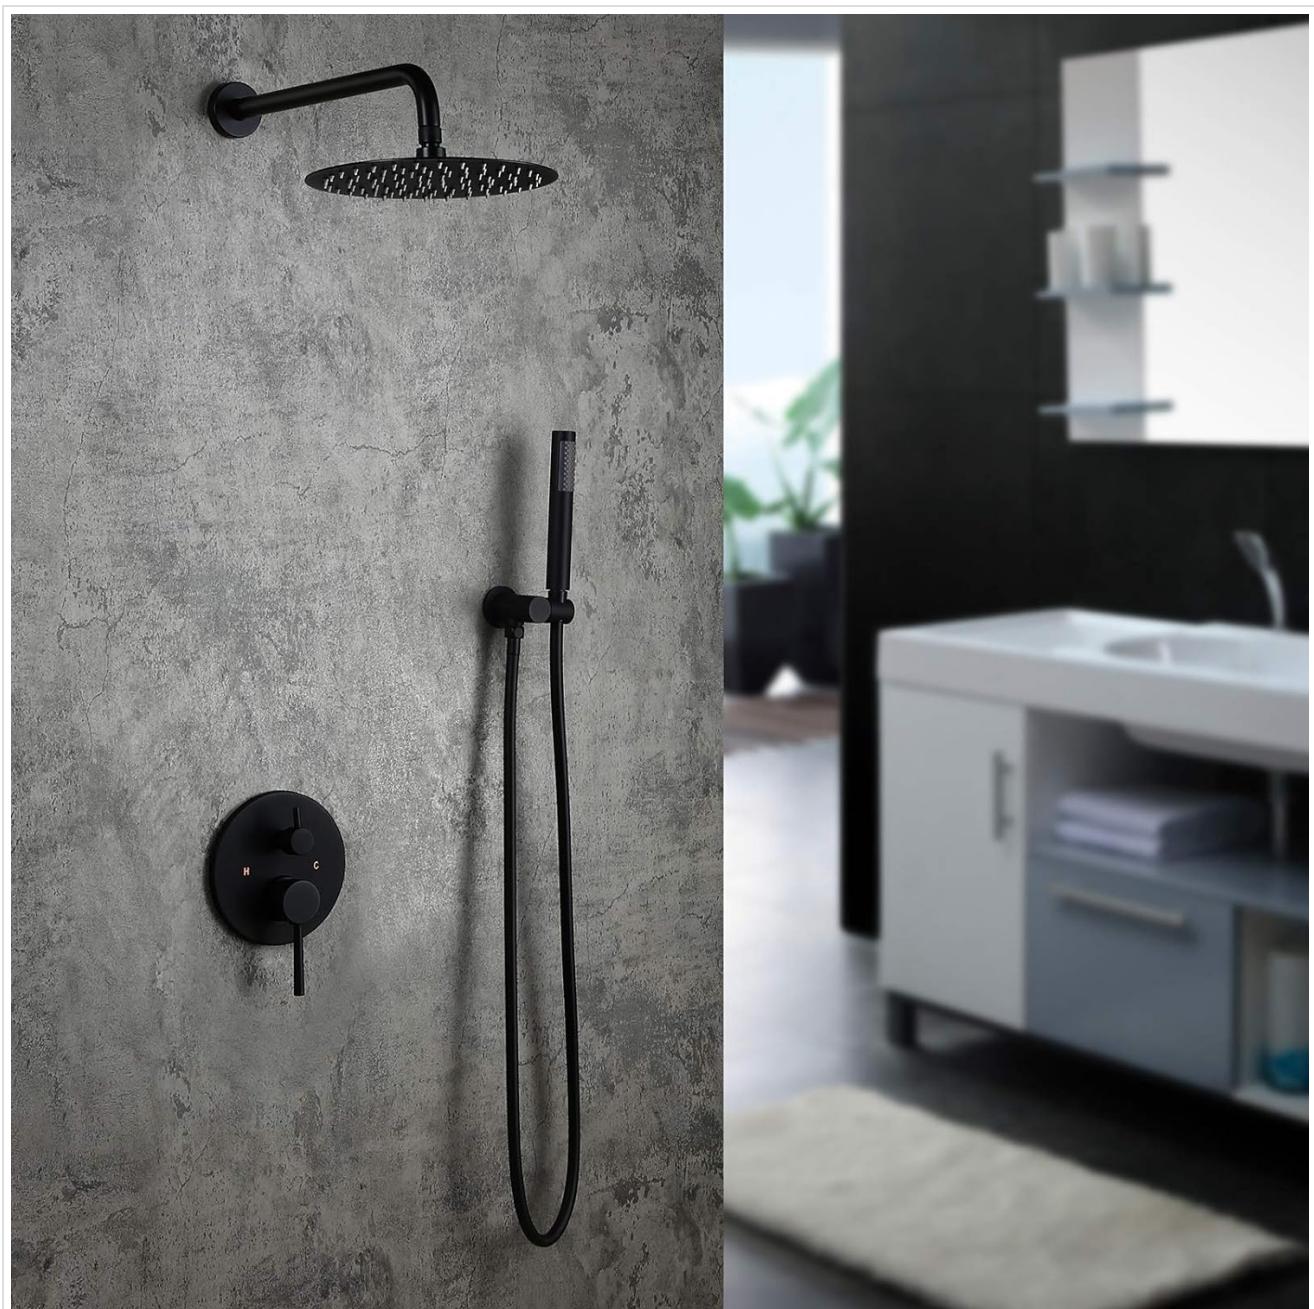

This image shows the Homary shower system installed, demonstrating the aesthetic and functional layout of the controls.



This image depicts the rain shower head in operation, illustrating the wide coverage and water flow.



This image shows the handheld shower in use, highlighting its targeted spray for flexible cleaning and washing.

## CARE AND MAINTENANCE

---

### Cleaning Instructions

- To maintain the matte black finish, clean regularly with a soft, damp cloth.
- Avoid using abrasive cleaners, harsh chemicals, or scouring pads, as these can damage the finish.
- For stubborn water spots, a mild soap solution can be used, followed by rinsing and drying.
- Periodically clean the silicone nozzles on the shower heads by gently rubbing them to dislodge mineral buildup.

### Preventative Measures

- Ensure proper ventilation in your shower area to prevent moisture buildup.
- Check for leaks periodically and address them promptly to prevent water damage.
- If you live in an area with hard water, consider installing a water softener to reduce mineral buildup and prolong the life of your shower system.

## TROUBLESHOOTING

This section addresses common issues you might encounter with your shower system.

Problem	Possible Cause	Solution
Low Water Pressure	Clogged shower head nozzles; partially closed shut-off valve; low household water pressure.	Clean shower head nozzles; ensure shut-off valves are fully open; consult a plumber for household water pressure issues.
Leaking from Connections	Loose connections; insufficient pipe sealant tape; damaged O-rings/gaskets.	Tighten connections; reapply pipe sealant tape; replace damaged O-rings or gaskets.
Inconsistent Water Temperature	Pressure-balanced valve malfunction; issues with hot/cold water supply.	Ensure hot and cold water supplies are stable; contact customer support if the valve is suspected to be faulty.
Divertor Not Switching Properly	Mineral buildup in diverter mechanism; faulty diverter cartridge.	Clean diverter area; if issue persists, the diverter cartridge may need replacement. Contact customer support.


## WARRANTY AND CUSTOMER SUPPORT

### Warranty Information

Homary products are manufactured to high-quality standards and are backed by a limited warranty. Please refer to your purchase documentation or contact customer support for specific warranty terms and conditions applicable to your product.

### Customer Support

If you require further assistance, have questions about installation, or need to report a problem, please contact Homary customer care. When contacting support, please provide your order number for faster service.

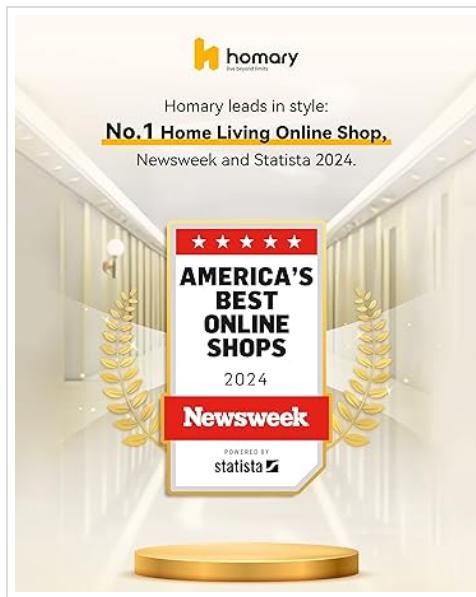

This image provides Homary customer support contact details, including a phone number and email address for assistance. Service is typically available within 24 hours, excluding public holidays.

© 2026 Homary. All rights reserved.