



Manuals.plus /

› OVENTE /

› OVENTE Electric Griddle GD1610B Instruction Manual

OVENTE GD1610B

OVENTE Electric Griddle Instruction Manual

Model: GD1610B

Brand: OVENTE

INTRODUCTION

This manual provides essential information for the safe and efficient operation, maintenance, and care of your OVENTE Electric Griddle, Model GD1610B. Please read all instructions carefully before first use and retain this manual for future reference.

The OVENTE Electric Griddle features a 16 x 10 inch non-stick cooking surface, ideal for preparing a variety of meals such as pancakes, eggs, bacon, and more. It includes a removable and adjustable temperature control for precise cooking.

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed, including:

- Read all instructions before operating the appliance.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse cord, plugs, or the appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then

remove plug from wall outlet.

- Do not use appliance for other than intended household use.
- This appliance operates at 1200 watts (120 volts).

PRODUCT OVERVIEW



The OVENTE Electric Griddle in use, demonstrating its cooking capacity for breakfast items.

NON-STICK PLATE


Prevents food from sticking



The non-stick cooking plate prevents food from sticking, ensuring easy food release.

16" X 10" COOKING PLATE

Large cooking surface for breakfast, lunch and dinner

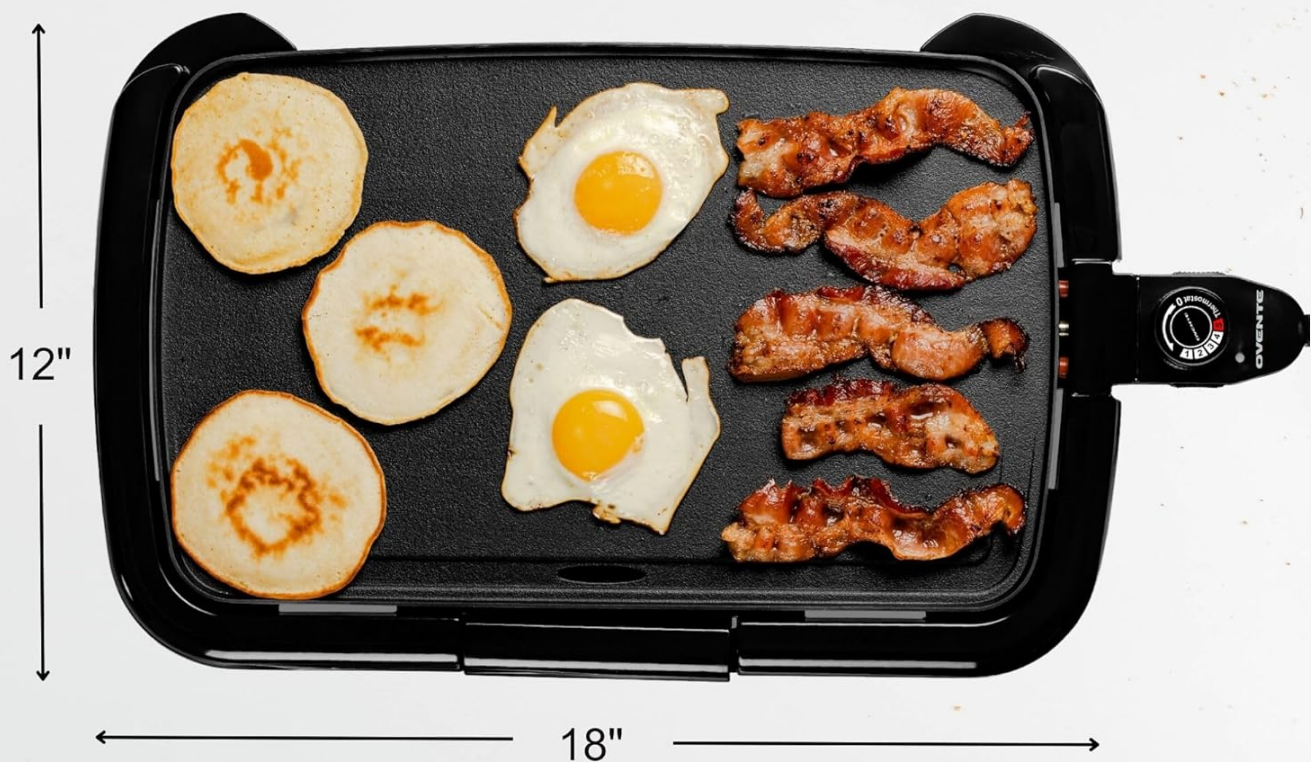

The large 16" x 10" cooking plate provides ample space for various dishes.

THERMOSTAT CONTROL

Adjustable temperature setting
from 200-400°F



The adjustable thermostat control allows temperature settings from 200-400°F.

EASY TO CLEAN

The removable drip tray traps extra grease and oil for fast disposal



The removable drip tray collects excess grease and oil for easy disposal.

LIGHTWEIGHT & COMPACT

For convenient and easy storage



The lightweight and compact design allows for convenient storage.

SETUP

1. Unpack the griddle and all its components. Ensure all packaging materials are removed.
2. Before first use, wash the griddle plate and drip tray with warm, soapy water. Rinse thoroughly and dry completely.
3. Insert the removable drip tray into its designated slot beneath the griddle plate.
4. Place the griddle on a stable, heat-resistant, and dry surface. Ensure there is adequate clearance around the appliance for ventilation.
5. Attach the temperature probe firmly into the receptacle on the side of the griddle.

OPERATING INSTRUCTIONS

1. **Preheating:** Plug the power cord into a standard 120V AC electrical outlet. Set the temperature control to the maximum setting (400°F) to preheat the griddle. The indicator light will illuminate.
2. **Temperature Setting:** Once the griddle reaches the desired temperature, the indicator light will turn off. Adjust the

temperature control to your preferred setting (200-400°F) for cooking. The light will cycle on and off during cooking to maintain the set temperature.

3. **Cooking:** Place food directly onto the non-stick cooking surface. The 16" x 10" surface is suitable for various items like pancakes, eggs, bacon, burgers, and sautéed vegetables.
4. **After Use:** Once cooking is complete, turn the temperature control to the "OFF" position and unplug the griddle from the outlet. Allow the griddle to cool completely before cleaning.

Cooking Tips

- For best results with pancakes, ensure the griddle is fully preheated before pouring batter.
- Use a small amount of cooking oil or butter if desired, though the non-stick surface is designed for cooking without excessive oil.
- Always use heat-resistant, non-metal utensils to avoid damaging the non-stick coating.
- The removable drip tray will collect excess grease, contributing to healthier cooking.

CLEANING AND MAINTENANCE

Proper cleaning and maintenance will extend the life of your OVENTE Electric Griddle.

1. **Cool Down:** Always ensure the griddle has completely cooled down before attempting to clean it.
2. **Remove Temperature Probe:** Detach the temperature probe from the griddle. This part is electrical and should never be immersed in water.
3. **Clean Griddle Plate:** Wash the griddle plate and removable drip tray with warm, soapy water. For stubborn food residue, allow the griddle to soak for a short period.
4. **Non-Stick Care:** Use a soft, non-abrasive sponge or cloth for cleaning the non-stick surface to prevent scratching. Do not use metal scouring pads or harsh abrasive cleaners.
5. **Rinse and Dry:** Rinse all components thoroughly with clean water and dry completely before storing or reassembling.
6. **Storage:** For convenient storage, the griddle is designed to be compact. Once clean and dry, it can be stored in cabinets or on shelves.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Griddle does not heat up.	Not plugged in; temperature probe not fully inserted; power outlet issue.	Ensure the griddle is securely plugged into a working outlet. Check that the temperature probe is fully inserted into its receptacle. Test the outlet with another appliance.
Food sticks to the surface.	Insufficient preheating; damaged non-stick coating; not enough oil (if desired).	Allow the griddle to preheat fully before adding food. Ensure you are using non-metal utensils. Apply a thin layer of cooking oil or butter if necessary.
Temperature is inconsistent.	Temperature probe not properly connected; large temperature fluctuations.	Verify the temperature probe is securely connected. The indicator light will cycle on and off to maintain the set temperature, which is normal operation.
Drip tray overflows.	Drip tray not emptied regularly; excessive grease from food.	Empty the drip tray after each use or when it becomes full during cooking. Reduce the amount of oil used if possible.

SPECIFICATIONS

Model: GD1610B

Brand: OVENTE

Color: Black

Material: Non-Stick

Product Dimensions: 12"D x 18"W x 2.75"H

Cooking Surface: 16" x 10" (160 square inches)

Wattage: 1200 watts

Voltage: 120V

Temperature Settings: 5 settings (200-400°F)

Item Weight: 4.4 Pounds

Included Components: Drip Tray

Special Features: Adjustable Temperature, Removable Probe, Cool Touch Handles

UPC: 814667023537

WARRANTY AND CUSTOMER SUPPORT

OVENTE warrants that the product shall be free from defects in material and workmanship under normal use and conditions, for **1 year from the original purchase date**.

For customer service or warranty inquiries, please contact OVENTE customer support. Refer to the product packaging or the official OVENTE website for the most current contact information.

Note on Videos: No official product videos with "Seller" creator type were found in the provided data for embedding in this manual.

