

[Manuals.plus](#) /

› [Dancover](#) /

› Dancover Original 5x6m PVC Party Tent, White User Manual

Dancover Original 5x6m

Dancover Original 5x6m PVC Party Tent

User Manual

INTRODUCTION

Thank you for choosing the Dancover Original 5x6m PVC Party Tent. This manual provides essential information for the safe and correct assembly, operation, and maintenance of your party tent. Please read all instructions carefully before beginning assembly and retain this manual for future reference.

This party tent is designed for temporary outdoor use, providing shelter for events and gatherings. It features a robust galvanized steel frame and durable PVC canopy and sidewalls, offering protection against various weather conditions.

SAFETY INSTRUCTIONS

- Always assemble the tent on a flat, stable surface.
- Ensure all frame connections are securely fastened before attaching the canopy.
- Properly anchor the tent to the ground using the provided pegs or additional weights, especially in windy conditions.
- Do not use open flames, heaters, or cooking equipment inside or near the tent.
- In case of strong winds, heavy rain, or snow, disassemble the tent to prevent damage or injury. The tent is not designed for permanent installation or extreme weather.
- Keep children and pets away from the assembly area.
- Always use appropriate safety gear during assembly, such as gloves.
- Inspect all components for damage before assembly. Do not use damaged parts.

PARTS LIST

Before starting assembly, verify that all components are present and undamaged. Refer to the packing list included with your product for a detailed inventory. Key components include:

- Galvanized Steel Frame Poles (various lengths and diameters)
- Connectors/Joints
- Roof Canopy (500 g/m² PVC)

- Sidewalls (380 g/m² PVC, with Georgian-style windows)
- End Walls (with Velcro door openings)
- Ground Pegs/Stakes
- Elastic cords and Velcro straps for attachment



Image: Close-up view of the galvanized steel frame pipes, indicating their robust construction. These pipes form the structural support of the tent.



Image: Graphic illustrating the 500g strong PVC material used for the tent canopy, highlighting its durability.

SETUP INSTRUCTIONS

Assembly typically requires 2-4 people. Follow these steps carefully:

1. **Prepare the Site:** Choose a level, clear area for the tent. Ensure there are no overhead obstructions or underground utilities.
2. **Unpack Components:** Lay out all frame poles, connectors, and fabric parts. Organize them by type and size.
3. **Assemble the Roof Frame:** Connect the roof poles and ridge poles using the appropriate connectors. Ensure all connections are tight.

4. **Attach the Roof Canopy:** Carefully drape the PVC roof canopy over the assembled roof frame. Ensure it is centered and evenly distributed. Secure it temporarily with elastic cords or straps.
5. **Assemble the Leg Poles:** Attach the leg poles to the roof frame connectors. Gradually raise the tent structure, ensuring it remains stable.
6. **Attach Sidewalls and End Walls:** Secure the sidewalls and end walls to the frame using the integrated elastic cords and Velcro. The sidewalls are typically 2m sections for flexibility. The end walls feature Velcro door openings.
7. **Anchor the Tent:** Use the provided ground pegs to secure the tent's feet to the ground. For added stability, especially in areas prone to wind, consider using additional anchoring methods like sandbags or water barrels (not included).



Image: A fully assembled Dancover Original 5x6m PVC Party Tent with Georgian-style windows, set up in a grassy outdoor area. This image shows the tent's overall structure and appearance.



Image: The Dancover Original 5x6m PVC Party Tent viewed from a slightly further distance, showcasing its size and elegant design within a natural setting.

OPERATING INSTRUCTIONS

Once assembled, your Dancover party tent is ready for use. Consider the following:

- **Door Openings:** The end walls feature Velcro door openings for easy access. These can be rolled up and secured to keep the entrance open.
- **Ventilation:** The Georgian-style windows allow natural light. For additional ventilation, the sidewall sections can be partially or fully removed.
- **Weather Conditions:** The tent is 100% waterproof and UV-resistant. However, it is not designed for extreme weather. In high winds, heavy rain, or snow, it is recommended to disassemble the tent to prevent damage.
- **Windstop System:** The tent features a Double Velcro Windstop system designed to prevent moisture and drafts from entering, enhancing comfort inside.



Image: The Dancover party tent with one of its side walls partially opened, demonstrating the flexibility of the 2-meter wall sections and the Velcro door openings.



Image: An interior view of the Dancover party tent, showing the spacious area, the galvanized steel frame structure, and the light filtering through the PVC canopy and windows.



Image: Graphic symbol representing 100% waterproof capability, featuring an umbrella and raindrops.

MAINTENANCE

- **Cleaning:** Clean the PVC canopy and sidewalls with mild soap and water. Do not use harsh chemicals or abrasive cleaners, as these can damage the material. Rinse thoroughly and allow to dry completely before storage.
- **Frame Care:** The galvanized steel frame is rust-resistant. However, inspect it periodically for any signs of corrosion or damage. Clean any dirt or debris from the frame.

- **Storage:** When not in use, disassemble the tent and store all components in a dry, cool place, away from direct sunlight and extreme temperatures. Ensure the fabric is completely dry to prevent mold and mildew.
- **Inspection:** Regularly inspect all ropes, pegs, and connections for wear and tear. Replace any damaged parts immediately to ensure the tent's stability and safety.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Tent is unstable or sways	Insufficient anchoring; loose frame connections; uneven ground.	Ensure all pegs are securely driven into the ground. Check all frame connections for tightness. Relocate the tent to a more level surface if possible. Add additional weights if necessary.
Water leakage	Improper canopy installation; damage to PVC material.	Verify the roof canopy is correctly tensioned and overlaps all frame elements. Inspect the PVC for tears or holes and repair with a suitable PVC repair kit.
Difficulty assembling frame poles	Poles are not aligned correctly; debris in connectors.	Ensure poles are inserted straight into connectors. Check connectors for any obstructions and clear them. Apply a small amount of silicone spray if poles are stiff.
Mold or mildew on fabric	Tent stored wet or in a damp environment.	Clean affected areas with a mild bleach solution (diluted) or specialized mold remover. Rinse thoroughly and ensure the fabric is completely dry before storage. Always store in a dry, well-ventilated area.

SPECIFICATIONS

Brand	Dancover
Model	Original 5x6m Party Tent
Dimensions (L x W)	6.00 m x 5.00 m
Side Height	2.00 m
Ridge Height	2.75 m
Door Opening (W x H)	1.45x2 m / 3.7x2 m (Velcro openings on both ends)
Roof Material	Solid PVC 500 g/m ²
Sidewall Material	Solid PVC 380 g/m ²
Frame Material	Strong Galvanized Steel
Pole Diameter	38x1.1 mm / 42x1.2 mm
Capacity	25-32 people
Construction Standard	EN 1090-1:2009+A1:2011
Color	White

UV Resistance	Resistant to UV influence
Waterproof	100% Waterproof
Weight	102 kg

SUPPORT AND CONTACT

For further assistance, spare parts, or warranty inquiries, please contact Dancover customer service. Refer to your purchase documentation for specific contact details or visit the official Dancover website.



Image: Graphic depicting two customer service representatives with headsets, symbolizing expert advice and support.