

[Manuals.plus](#) /

> [Aesfee](#) /

> Aesfee Electric Rotary Shaver User Manual

Aesfee AF-809-VOX

Aesfee Electric Rotary Shaver User Manual

Model: AF-809-VOX | Brand: Aesfee

1. PRODUCT OVERVIEW

The Aesfee AF-809-VOX Electric Rotary Shaver is designed to provide a smooth and close shaving experience for men. Featuring independent 3D floating heads, it adapts to the contours of your face and neck. This shaver is 100% waterproof, allowing for both wet and dry shaving, and is easily washable. It includes a user-friendly LCD display for essential information and a convenient pop-up trimmer for precise styling.





Image: The Aesfee Electric Rotary Shaver, showcasing its sleek design and waterproof capabilities with visible water droplets.

2. WHAT'S INCLUDED

Your Aesfee Electric Rotary Shaver package includes the following items:

- Aesfee Electric Rotary Shaver (Model: AF-809-VOX)
- USB Charging Cable
- User Guide
- Portable Bag
- Cleaning Brush

3. KEY FEATURES

3.1. Smooth and Close Shave

The shaver is equipped with independent 3D floating rotary heads that precisely follow the contours of your face, neck, and jawline, ensuring a comfortable and gentle shaving experience. It features ultra-thin double-track cutter nets and precision steel blades for efficient hair removal.

EFFICIENT 3D FLOATING HEADS

*Fits the Curve of Face and Neck Perfectly
A Smooth and Close Shave Every Time*



*Ultra Thin
Double-track Cutter Net*



Precision Steel Blades



*Close and Efficient Shaving
with The Precise Blade Combination*



Image: A detailed view of the efficient 3D floating heads, highlighting the ultra-thin double-track cutter net and precision steel blades for a close shave.

3.2. 100% Waterproof Wet & Dry Shave

The electric razor is fully waterproof (IPX7 rated), making it suitable for both dry and wet shaving. You can use it with foam or gels for a more comfortable shave or even in the shower. For easy cleaning, simply rinse the shaver under running tap water after each use.

IPX7 WATERPROOF

Whole Body Washable



Image: The shaver being rinsed under a faucet, illustrating its IPX7 waterproof rating and ease of cleaning.

3.3. User-Friendly LCD Display

The integrated LCD display provides real-time information, including the battery indicator showing available shaving time. It also features a blocking reminder if the shaver heads become clogged and a cleaning reminder to ensure optimal hygiene and performance.

USER-FRIENDLY LCD DISPLAY



Charging Indicator



Currently Available Shaving Time



Blocking Reminder



Travel Lock



Cleaning reminder



Image: The LCD display showing various indicators such as battery level, minutes remaining, and maintenance alerts.

3.4. USB Fast Charging & Travel Lock

The shaver supports USB fast charging, providing up to 60 minutes of shaving time with just one hour of full charge. This makes it convenient for travel as you don't need to worry about voltage or plug compatibility. The travel lock feature prevents accidental activation during transport; activate it by pressing and holding the power button for 3 seconds.



Image: The shaver connected to a USB cable, illustrating its fast charging capability and compatibility with various USB power sources.

3.5. Precise Pop-Up Trimmer

A built-in pop-up trimmer is located on the back of the shaver. It can be easily activated with one click, allowing you to precisely shave your mustache, sideburns, or create defined beard shapes.

PRECISE POP-UP TRIMMER

One click to shave your moustache and sideburns, to create your beard shape



Image: The pop-up trimmer extended, demonstrating its use for detailing facial hair.

4. SETUP

4.1. Initial Charge

Before first use, fully charge the shaver. Connect the provided USB charging cable to the shaver's charging port and plug the other end into a 5V/1A USB power source (e.g., wall adapter, computer USB port, power bank). The LCD display will indicate charging status. A full charge takes approximately 1 hour.

4.2. Travel Lock Deactivation

If the shaver is in travel lock mode (indicated by a lock icon on the LCD), press and hold the power button for 3 seconds to deactivate it before use.

5. OPERATING INSTRUCTIONS

5.1. Power On/Off

Press the power button once to turn the shaver on. Press it again to turn it off.

5.2. Shaving Technique (Wet or Dry)

For dry shaving, ensure your skin is clean and dry. For wet shaving, apply shaving foam or gel to your face. Gently press the shaver heads against your skin and move the shaver in small, circular motions. The 3D floating heads will adapt to your facial contours for an effective shave.



Image: A user demonstrating the proper technique for achieving a smooth and close shave with the rotary shaver.

5.3. Using the Pop-Up Trimmer

To use the pop-up trimmer, slide the trimmer release button located on the back of the shaver upwards. The trimmer will extend. Use it to trim sideburns, mustaches, or define beard lines. After use, push the trimmer back down until it clicks into place.

6. MAINTENANCE AND CLEANING

6.1. Daily Cleaning

After each use, turn off the shaver. Detach the blade assembly by pressing the release button and gently pulling it away from the shaver body. Rinse the shaver heads and the internal chamber under running tap water to remove hair clippings and residue. Shake off excess water and allow the parts to air dry completely before reattaching the blade assembly and placing the protective cap.



Image: Hands demonstrating the detachment of the blade assembly for thorough cleaning and maintenance.

6.2. Deep Cleaning (Periodically)

Periodically, use the provided cleaning brush to remove stubborn hair particles from the shaver heads and internal components. Ensure the shaver is turned off and unplugged before performing deep cleaning. Do not use abrasive cleaners or harsh chemicals.

6.3. Cleaning Reminder

The LCD display will show a cleaning reminder icon when the shaver detects that cleaning is necessary. Follow the daily cleaning instructions to clear this reminder.

7. TROUBLESHOOTING

- **Shaver not turning on:** Ensure the shaver is charged. If the travel lock is active, deactivate it by pressing and holding the power button for 3 seconds.
- **Shaver not charging:** Verify that the USB cable is securely connected to both the shaver and the power source. Ensure the power source is active and provides 5V/1A output. Use only the original USB cable provided.
- **Poor shaving performance:** Clean the shaver heads thoroughly. If the issue persists, the blades may be worn and require replacement.
- **Blocking Reminder on LCD:** This indicates that hair clippings are obstructing the shaver heads. Perform a thorough cleaning as described in the Maintenance section.

8. SPECIFICATIONS

Feature	Specification
Model Number	AF-809-VOX
Dimensions	7.09 x 2.36 x 2.36 inches
Weight	10.09 ounces
Power Source	Battery Powered (1 Lithium Ion battery included)
Charging Time	Approx. 1 hour
Shaving Time	Up to 60 minutes
Waterproof Rating	IPX7 (Whole body washable)
Special Features	Rechargeable, Fast Charging, Cordless, Waterproof, Pop-up Trimmer, LCD Display, Travel Lock

9. SAFETY INFORMATION

Please read and adhere to the following safety guidelines to prevent injury and ensure proper operation of your shaver:

- Always hold the shaver away from your face while turning it on or off to prevent injury.
- Do not use the shaver while charging or with a damaged cord.
- Always clean and dry the shaver after each use to prevent bacterial growth.
- Keep the shaver out of reach of children and pets.

10. WARRANTY AND SUPPORT

For warranty information, product support, or any inquiries regarding your Aesfee Electric Rotary Shaver, please refer to the official Aesfee website or contact their customer service directly. Contact details can typically be found in the packaging or on the manufacturer's website.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B07K1YSJ13>

More documents and user manuals: <https://manuals.plus/>