

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

Manuals.plus /

› [Easytry123](#) /

› Easytry123 Replacement Remote Control for Sony TVs (RM-862, RM-869, RM-SA007, KDL Series)

Easytry123 Easytry4025

Easytry123 Replacement Remote Control User Manual

Model: Easytry4025

INTRODUCTION

This manual provides instructions for the setup, operation, and maintenance of your Easytry123 Replacement Remote Control. This remote is designed to function as a replacement for various Sony LCD LED HDTV models, including RM-862, RM-869, RM-SA007, KDL-46X3500, KDL-52W3000, KDL-52X3500, and KDL-70X3500. Please note that while this remote offers primary functionality, it may not support all advanced features or functions of your original television remote control.

SETUP

Battery Installation

The remote control requires two (2) AAA batteries for operation. Batteries are not included with the remote control and must be purchased separately.

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery compartment cover downwards and remove it.
3. Insert two AAA batteries, ensuring that the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Replace the battery compartment cover by sliding it back into place until it clicks securely.



Image: Rear view of the remote control with the battery cover removed, illustrating the correct placement of AAA batteries.

OPERATING INSTRUCTIONS

This remote control uses infrared technology. Ensure there is a clear line of sight between the remote control and your television's infrared receiver for optimal performance. Point the remote directly at the TV when pressing buttons.



Image: Front view of the remote control, displaying the layout of all control buttons.

Basic Functions

- **Power (I/O) Button:** Turns the television on or off.
- **Number Buttons (0-9):** Selects channels directly.
- **Channel Up/Down (PROG +/-):** Changes channels sequentially.
- **Volume Up/Down (+/-):** Adjusts the audio volume.
- **Mute Button:** Silences the television audio.
- **Input/Source Button:** Cycles through available input sources (e.g., HDMI, AV).
- **Navigation Buttons (Up, Down, Left, Right, Enter/OK):** Used to navigate menus and confirm selections.
- **Home/Menu Button:** Accesses the television's main menu or smart TV interface.
- **Back/Return Button:** Returns to the previous screen or menu.

For specific advanced functions or TV settings, refer to your television's original user manual, as this replacement remote may not replicate all specialized buttons or features.

MAINTENANCE

Battery Replacement

Replace batteries when the remote control's response becomes sluggish or stops working. Always replace both batteries at the same time with new AAA batteries. Do not mix old and new batteries, or different types of batteries.

Cleaning

To clean the remote control, gently wipe it with a soft, dry cloth. Do not use liquid cleaners, abrasive pads, or chemical solvents, as these can damage the remote's surface or internal components.

Storage

When not in use for extended periods, remove the batteries to prevent leakage, which can cause damage to the remote control.

TROUBLESHOOTING

- **Remote not responding:**

- Ensure batteries are correctly installed and not depleted. Replace with fresh AAA batteries if necessary.
- Check for any obstructions between the remote control and the television's infrared sensor.
- Confirm the television is powered on.

- **Limited functionality:**

- As a replacement remote, some advanced or specific functions of your original TV remote may not be supported. This is normal for universal or replacement remotes.
- Verify that your TV model is listed as compatible in the introduction section of this manual.

SPECIFICATIONS

Feature	Specification
Brand	Easytry123
Model Number	Easytry4025
Compatible Devices	Sony LCD LED HDTVs (RM-862, RM-869, RM-SA007, KDL-46X3500, KDL-52W3000, KDL-52X3500, KDL-70X3500)
Connectivity Technology	Infrared
Controller Type	Button Control
Battery Type	AAA
Number of Batteries	2
Special Feature	Universal (Pre-programmed for listed Sony models)

WARRANTY INFORMATION

No specific warranty information is provided for this product in the available documentation. Please refer to the retailer or seller from whom you purchased the remote control for details regarding their return or replacement policies.

SUPPORT

For further assistance or inquiries regarding your Easytry123 Replacement Remote Control, please contact the seller directly through the platform where the purchase was made. Provide your order details and the model number (Easytry4025) for efficient support.