

[Manuals.plus](#) /

> [Easytry123](#) /

> Easytry123 Replacement Remote Control User Manual for Sony TVs (Models RM-Y194, RM-Z5401, RM-Y916, RM-YA006, RM-ED033, RM-GA005, RM-ED038, RM-ED054, RM-ED060)

Easytry123 Easytry4036

Easytry123 Replacement Remote Control User Manual

Model: Easytry4036

INTRODUCTION

This manual provides essential instructions for the Easytry123 Replacement Remote Control, model Easytry4036. This remote is designed as a replacement for various Sony LCD, LED, and HDTV models, including RM-Y194, RM-Z5401, RM-Y916, RM-YA006, RM-ED033, RM-GA005, RM-ED038, RM-ED054, and RM-ED060. Please read these instructions carefully before use.

Important Note: This is a replacement remote control. While it is designed to function with the listed Sony TV models, some advanced or specific functions of your original remote may not be fully supported. Ensure your TV model is listed for optimal compatibility.

SETUP: BATTERY INSTALLATION

The remote control requires two AAA batteries (not included) for operation. Follow these steps to install the batteries:

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery compartment cover downwards or press the latch and lift to open it.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Replace the battery compartment cover by sliding it back into place until it clicks securely.



Image: Back of the remote control with the battery compartment open, revealing the slots for two AAA batteries.



Image: Angled view of the back of the remote control with the battery cover securely closed.

OPERATING INSTRUCTIONS

This remote control uses infrared (IR) technology to communicate with your television. No pairing or programming is typically required for compatible models.

- **Power On/Off:** Press the **POWER** button to turn your TV on or off.
- **Volume Control:** Use the **VOL +** and **VOL -** buttons to adjust the volume.
- **Channel Selection:** Use the **CH +** and **CH -** buttons to change channels. Numeric buttons can be used for direct channel input.
- **Input/Source:** Press the **INPUT** or **SOURCE** button to cycle through available input sources (HDMI, AV, etc.).
- **Navigation:** Use the directional arrow buttons (**Up, Down, Left, Right**) and the **ENTER** or **OK** button to navigate menus.

Ensure there is a clear line of sight between the remote control and your TV's infrared receiver for optimal performance.

MAINTENANCE

- **Cleaning:** To clean the remote control, wipe it gently with a soft, dry cloth. Do not use liquid cleaners, abrasive materials, or chemical solvents.
- **Battery Care:** If the remote control will not be used for an extended period, remove the batteries to prevent leakage and potential damage.
- **Storage:** Store the remote control in a cool, dry place away from direct sunlight and extreme temperatures.

TROUBLESHOOTING

- **Remote not responding:**
 - Check if the batteries are inserted correctly with the correct polarity.
 - Replace old batteries with new ones.
 - Ensure there are no obstructions between the remote and the TV's IR sensor.
 - Make sure you are pointing the remote directly at the TV.
- **Some functions do not work:**
 - As a replacement remote, certain advanced or specific functions present on your original TV remote may not be supported. Refer to your TV's original manual for specific functions.
 - Verify that your TV model is listed as compatible with this remote control.

SPECIFICATIONS

Brand	Easytry123
Model Number	Easytry4036
Compatible Devices	Television (Sony RM-Y194, RM-Z5401, RM-Y916, RM-YA006, RM-ED033, RM-GA005, RM-ED038, RM-ED054, RM-ED060)
Connectivity Technology	Infrared
Controller Type	Button Control
Battery Type	2 x AAA batteries (not included)
Special Feature	Ergonomic

WARRANTY INFORMATION

This product comes with a standard manufacturer's warranty. For specific warranty details, including coverage period and terms, please refer to the product packaging or contact the seller directly. Keep your purchase receipt as proof of purchase.

CUSTOMER SUPPORT

If you encounter any issues or have questions regarding your Easytry123 Replacement Remote Control that are not addressed in this manual, please contact the retailer or manufacturer's customer support. Provide your product model number (Easytry4036) and a detailed description of the issue for efficient assistance.

