



Manuals.plus /

› Easytry123 /

› Easytry123 Universal Replacement Remote Control for Sony TVs (Models RM-W109, RM-Y101, RM-Y145, RM-Y116, RM-ED007, RM-ED009, RM-ED011, RM-ED011W)

Easytry123 Easytry4032

Easytry123 Universal Replacement Remote Control

Model: Easytry4032

1. INTRODUCTION

This instruction manual provides essential information for the setup, operation, and maintenance of your Easytry123 Universal Replacement Remote Control, Model Easytry4032. This remote is designed to be compatible with various Sony LCD LED HDTV TV models, including RM-W109, RM-Y101, RM-Y145, RM-Y116, RM-ED007, RM-ED009, RM-ED011, and RM-ED011W. Please read this manual thoroughly before use to ensure proper functionality.

2. PRODUCT OVERVIEW

The Easytry123 replacement remote control offers a straightforward solution for controlling your compatible Sony television. It features an ergonomic design for comfortable handling and clearly labeled buttons for intuitive operation. Please note that while this is a replacement unit, some advanced functions of your original remote may not be fully supported.



Figure 2.1: Front View of Remote Control. This image displays the front face of the Easytry123 remote control, highlighting the layout of its various control buttons, including power, channel selection, volume adjustment, menu navigation, and numeric keypad.



Figure 2.2: Back View of Remote Control. This image shows the rear side of the Easytry123 remote control, featuring its textured grip and the location of the battery compartment cover.

3. SETUP

3.1 Battery Installation

1. Locate the battery compartment on the back of the remote control (refer to Figure 2.2).
2. Slide the battery compartment cover downwards or outwards to open it.
3. Insert two (2) AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Replace the battery compartment cover by sliding it back into place until it clicks securely.

Note: Batteries are not included with the remote control and must be purchased separately.

3.2 Compatibility Check

Before attempting to use the remote, verify that your Sony TV model is listed among the compatible models in the product title (e.g., RM-W109, RM-Y101, RM-Y145, RM-Y116, RM-ED007, RM-ED009, RM-ED011, RM-ED011W). This remote is designed for direct use with these specific models and typically requires no programming.

4. OPERATING INSTRUCTIONS

Once batteries are installed, the remote control is ready for immediate use with compatible Sony TV models. Point the remote directly at your television's infrared receiver.

4.1 Basic Functions

- **Power (I/O):** Press to turn the TV on or off.
- **Channel Up/Down (CH +/-):** Press to change channels sequentially.
- **Volume Up/Down (VOL +/-):** Press to increase or decrease the volume.
- **Mute:** Press to mute or unmute the TV audio.
- **Number Buttons (0-9):** Use to directly enter channel numbers.
- **Input/Source:** Press to cycle through available input sources (HDMI, AV, etc.).
- **Navigation Buttons (Up, Down, Left, Right, Enter):** Use to navigate through TV menus and confirm selections.

For specific button functions not listed, refer to your television's original user manual, as this replacement remote aims to replicate common controls.

5. MAINTENANCE

5.1 Cleaning

To clean the remote control, gently wipe its surface with a soft, dry cloth. For stubborn dirt, a slightly damp cloth can be used, followed by immediate drying. Avoid using harsh chemicals, abrasive cleaners, or excessive moisture, as these can damage the remote's finish or internal components.

5.2 Battery Replacement

Replace batteries when the remote's performance degrades or it stops responding. Always replace both AAA batteries at the same time with new ones. Do not mix old and new batteries, or different types of batteries. Remove batteries if the remote will not be used for an extended period to prevent leakage.

6. TROUBLESHOOTING

- **Remote not responding:**
 - Ensure batteries are inserted correctly with the correct polarity (+/-).
 - Replace old batteries with fresh AAA batteries.
 - Check for any obstructions between the remote and the TV's infrared receiver.
 - Ensure you are within the effective range and pointing the remote directly at the TV.
- **Some functions not working:**
 - As a replacement remote, some advanced or specific functions of your original TV remote may not be supported. Refer to your TV's original manual for specific button mappings.
 - Confirm your TV model is explicitly listed as compatible.

7. SPECIFICATIONS

- **Brand:** Easytry123
- **Model Number:** Easytry4032
- **Compatible Devices:** Sony LCD LED HDTV Televisions (Specific models: RM-W109, RM-Y101, RM-Y145, RM-Y116, RM-ED007, RM-ED009, RM-ED011, RM-ED011W)
- **Connectivity Technology:** Infrared (IR)

- **Controller Type:** Button Control
- **Power Source:** 2 x AAA Batteries (not included)
- **Special Feature:** Universal (for specified Sony models)
- **Manufacturer:** Easytry123

8. WARRANTY AND SUPPORT

8.1 Warranty Information

Specific warranty details for this Easytry123 product may vary. Please refer to the purchase documentation or contact your retailer directly for information regarding warranty coverage and terms.

8.2 Customer Support

For further assistance or inquiries regarding your Easytry123 Universal Replacement Remote Control, please contact the seller or retailer from whom you purchased the product. They can provide support specific to your purchase.