

## SINGER DF150SM\_RD

# SINGER Female Adjustable Red Dress Form Instruction Manual

MODEL: DF150SM\_RD

Brand: SINGER

## 1. Introduction and Overview

The SINGER Female Adjustable Red Dress Form (Model DF150SM\_RD) is designed to provide a precise and customizable fit for all your sewing, tailoring, and display needs. This versatile mannequin accommodates sizes 4-10 and features 12 adjustable dials for accurate body measurements, a foam-backed fabric exterior for easy pinning, and a 360-degree hem guide for perfect garment finishing. Its tool-free assembly and height adjustment ensure convenience and efficiency in your creative process.

## 2. Product Components

Your SINGER Adjustable Dress Form package includes the following components:

- Dress Form Body (Red, Foam-Backed Fabric Exterior)
- Adjustable Stand
- Center Pole with Base
- 360-Degree Hem Gauge
- User Manual (this document)



Figure 2.1: Front and back view of the SINGER Adjustable Red Dress Form, highlighting the 12 adjustment dials.

### 3. Setup and Assembly

The SINGER Adjustable Dress Form is designed for tool-free assembly. Follow these steps to set up your dress form:

1. **Prepare the Pole and Base:** Remove the base from the bottom of the center pole. Slip the adjustable hem gauge onto the center pole, then re-attach the base securely.
2. **Assemble the Stand:** Attach the stand legs to the base of the center pole, ensuring they click into place for stability.
3. **Attach the Dress Form Body:** Carefully slip the dress form body onto the assembled center pole. Ensure it is seated firmly.
4. **Adjust Height:** Use the tool-free height adjustment mechanism on the pole to set the dress form to your desired working height.



Figure 3.1: The dress form stand with the height adjustment and hem guide components.

Video 3.1: Official SINGER video demonstrating the assembly and basic features of the Red Dress Form.

## 4. Operating Instructions

### 4.1 Adjusting Measurements

The dress form features 12 adjustable dials located at the neck, bust, waist, and hips. These dials allow you to customize the form to match specific garment measurements. To adjust, gently turn each dial. For significant size changes, turn each dial incrementally and evenly to avoid stressing the internal tension system.

- **Neck Sizes:** 13 3/8" - 17" (34 cm - 43 cm)
- **Bust Sizes:** 33" - 40" (84 cm - 101 cm)
- **Waist Sizes:** 25" - 32" (64 cm - 81 cm)
- **Hip Sizes:** 34" - 41" (86 cm - 104 cm)



Figure 4.1: The dress form showing adjustable measurement ranges for key body areas.

## 4.2 Pinning Fabric

The dress form's foam-backed fabric exterior is designed for easy and secure pinning. You can directly pin patterns, dresses, skirts, and tops onto the form, allowing for precise draping and fitting.

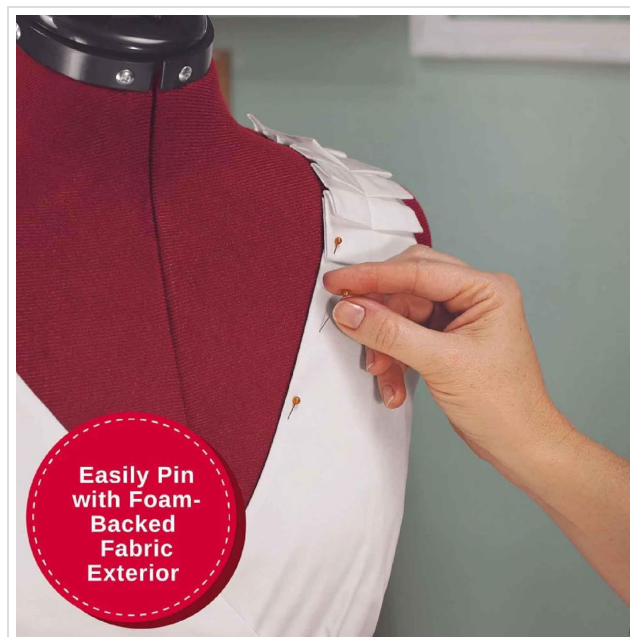


Figure 4.2: Demonstrating the ease of pinning on the foam-backed fabric exterior.

## 4.3 Using the Hem Guide

The integrated 360-degree hem gauge provides accuracy for marking and basting hems. Position the hem gauge at the desired height and rotate the dress form to ensure an even hemline around the entire garment.



Figure 4.3: The 360-degree hem guide in action for precise garment marking.

## 5. Maintenance

To ensure the longevity and optimal performance of your SINGER Adjustable Dress Form, follow these maintenance guidelines:

- **Cleaning:** Wipe the fabric exterior with a damp cloth to remove dust or lint. Avoid harsh chemicals that may damage the fabric or internal mechanisms.
- **Storage:** Store the dress form in a dry, cool place away from direct sunlight to prevent fading or material degradation.
- **Lubrication:** Periodically check the adjustment dials and pole for smooth operation. If any stiffness occurs, a small amount of silicone spray lubricant can be applied to the internal mechanisms (avoiding fabric).

## 6. Troubleshooting

If you encounter any issues with your dress form, refer to the following common troubleshooting tips:

- **Dials are Stiff or Hard to Turn:** Ensure you are turning the dials evenly. If expanding or contracting multiple sizes, make small adjustments to each dial in sequence rather than attempting a large adjustment on a single dial.
- **Dress Form is Unstable:** Verify that the stand legs are fully extended and securely locked into the base. Ensure the center pole is firmly inserted into both the base and the dress form body.
- **Fabric is Damaged:** The foam-backed fabric is durable, but avoid excessive force when pinning. If minor damage occurs, it can often be repaired with fabric glue.

## 7. Specifications

Feature	Detail
Brand	SINGER
Model Number	DF150SM_RD

Color	Red
Adjustable Sizes	Fits US Sizes 4-10
Material	Foam-Backed Fabric Exterior
Adjustment Dials	12 Dials (Neck, Bust, Waist, Hips)
Neck Size Range	13 3/8" - 17" (34 cm - 43 cm)
Bust Size Range	33" - 40" (84 cm - 101 cm)
Waist Size Range	25" - 32" (64 cm - 81 cm)
Hip Size Range	34" - 41" (86 cm - 104 cm)
Hem Guide	360-Degree Hem Gauge
Height Adjustment	Tool-free
Item Weight	9 Pounds
Item Dimensions (L x W x H)	9"L x 15"W x 28"H
UPC	037431886392

## 8. Warranty and Support

---

For warranty information, product registration, or technical support, please visit the official SINGER website or contact SINGER customer service. Keep your purchase receipt as proof of purchase for any warranty claims.