

Samsung BD-J6300/BD-JM63

Samsung BD-J6300/BD-JM63 Blu-ray Player User Manual

Model: BD-J6300/BD-JM63

[Introduction](#) [Safety Information](#) [Package Contents](#) [Product Overview](#) [Setup](#) [Operation](#)
[Maintenance](#) [Troubleshooting](#) [Specifications](#) [Warranty & Support](#)

1. INTRODUCTION

This user manual provides essential information for the safe and efficient operation of your Samsung BD-J6300/BD-JM63 Blu-ray Player. This device is designed to enhance your home entertainment experience with features such as 4K UHD upscaling, 3D Blu-ray playback, and built-in Wi-Fi for streaming various online content. Please read this manual thoroughly before using the product and retain it for future reference.

2. SAFETY INFORMATION

To reduce the risk of electric shock, fire, or damage to the unit, please observe the following safety precautions:

- **Power Source:** Connect the player only to an AC 120V, 60Hz power supply.
- **Ventilation:** Ensure adequate ventilation. Do not block ventilation openings. Maintain a minimum distance of 4 inches (10 cm) around the unit for proper airflow.
- **Liquid Exposure:** Do not expose the unit to rain, moisture, dripping, or splashing. Do not place objects filled with liquids, such as vases, on the apparatus.
- **Foreign Objects:** Never insert any metallic objects or foreign materials into the disc tray or other openings of the player.
- **Servicing:** Do not attempt to service this product yourself. Refer all servicing to qualified service personnel.
- **Placement:** Place the unit on a stable, level surface. Avoid placing it near heat sources, direct sunlight, or in areas with excessive dust or vibration.

3. PACKAGE CONTENTS

Verify that all items are present in your package:

- Samsung BD-J6300/BD-JM63 Blu-ray Player
- Remote Control (with batteries)
- Power Cord

- HDMI Cable
- Microfiber Cleaning Cloth
- User Manual (this document)

4. PRODUCT OVERVIEW



Image: Front view of the Samsung BD-J6300/BD-JM63 Blu-ray Player, showcasing its sleek design, disc tray, and essential control buttons.

The Samsung BD-J6300/BD-JM63 Blu-ray Player is a versatile home entertainment device offering a range of advanced features:

- **UHD Upscaling:** Automatically enhances standard and high-definition content to near-4K UHD quality, providing a sharper and more detailed picture on compatible 4K displays.
- **3D Blu-ray Playback:** Experience immersive 3D movies when connected to a 3D-compatible TV and using 3D glasses.
- **Built-in Dual Wi-Fi:** Connect wirelessly to your home network to access online streaming services and share content from compatible devices.

- **Smart Blu-ray Player:** Access popular streaming applications such as Netflix, YouTube, Amazon, and MGO directly from your player.
- **Web Browser:** Browse the internet on your TV screen using the integrated web browser.

5. SETUP

5.1. Connecting the Player

1. **Connect HDMI Cable:** Insert one end of the HDMI cable into the HDMI OUT port on the Blu-ray player and the other end into an HDMI IN port on your TV. Note the HDMI input number on your TV.
2. **Connect Power Cord:** Plug the power cord into the AC IN port on the back of the Blu-ray player, then plug the other end into a wall outlet.
3. **Power On:** Turn on your TV and select the correct HDMI input source using your TV remote. Then, press the Power button on the Blu-ray player or its remote control.

5.2. Initial Setup Wizard

Upon first power-on, the Initial Setup Wizard will guide you through basic settings:

1. **Language Selection:** Choose your preferred language for the on-screen menus.
2. **Network Connection:** Select your network type (Wireless or Wired).
 - **Wireless:** Select your Wi-Fi network from the list, then enter your network password.
 - **Wired:** If using an Ethernet cable (not included), connect it to the LAN port on the player and your router. The player will automatically detect the connection.
3. **Time Zone and Date:** Set the correct time zone and date.
4. **Software Update:** The player may prompt you to perform a software update. It is recommended to update to the latest firmware for optimal performance.
5. **Finish:** Complete the wizard to access the player's main menu.

6. OPERATING INSTRUCTIONS

6.1. Playing Discs

1. Press the **OPEN/CLOSE** button on the player or remote to open the disc tray.
2. Place a Blu-ray disc or DVD onto the disc tray with the label side facing up.
3. Press the **OPEN/CLOSE** button again to close the tray.
4. The player will automatically load the disc and begin playback or display the disc menu.

6.2. Accessing Smart Hub and Streaming Apps

1. From the main menu, navigate to the **Smart Hub** or **Apps** section.
2. Select your desired streaming application (e.g., Netflix, YouTube, Amazon).
3. Follow the on-screen prompts to log in to your account or create a new one.

6.3. Using the Web Browser

1. Navigate to the **Web Browser** icon in the Smart Hub.
2. Use the remote control's directional pad and on-screen keyboard to enter website addresses or search terms.

6.4. 3D Blu-ray Playback

To enjoy 3D content:

- Ensure your TV is 3D-compatible and you have active 3D glasses.
- Insert a 3D Blu-ray disc. The player will automatically detect the 3D content and prompt your TV to switch to 3D mode.
- Put on your 3D glasses to view the content in three dimensions.

6.5. UHD Upscaling

The player automatically upscales standard and high-definition content to near-4K UHD resolution when connected to a 4K compatible display. No manual settings are typically required for this feature to function.

7. MAINTENANCE

7.1. Cleaning the Player

- **Exterior:** Wipe the exterior surfaces with a soft, dry, lint-free cloth. For stubborn marks, slightly dampen the cloth with water. Avoid using abrasive cleaners or solvents.
- **Discs:** Clean discs with a soft, dry cloth, wiping from the center outwards. Do not use solvents or abrasive materials.

7.2. Software Updates

Regular software updates can improve performance and add new features. To check for updates:

1. Ensure the player is connected to the internet.
2. Go to [Settings](#) > [Support](#) > [Software Update](#).
3. Select [Update Now](#) and follow the on-screen instructions. Do not power off the player during an update.

8. TROUBLESHOOTING

If you encounter issues with your Blu-ray player, refer to the following common solutions:

Problem	Solution
No power	Ensure the power cord is securely plugged into the player and a working wall outlet. Try a different outlet.
No picture on TV	Verify the HDMI cable is connected correctly to both the player and TV. Select the correct HDMI input on your TV. Try a different HDMI cable or TV input.
No sound	Check the audio settings on your TV and the Blu-ray player. Ensure volume is not muted or too low. Verify audio cables (if used) are connected properly.
Disc not playing	Ensure the disc is clean and free of scratches. Verify the disc type is supported by the player (Blu-ray, DVD). Try a different disc.
Cannot connect to Wi-Fi	Check your router and internet connection. Re-enter your Wi-Fi password. Move the player closer to the router or try a wired connection.
Remote control not working	Replace the batteries in the remote control. Ensure there are no obstructions between the remote and the player's IR sensor.

9. SPECIFICATIONS

Feature	Detail
Brand	Samsung
Model Name	E1SAMB6500-cr (BD-J6300/BD-JM63 series)
Item Weight	4.54 pounds
Package Dimensions	14.2 x 12.2 x 6.5 inches
Color	Black
Special Features	Wireless, 4K Upscaling, 3D Playback
Media Type	Blu-Ray Disc, DVD
Resolution	3840x2160 (Upscaled)
Connector Type	HDMI
Connectivity Technology	HDMI, Wi-Fi
Audio Output Mode	Surround
Supported Audio Format	Dolby Digital, DTS

10. WARRANTY AND SUPPORT

For detailed warranty information, please refer to the warranty card included with your product or visit the official Samsung website. For technical support, product registration, or service inquiries, please contact Samsung customer service or visit their support portal online. Keep your purchase receipt as proof of purchase for warranty claims.