

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

> [LG](#) /

> [LG CordZero A9 Stick Vacuum Charge Plus User Manual](#)

LG A906SM

LG CordZero A9 Stick Vacuum Charge Plus User Manual

Model: A906SM

IMPORTANT SAFETY INSTRUCTIONS

Please read all instructions carefully before using your LG CordZero A9 Stick Vacuum. Failure to follow these instructions may result in electric shock, fire, or serious injury.

- Do not operate the vacuum cleaner with a damaged cord or plug.
- Do not use the vacuum cleaner to pick up flammable or combustible liquids, such as gasoline, or use in areas where they may be present.
- Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.
- Use only as described in this manual. Use only manufacturer's recommended attachments.
- Turn off all controls before unplugging.
- Exercise extra care when cleaning on stairs.
- Do not use without dust bin and/or filters in place.
- Always remove the battery pack before performing any maintenance or cleaning.
- Store the vacuum cleaner indoors in a cool, dry area.

PRODUCT OVERVIEW

The LG CordZero A9 Stick Vacuum is designed for powerful and convenient cleaning across various floor types. Its cordless design and long-lasting battery provide exceptional flexibility.





The LG CordZero A9 Stick Vacuum, shown here with its charging stand, features a sleek design and integrated storage for accessories.





A direct front view of the LG CordZero A9, highlighting its slim profile and ergonomic handle.



Close-up of the Power Drive Nozzle, designed for effective cleaning on both carpets and hard floors.



The removable dustbin and washable filter system of the LG CordZero A9, illustrating ease of maintenance.

Key Components:

- **Main Body:** Contains the motor, dustbin, and controls.
- **Extension Pipe:** Connects the main body to the cleaning nozzle, adjustable for height.
- **Power Drive Nozzle:** Motorized brush head for efficient cleaning of various surfaces.

- **Battery Pack:** Rechargeable Lithium-Ion battery, with an extra battery included for extended cleaning time.
- **Charging Stand:** Provides convenient storage and charging for the vacuum and spare battery.
- **Combination Tool:** A versatile attachment for dusting and crevice cleaning.
- **Crevice Tool:** Ideal for reaching tight spaces and corners.

SETUP AND ASSEMBLY

Follow these steps to assemble your LG CordZero A9 Stick Vacuum and prepare it for first use.

1. **Unpack Components:** Carefully remove all parts from the packaging. Ensure all listed components are present.
2. **Assemble the Main Unit:**
 - Insert the extension pipe into the main body until it clicks securely into place.
 - Attach the Power Drive Nozzle to the other end of the extension pipe, ensuring it clicks into place.
3. **Install Battery:** Insert a fully charged battery pack into the battery slot on the main body until it locks. The vacuum comes with two batteries.
4. **Set Up Charging Stand:**
 - Assemble the charging stand according to the separate instructions provided with the stand.
 - Place the assembled vacuum onto the charging stand. The stand also has a slot for charging the spare battery.
 - Connect the power adapter to the charging stand and plug it into a wall outlet. The battery indicator lights will illuminate during charging. A full charge takes approximately 3.5 hours.





The LG CordZero A9 fully assembled and placed on its charging stand, ready for use or charging.

OPERATING INSTRUCTIONS

Learn how to effectively use your LG CordZero A9 Stick Vacuum for various cleaning tasks.

Powering On and Off:

- Press the **Power** button to turn the vacuum on.
- Press the **Power** button again to turn the vacuum off.

Adjusting Suction Power:

The vacuum offers multiple suction modes for different cleaning needs:

- **Normal Mode:** For everyday light cleaning and extended battery life.
- **Power Mode:** For moderate cleaning tasks and increased suction.
- **Turbo Mode:** Provides maximum suction for stubborn dirt and deep cleaning. Press the **Turbo** button to activate.

Cleaning Different Surfaces:

The Power Drive Nozzle is suitable for both hard floors and carpets. For optimal performance, ensure the nozzle is clean and free of obstructions.



The flexible design of the LG CordZero A9 allows for easy cleaning of stairs and other elevated surfaces.



Detach the main body to use the LG CordZero A9 as a handheld vacuum, perfect for cleaning car interiors or furniture.

Using Attachments:

- **Combination Tool:** Attach directly to the main body or extension pipe for dusting surfaces or cleaning upholstery.
- **Crevice Tool:** Ideal for narrow gaps, corners, and edges. Attach directly to the main body or extension pipe.

MAINTENANCE AND CLEANING

Regular maintenance ensures your LG CordZero A9 operates efficiently and extends its lifespan.

Emptying the Dustbin:

1. Ensure the vacuum is turned off.
2. Locate the dustbin release button on the main body.
3. Press the button and remove the dustbin.
4. Hold the dustbin over a trash can and open the bottom flap to empty debris.
5. Close the flap and reattach the dustbin to the main body until it clicks.

Cleaning the Filters:

The LG CordZero A9 features washable filters. Clean them regularly for optimal suction.



Illustration of how to access and remove the washable filter from the LG CordZero A9 dustbin.

1. Remove the dustbin from the main body.
2. Twist and pull to remove the metal filter and then the pre-filter from inside the dustbin.
3. Rinse both filters under running water until the water runs clear.
4. Allow the filters to air dry completely for at least 24 hours before reinserting them. Do not use a dryer or direct heat.
5. Reassemble the filters and dustbin.

Cleaning the Power Drive Nozzle:

- Turn off the vacuum and detach the Power Drive Nozzle.
- Locate the brush bar release mechanism (usually a latch or screw) and remove the brush bar.
- Remove any tangled hair, threads, or debris from the brush bar and the nozzle opening.
- Reinsert the brush bar and secure it.

TROUBLESHOOTING

If you encounter issues with your LG CordZero A9, refer to the following common problems and solutions.

| Problem | Possible Cause | Solution |
|---------------------------------|---|---|
| Vacuum does not turn on. | Battery is not charged or not properly inserted. | Ensure battery is fully charged and securely inserted. Check charging stand connection. |
| Reduced suction power. | Dustbin is full, filters are clogged, or nozzle/pipe is blocked. | Empty dustbin. Clean or wash filters. Check for blockages in the nozzle, extension pipe, and main body. |
| Brush bar not rotating. | Debris tangled in brush bar or brush bar is not properly installed. | Remove debris from brush bar. Ensure brush bar is correctly reinserted and secured. |
| Unusual noise during operation. | Blockage in the air path or foreign object in the brush bar. | Turn off and inspect all parts for blockages. Remove any foreign objects. |

If the problem persists after attempting these solutions, please contact LG customer support.

SPECIFICATIONS

Detailed technical specifications for the LG CordZero A9 Stick Vacuum (Model A906SM).

| | |
|--------------------------|---|
| Brand: | LG |
| Model: | A906SM |
| Power: | 400 watts |
| Battery Type: | Lithium-Ion (2 batteries included) |
| Charging Time: | Approximately 3.5 hours |
| Dustbin Capacity: | 13.5 ounces |
| Noise Level: | 84 dB |
| Product | |
| Dimensions: | 44.1"L x 10.6"W x 10.2"H |
| Item Weight: | 5.89 pounds |
| Filter Type: | Cartridge (Washable) |
| Special Features: | Adjustable, Easy To Clean, Removable Components |

WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the official LG website or the warranty card included with your product.

- **Official User Guide (PDF):** For a detailed digital copy of the user manual, you can download it from the official LG support page or via this direct link: [LG CordZero A9 User Guide PDF](#).
- **LG Customer Service:** Visit www.lg.com/us/support for product registration, troubleshooting tips, service requests, and contact information.
- **Warranty Coverage:** Specific warranty terms and conditions may vary by region and purchase date. Please retain your proof of purchase for warranty claims.

