

Manuals.plus /

› Easytry123 /

› Remote Control for Samsung UN55MU8000 UN55MU8000FXZA UN55MU800D UN55MU800DFXZA UN55MU9000FXZA UN40MU7000FXZA 4K UDH HDTV TV - User Manual

Easytry123 Easytry4083

Easytry123 Replacement Remote Control User Manual

Brand: Easytry123 | Model: Easytry4083

INTRODUCTION

This manual provides essential information for the setup, operation, and maintenance of your Easytry123 replacement remote control. This remote is designed to be compatible with various Samsung 4K UDH HDTV TV models, including UN55MU8000, UN55MU8000FXZA, UN55MU800D, UN55MU800DFXZA, UN55MU9000FXZA, and UN40MU7000FXZA. Please read this manual thoroughly to ensure proper use and to maximize the functionality of your remote control.

Important Note: As a replacement unit, this remote may not support all functions present on the original equipment manufacturer (OEM) remote control. Ensure your TV model is listed in the compatible models before use.

PACKAGE CONTENTS

- 1 x Easytry123 Replacement Remote Control (Model: Easytry4083)

Note: Batteries and a printed manual are not included in the package.

SETUP

1. Battery Installation

The remote control requires two (2) AAA batteries for operation. Follow these steps to install the batteries:

- Locate the battery compartment on the back of the remote control.
- Slide the battery compartment cover downwards or in the direction indicated by an arrow to open it.
- Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
- Replace the battery compartment cover by sliding it back into place until it clicks securely.



Figure 1: Rear view of the remote control showing the battery compartment and battery insertion.

2. Initial Pairing (If Required)

This remote control typically operates via infrared (IR) and should work directly with compatible Samsung TV models without complex pairing. Simply point the remote at your TV and press a button. If the remote does not respond, ensure:

- The batteries are fresh and correctly installed.
- There are no obstructions between the remote's IR emitter and the TV's IR receiver.
- Your TV model is listed as compatible.

For some Samsung Smart TVs, a simple pairing might be needed if the remote has advanced features (though this replacement is primarily IR). If your TV has a pairing option in its settings, refer to your TV's original manual for specific pairing instructions. For most basic functions, direct IR operation is expected.

OPERATING INSTRUCTIONS

The Easytry123 replacement remote control is designed for intuitive use. Below is a general guide to its buttons and their functions. Please note that specific button labels and functions may vary slightly depending on your TV model and the original remote's layout.



Figure 2: Front view of the Easytry123 replacement remote control.

Remote Control Button Functions

Button	Function
--------	----------

Button	Function
Power ()	Turns the TV On or Off.
Navigation Pad (Up/Down/Left/Right/Enter)	Navigates through menus and selects options.
Volume (VOL +/-)	Adjusts the TV volume up or down.
Channel (CH +/-)	Changes the TV channel up or down.
Home (△)	Accesses the TV's Smart Hub or Home screen.
Back (↶)	Returns to the previous screen or menu.
Play/Pause (▶)	Controls media playback (play/pause).
123 / EXTRA	May bring up a virtual number pad or access extra functions depending on TV model.

For advanced functions or specific smart TV features, some buttons may require your TV to be in a particular mode or application. Refer to your Samsung TV's original user manual for detailed information on its specific features.

MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the remote control. Do not use liquid cleaners or abrasive materials, as they may damage the surface or internal components.
- **Battery Replacement:** Replace batteries when the remote's response becomes sluggish or stops working. Always replace both batteries at the same time with new AAA batteries. Do not mix old and new batteries, or different types of batteries.
- **Storage:** If the remote control will not be used for an extended period, remove the batteries to prevent leakage and potential damage. Store the remote in a cool, dry place.
- **Avoid Damage:** Do not drop the remote control, expose it to extreme temperatures, or immerse it in water.

TROUBLESHOOTING

Common Issues and Solutions

Problem	Possible Cause / Solution
Remote is not working.	◦ Batteries: Check if batteries are inserted correctly (+/-). Replace with new AAA batteries. ◦ Line of Sight: Ensure there are no obstructions between the remote and the TV's IR receiver. ◦ Compatibility: Verify your TV model is listed as compatible with this remote.

Problem	Possible Cause / Solution
Some functions do not work.	◦ Replacement Limitations: As a replacement remote, not all original functions may be supported. ◦ TV Mode: Some functions may only work in specific TV modes or applications. ◦ Advanced Features: Advanced Smart TV features might require the original remote or a specific pairing process not supported by this IR replacement.
Battery cover does not close properly.	◦ Battery Size: Ensure you are using standard AAA batteries. ◦ Alignment: Check if the batteries are seated correctly and not protruding.

If you continue to experience issues after attempting these solutions, please refer to the product's return policy or contact the seller for further assistance.

SPECIFICATIONS

- **Model:** Easytry4083
- **Brand:** Easytry123
- **Connectivity Technology:** Infrared (IR)
- **Compatible Devices:** Television (Specific Samsung 4K UDH HDTV models)
- **Max Number of Supported Devices:** 1
- **Power Source:** 2 x AAA Batteries (not included)
- **Manufacturer:** Easytry123
- **Country of Origin:** China

WARRANTY AND SUPPORT

This product is a replacement remote control. For specific warranty information, please refer to the seller's policy at the time of purchase. Typically, replacement items may have limited or no direct manufacturer warranty. For any operational issues or questions not covered in this manual, please contact the seller directly through the platform where the purchase was made.

Return Policy: The buybox winner indicates a 30-day return policy for refund/replacement. Please check the specific return policy of your seller.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B07K31H5XC>

More documents and user manuals: <https://manuals.plus/>