

Manuals.plus /

› Easytry123 /

› Easytry123 Replacement Remote Control User Manual for Samsung HDTVs (Models: UN58MU6070FXZA, UN60MU630D, UN40K6250AF, UN40KU6300F)

## Easytry123 Easytry4073

# Easytry123 Replacement Remote Control User Manual

Model: Easytry4073

Compatible with Samsung LED HDTV Models: UN58MU6070FXZA, UN60MU630D, BN59-01260A, RMCSPK1AP2, UN40K6250AF, UN40K6250AFXZA, UN40KU6300F

## 1. INTRODUCTION

This manual provides instructions for the Easytry123 Replacement Remote Control, Model Easytry4073. This remote is designed as a functional replacement for various Samsung LED HDTV models. Please note that while this remote provides essential control, some advanced or specific functions of your original TV remote may not be fully supported. Refer to your television's original manual for comprehensive feature details.

## 2. SETUP AND BATTERY INSTALLATION

The Easytry123 Replacement Remote Control operates using standard AAA batteries. No complex programming is typically required for compatible Samsung TV models; simply insert the batteries, and the remote should be ready for use.

### 2.1. Battery Requirements

- Requires: Two (2) AAA batteries (not included).
- Always use new batteries for optimal performance.
- Do not mix old and new batteries, or different types of batteries.

### 2.2. Installing Batteries

1. Locate the battery compartment on the back of the remote control.
2. Press down on the latch and slide the battery cover downwards to open it.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Slide the battery cover back into place until it clicks securely.



Figure 1: Rear view of the remote control showing the open battery compartment with two AAA batteries inserted. The positive and negative terminals are clearly marked.

### 3. OPERATING THE REMOTE CONTROL

---

Once batteries are installed, point the remote control directly at your Samsung LED HDTV. The remote uses infrared (IR) technology, so ensure there are no obstructions between the remote and the TV's IR receiver.



Figure 2: Front view of the Easytry123 replacement remote control, displaying its buttons and layout.

#### 3.1. Basic Functions

- **Power Button (●):** Turns the TV on or off.
- **Volume Up/Down (VOL):** Adjusts the sound volume.
- **Channel Up/Down (CH):** Changes TV channels.
- **Navigation Pad (Directional Arrows & Enter):** Used to navigate menus and select options.
- **Back (↶):** Returns to the previous screen or menu.
- **Home (△):** Accesses the Smart Hub or main menu.

- **Play/Pause/Stop/Fast Forward/Rewind:** Controls media playback.
- **123 Button:** May bring up a virtual number pad for direct channel input.
- **EXTRA Button:** Functionality may vary or be limited depending on the TV model.

*Note: As a replacement remote, some advanced features or specific buttons found on your original Samsung remote (e.g., voice control, specific app shortcuts) may not be present or fully functional. The primary functions for TV operation are supported.*

## 4. MAINTENANCE

### 4.1. Cleaning

To clean the remote control, use a soft, dry cloth. Do not use liquid cleaners, sprays, or abrasive materials, as these can damage the remote's surface or internal components.

### 4.2. Battery Replacement

Replace batteries when the remote's response becomes sluggish or stops working. Follow the battery installation steps in Section 2.2. Dispose of used batteries responsibly according to local regulations.

## 5. TROUBLESHOOTING

Problem	Possible Cause / Solution
Remote is not working at all.	<ul style="list-style-type: none"> <li>• Check if batteries are inserted correctly with correct polarity (+/-).</li> <li>• Replace old batteries with new AAA batteries.</li> <li>• Ensure there are no obstructions between the remote and the TV's IR receiver.</li> <li>• Verify the remote is pointed directly at the TV.</li> </ul>
Some buttons or advanced functions do not work.	<ul style="list-style-type: none"> <li>• This is a replacement remote; it may not support all advanced features or specific buttons of your original TV remote.</li> <li>• Basic functions (Power, Volume, Channel, Navigation) should generally work.</li> <li>• Consult your TV's original manual for specific feature requirements.</li> </ul>
Remote works intermittently.	<ul style="list-style-type: none"> <li>• Batteries may be low; replace them.</li> <li>• Ensure a clear line of sight to the TV's IR receiver.</li> </ul>

## 6. SPECIFICATIONS

- **Model Number:** Easytry4073
- **Brand:** Easytry123
- **Compatible Devices:** Samsung LED HDTVs (Specific models listed in header)
- **Connectivity Technology:** Infrared (IR)
- **Power Source:** 2 x AAA Batteries (not included)

- **Color:** Black
- **Special Feature:** Universal Replacement

## 7. WARRANTY AND SUPPORT

---

For information regarding warranty, returns, or technical support, please refer to the retailer or manufacturer's official website where the product was purchased. Keep your purchase receipt as proof of purchase.