



[Manuals.plus](#) /

> [Easytry123](#) /

> Easytry123 Replacement Remote Control for Samsung 4K UHD HDTV TVs (Model Easytry4076) - User Manual

## Easytry123 Easytry4076

# Easytry123 Replacement Remote Control User Manual

Model: Easytry4076

## INTRODUCTION

---

This manual provides essential instructions for the setup, operation, and maintenance of your Easytry123 replacement remote control. This remote is designed to be compatible with various Samsung 4K UHD HDTV models. Please read this manual thoroughly before use to ensure proper functionality.

## SETUP

---

### Battery Installation

The Easytry123 replacement remote control requires two (2) AAA alkaline batteries for operation. Batteries are not included with the remote control.

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery cover downwards and lift it off to open the compartment.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Replace the battery cover by sliding it back into position until it clicks securely.



Image: Back of the remote control with the battery compartment open, illustrating where to insert the AAA batteries.

After installing the batteries, the remote control is ready for use with compatible Samsung TVs. No additional programming is typically required for this replacement remote.

## OPERATING INSTRUCTIONS

---

This replacement remote control operates using infrared (IR) technology. For optimal performance, ensure there is a clear line of sight between the remote control and the IR receiver on your Samsung TV.

### Basic Functions

- **Power Button:** Press to turn the TV on or off.
- **Volume Up/Down:** Adjusts the TV's volume level.
- **Channel Up/Down:** Changes the TV channel.
- **Mute Button:** Silences the TV audio.
- **Input/Source Button:** Cycles through available input sources (e.g., HDMI 1, HDMI 2, TV).
- **Number Buttons (0-9):** Directly enter channel numbers.
- **Navigation Buttons (Up, Down, Left, Right, Enter):** Used to navigate menus and select options on the TV screen.

Please note that while this remote is designed as a replacement, some advanced or specific functions of your original TV remote may not be fully supported. Refer to your TV's original manual for specific TV features.

## MAINTENANCE

---

## Battery Replacement

Replace batteries when the remote control's performance degrades or stops responding. Always replace both batteries simultaneously with new AAA alkaline batteries. Do not mix old and new batteries, or different types of batteries.

## Cleaning

To clean the remote control, gently wipe it with a soft, dry cloth. Do not use liquid cleaners, abrasive pads, or chemical solvents, as these can damage the remote's surface or internal components.

## Storage

Store the remote control in a dry place, away from direct sunlight, extreme temperatures, and high humidity. If the remote will not be used for an extended period, it is recommended to remove the batteries to prevent leakage.

## TROUBLESHOOTING

---

- **Remote not responding:**
  - Ensure batteries are inserted correctly with proper polarity.
  - Replace old batteries with new ones.
  - Check for any obstructions between the remote control and the TV's IR receiver.
  - Ensure you are within the effective range of the TV's IR receiver.
- **Some functions do not work:**
  - This replacement remote may not support all advanced features of your original TV remote. It is designed for primary TV functions.
  - Verify that your TV model is listed as compatible.

## SPECIFICATIONS

---

|                                     |  |
|-------------------------------------|--|
| <b>Brand</b>                        | Easytry123   |
| <b>Model Number</b>                 | Easytry4076  |
| <b>Compatible Devices</b>           | Television   |
| <b>Connectivity Technology</b>      | Infrared (IR)  |
| <b>Controller Type</b>              | Button Control   |
| <b>Special Feature</b>              | Universal (for specified Samsung models)   |
| <b>Number of Batteries</b>          | 2  |
| <b>Battery Type</b>                 | AAA Alkaline   |
| <b>Compatible Television Models</b> | Samsung UN49NU8000FXZA, UN65MU850DFXZA, UN65NU740DFXZA, UN75NU800DFXZA, UN75NU8000FXZA, UN65NU6500FXZA, UN65NU8000FXZA, UN65NU8500FXZA |

## WARRANTY AND SUPPORT

---

Specific warranty information for this Easytry123 replacement remote control is not provided in the product details. For any

issues or inquiries, please refer to the retailer or point of purchase for support options.

© 2023 Easytry123. All rights reserved. This manual is for informational purposes only.