

Denver TSP-205



Denver TSP-205 Portable Speaker Instruction Manual

Model: TSP-205

INTRODUCTION

This instruction manual provides essential information for the safe and efficient operation of your Denver TSP-205 Portable Speaker. Please read this manual thoroughly before using the device and retain it for future reference. This speaker features Bluetooth connectivity, auxiliary input, and an integrated LED light system, delivering 20W of audio output.

PACKAGE CONTENTS

Ensure all items are present upon unpacking:

- 1 x Denver TSP-205 Portable Speaker
- 1 x Charging Cable (USB)
- 1 x Auxiliary Audio Cable (3.5mm)
- 1 x Instruction Manual

Note: Specific cable types (e.g., USB-C, Micro-USB) may vary. Refer to the actual cables included in your package.

PRODUCT OVERVIEW

The Denver TSP-205 is a versatile portable speaker designed for mobile audio playback. It combines powerful sound with convenient features for an enhanced listening experience.



Image: Front view of the Denver TSP-205 Portable Speaker, showcasing its speaker grille and control panel. This image illustrates the general design and layout of the device.

Key features include:

- **Bluetooth Connectivity:** Wirelessly stream audio from compatible devices.
- **Auxiliary Input:** Connect devices via a 3.5mm audio cable.
- **LED Light System:** Integrated lights for visual effects.
- **Portable Design:** Equipped with a handle for easy transport.
- **20W Audio Output:** Delivers clear and powerful sound.

SETUP

1. Charging the Speaker

The speaker is powered by a built-in Lithium-ion battery. Before first use, fully charge the speaker.

1. Connect the charging cable to the speaker's charging port.
2. Connect the other end of the charging cable to a compatible USB power adapter (not included) or a powered USB port.
3. The charging indicator light will illuminate, typically red, during charging.

4. Once fully charged, the indicator light may change color (e.g., turn off or green) or remain lit. Disconnect the speaker from the power source.

Note: A full charge typically takes several hours. Avoid overcharging to prolong battery life.

2. Power On/Off

- **To Power On:** Press and hold the Power button (usually marked with ● or I/O symbol) for a few seconds until an indicator light illuminates or an audible prompt is heard.
- **To Power Off:** Press and hold the Power button again for a few seconds until the indicator light turns off or an audible prompt is heard.

OPERATING INSTRUCTIONS

1. Bluetooth Pairing

To connect your speaker wirelessly to a Bluetooth-enabled device:

1. Ensure the speaker is powered on and in Bluetooth pairing mode. The Bluetooth indicator light will typically flash rapidly. If not, press the Mode button to switch to Bluetooth mode.
2. On your audio source device (e.g., smartphone, tablet, desktop computer), enable Bluetooth and search for available devices.
3. Select "Denver TSP-205" from the list of found devices.
4. Once paired, the speaker will emit an audible confirmation, and the Bluetooth indicator light will stop flashing and remain solid.
5. You can now play audio from your device through the speaker.

Note: The maximum operating range for Bluetooth is approximately 10 meters (33 feet) without obstacles.

2. Auxiliary (AUX) Connection

For devices without Bluetooth or for a wired connection:

1. Connect one end of the 3.5mm auxiliary audio cable to the AUX input port on the speaker.
2. Connect the other end of the cable to the headphone jack or AUX output of your audio source device.
3. Press the Mode button on the speaker to switch to AUX mode.
4. Play audio from your device. Volume can be controlled from both the speaker and the source device.

3. LED Light Control

The speaker features an integrated LED light system. Refer to the control panel for specific buttons or combinations to:

- Turn the LED lights on or off.
- Change light patterns or colors (if applicable).

Consult the markings on the speaker's control panel for the dedicated LED control button.

4. Audio Playback and Volume Control

Use the controls on the speaker's touchpad or your connected device to manage audio playback:

- **Play/Pause:** Press the Play/Pause button.
- **Next Track:** Press the Next Track button.
- **Previous Track:** Press the Previous Track button.
- **Volume Up:** Press the Volume Up button.
- **Volume Down:** Press the Volume Down button.

MAINTENANCE

1. Cleaning

- Always power off the speaker and disconnect it from any power source before cleaning.
- Use a soft, dry, lint-free cloth to wipe the exterior surfaces.
- Do not use abrasive cleaners, waxes, or solvents, as these may damage the finish.
- Avoid getting moisture into any openings.

2. Battery Care

- To maximize battery lifespan, avoid fully discharging the battery frequently.
- If storing the speaker for an extended period, charge it to approximately 50% every few months.
- Do not expose the battery to extreme temperatures (hot or cold).

3. Storage

Store the speaker in a cool, dry place away from direct sunlight, excessive heat, and moisture. Keep it away from strong magnetic fields.

TROUBLESHOOTING

| Problem | Possible Cause | Solution |
|----------------------------|--|--|
| Speaker does not power on. | Battery is discharged. | Charge the speaker fully. |
| No sound from speaker. | Volume is too low; incorrect input mode; device not paired/connected. | Increase speaker and device volume; ensure correct mode (Bluetooth/AUX); re-pair Bluetooth device or check AUX cable connection. |
| Cannot pair via Bluetooth. | Speaker not in pairing mode; device Bluetooth off; too far from speaker. | Ensure speaker is in Bluetooth pairing mode; enable Bluetooth on your device; move device closer to speaker (within 10m). |
| LED lights not working. | LED function is turned off. | Press the dedicated LED control button to activate the lights. |

SPECIFICATIONS



Image: Rear view of the Denver TSP-205 Portable Speaker, illustrating its approximate dimensions: 41 cm (height), 29 cm (width), and 17 cm (depth).

- **Model:** TSP-205
- **Speaker Output Power:** 20 Watts
- **Speaker Type:** Bluetooth Portable Speaker
- **Connectivity:** Bluetooth, Auxiliary (3.5mm)
- **Wireless Range:** Up to 10 meters (33 feet)
- **Special Features:** Bluetooth, LED Light
- **Power Source:** Rechargeable Lithium-ion Battery (1 included)
- **Material:** Metal (grille), Plastic (housing)
- **Control Type:** Touchpad
- **Approximate Dimensions (H x W x D):** 41 cm x 29 cm x 17 cm (Based on product image)

- **Mounting Type:** Tabletop
- **Compatible Devices:** Bluetooth-enabled smartphones, tablets, desktop computers, and devices with 3.5mm audio output.

SAFETY INFORMATION

Please observe the following safety precautions:

- Do not expose the speaker to water, rain, or moisture.
- Avoid placing the speaker near heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- Protect the power cord from being walked on or pinched, particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- Only use attachments/accessories specified by the manufacturer.
- Unplug this apparatus during lightning storms or when unused for long periods of time.
- Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

WARRANTY AND SUPPORT

For warranty information, technical support, or service inquiries, please refer to the warranty card included with your product or visit the official Denver website. Keep your purchase receipt as proof of purchase.

Manufacturer: Denver

Model Number: 111000000000 (Internal Reference)