

[Manuals.plus](#) /

› [Apple](#) /

› Apple iPad Pro 11-inch Wi-Fi 512GB User Manual

Apple MTXU2LL/A

Apple iPad Pro 11-inch Wi-Fi 512GB User Manual

Model: MTXU2LL/A

INTRODUCTION

This manual provides essential information for setting up, operating, maintaining, and troubleshooting your Apple iPad Pro 11-inch Wi-Fi 512GB. Please read these instructions carefully to ensure proper use and to maximize the device's capabilities.

SETUP

1. Unboxing and Package Contents

Upon opening the package, verify that all components are present:

- iPad Pro 11-inch
- USB-C Charge Cable
- 18W USB-C Power Adapter



Image: Front and back view of the Apple iPad Pro 11-inch, showcasing its sleek design and camera placement.

2. Charging the iPad Pro

Before first use, it is recommended to fully charge your iPad Pro. Connect the USB-C Charge Cable to the USB-C port on the iPad Pro and the 18W USB-C Power Adapter. Plug the power adapter into a wall outlet. The battery icon on the screen will indicate charging status.



Image: Side view of the Apple iPad Pro, highlighting the USB-C port for charging and accessories.

3. Powering On and Initial Setup

1. To power on, press and hold the **Top button** until the Apple logo appears.
2. Follow the on-screen instructions to select your language, region, and connect to a Wi-Fi network.
3. Set up **Face ID** for secure authentication.
4. Sign in with your **Apple ID** or create a new one. This is essential for downloading apps, using iCloud, and other Apple services.
5. Configure other settings such as passcode, Siri, and analytics preferences.

OPERATING INSTRUCTIONS

1. Basic Navigation and Gestures

The iPad Pro utilizes intuitive multi-touch gestures for navigation:

- **Swipe Up from the bottom:** Go to the Home screen.
- **Swipe Up and Pause:** Open the App Switcher to view and switch between open apps.
- **Swipe Down from the top-right corner:** Open Control Center.
- **Swipe Down from the top-center:** Open Notification Center.
- **Tap:** Select an item or activate a button.
- **Pinch:** Zoom in or out on photos and web pages.



Image: The vibrant Liquid Retina display of the Apple iPad Pro 11-inch, showcasing its edge-to-edge design.

2. Display Features

Your iPad Pro features an 11-inch edge-to-edge **Liquid Retina display** with **ProMotion technology**, **True Tone**, and wide color support. These technologies provide a smooth, responsive, and color-accurate viewing experience. ProMotion automatically adjusts the display refresh rate up to 120Hz for fluid scrolling and gaming, while True Tone adapts the display's color and intensity to the ambient light.

3. Camera Usage

The iPad Pro is equipped with a 12MP back camera and a 7MP TrueDepth front camera.

- **Back Camera:** Capable of capturing high-resolution photos and 4K video at 30 fps or 60 fps with Smart HDR.
- **Front Camera:** Features Portrait mode, Portrait Lighting, and Smart HDR, ideal for selfies, video calls, and Face ID.



Image: Rear view of the Apple iPad Pro, showing the 12MP camera and the iconic Apple logo.

4. Audio and Connectivity

- **Four Speaker Audio:** Provides immersive sound with wider stereo separation for media consumption.
- **Wi-Fi:** Supports 802.11ac Wi-Fi for fast wireless internet access.
- **USB-C Connector:** Used for charging, data transfer, and connecting various accessories.

5. Battery Life

The iPad Pro offers up to 10 hours of battery life for surfing the web on Wi-Fi, watching video, or listening to music on a single charge.

MAINTENANCE

1. Cleaning Your iPad Pro

To clean your iPad Pro, use a soft, lint-free cloth. Avoid abrasive materials, aerosols, solvents, or ammonia-based cleaners. For stubborn smudges, slightly dampen the cloth with water. Always power off the device before cleaning.

2. Software Updates

Keep your iPad Pro's operating system (iOS) updated to the latest version for optimal performance, security, and new features. Go to **Settings > General > Software Update** to check for and install available updates.

3. Battery Care

To prolong battery lifespan, avoid exposing your iPad Pro to extreme temperatures. For long-term storage, charge the device to about 50% and power it off. Periodically charge it to 50% every six months.

4. Storage Management

Your iPad Pro comes with 512GB of storage. To manage storage, go to **Settings > General > iPad Storage**. Here you can see how much space is being used by apps and media, and offload or delete content as needed.

TROUBLESHOOTING

1. Device Not Responding or Frozen

If your iPad Pro becomes unresponsive, perform a force restart:

1. Press and quickly release the **Volume Up button**.
2. Press and quickly release the **Volume Down button**.
3. Press and hold the **Top button** until the Apple logo appears.

2. Wi-Fi Connectivity Issues

If you experience issues connecting to Wi-Fi:

- Ensure Wi-Fi is enabled in **Settings > Wi-Fi**.
- Restart your Wi-Fi router and modem.
- Forget the network and reconnect: Go to **Settings > Wi-Fi**, tap the "i" icon next to your network, then tap **Forget This Network**. Rejoin the network.
- Reset Network Settings: Go to **Settings > General > Transfer or Reset iPad > Reset > Reset Network Settings**. This will reset all network settings, including Wi-Fi passwords.

3. App Issues

If an app is not working correctly:

- Force quit the app: Swipe up from the bottom of the screen and pause, then swipe the app's preview up and off the screen. Reopen the app.
- Update the app: Check the App Store for updates.
- Delete and reinstall the app.

SPECIFICATIONS

Product Dimensions	10.1 x 1.95 x 7.37 inches
Item Weight	1.03 pounds (468 grams)
Item Model Number	MTXU2LL/A
Brand	Apple
Model Name	11-inch iPad Pro
Memory Storage Capacity	512 GB
Screen Size	11 Inches
Display Resolution Maximum	2388x1668 Pixels
Display Type	Liquid Retina display with ProMotion technology and True Tone
Chip	A12X Bionic chip with Neural Engine
Rear Camera	12MP with Smart HDR and 4K video at 30 fps or 60 fps
Front Camera	7MP TrueDepth with Portrait mode, Portrait Lighting, and Smart HDR
Battery Life	Up to 10 hours (Wi-Fi web surfing, video, music)
Connector	USB-C
In the Box	iPad Pro, USB-C Charge Cable, 18W USB-C Power Adapter
Release Date	November 7, 2018

WARRANTY INFORMATION

Your Apple iPad Pro is covered by a one-year limited warranty from the date of purchase. This warranty covers manufacturing defects and issues under normal use. For detailed terms and conditions, including information on AppleCare+ extended coverage, please refer to the official Apple website or the warranty documentation included with your product.

You can verify your warranty status by visiting checkcoverage.apple.com and entering your device's serial number.

SUPPORT

For further assistance, technical support, or to access additional resources, please visit the official Apple Support website: support.apple.com/ipad

Here you can find FAQs, user guides, community forums, and contact options for Apple support specialists.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question