

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [AKAMATE](#) /

› [AKAMATE Kids Action Camera User Manual](#)

AKAMATE K2

AKAMATE Kids Action Camera User Manual

Model: K2

INTRODUCTION

Welcome to the AKAMATE Kids Action Camera user manual. This guide provides comprehensive instructions for setting up, operating, maintaining, and troubleshooting your new camera. Designed for children aged 4-12, this durable and waterproof camera allows young adventurers to capture their most memorable moments in HD 1080p video and 5MP photos. It comes equipped with a 2-inch color screen, built-in games, and a 32GB Micro SD card for immediate use. Please read this manual carefully before using the camera to ensure optimal performance and longevity.

WHAT'S INCLUDED

Your AKAMATE Kids Action Camera package includes the following items:

- AKAMATE Kids Action Camera (Pink)
- Waterproof Case
- 32GB Micro SD Card
- USB Charging Cable
- Rechargeable Lithium-Ion Battery (1000mAh)
- Various Mounting Kits (for bikes, helmets, etc.)
- Durable Neck Strap
- Zipper Carry Bag
- User Manual (this document)

Gift Packing

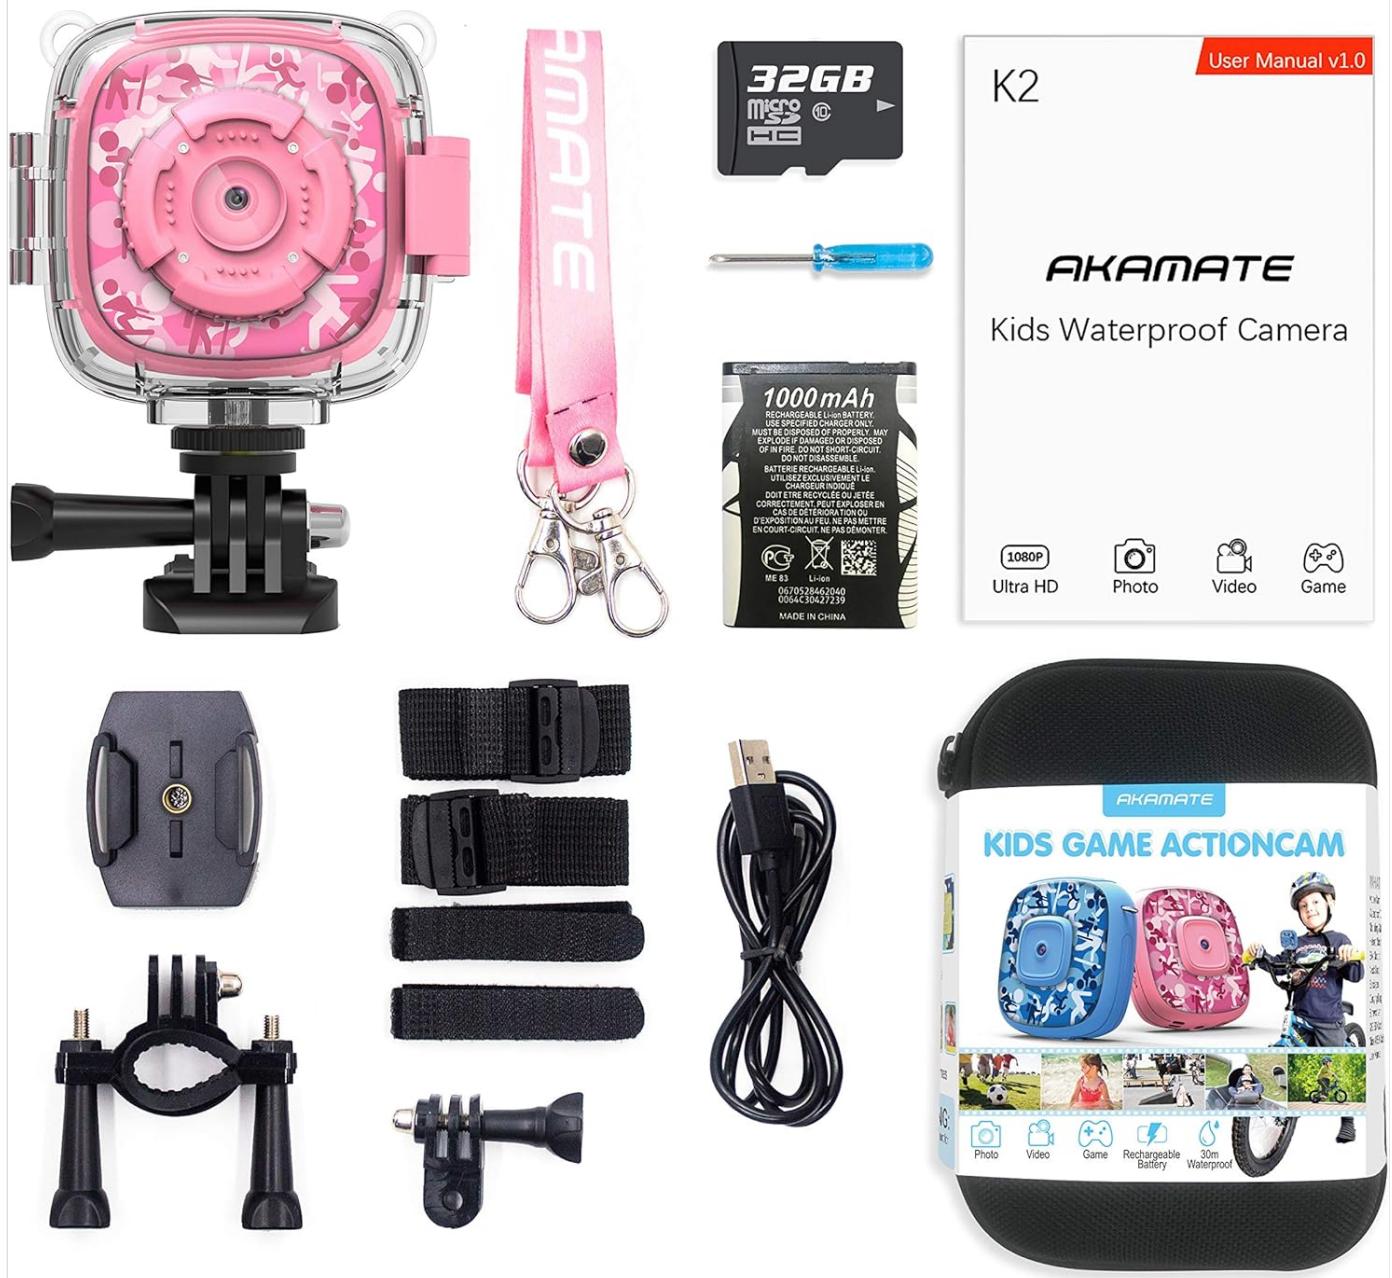


Image: All components included in the AKAMATE Kids Action Camera package, neatly arranged. This includes the camera, waterproof case, various mounts, charging cable, and carrying case.

SETUP

1. Charging the Battery

Before first use, ensure the camera's battery is fully charged. The camera comes with a built-in 1000mAh rechargeable battery.

1. Locate the battery compartment on the camera.
2. Ensure the battery power switch is in the "ON" position.
3. Connect the provided USB charging cable to the camera's USB port and the other end to a compatible USB power adapter (not included) or computer.
4. The charging indicator light will illuminate. Charging typically takes 2-3 hours.
5. Once fully charged, the indicator light may change or turn off. Disconnect the cable.

Tip: It is recommended to charge the battery when the camera is powered off for faster charging.

2. Inserting the Micro SD Card

The camera supports a Max Class 10 Micro SD card up to 32GB. A 32GB card is included with your purchase.

1. Open the Micro SD card slot cover on the side of the camera.
2. Insert the 32GB Micro SD card into the slot with the gold contacts facing down, until it clicks into place.
3. Close the cover securely.



Image: The AKAMATE Kids Action Camera in its waterproof case, alongside the included 32GB Micro SD card, ready for insertion.

3. Attaching the Waterproof Case

For underwater use or protection against splashes and drops, use the durable waterproof case.

1. Open the latch on the waterproof case.

2. Carefully place the camera inside the case, ensuring it fits snugly.
3. Close the latch firmly until it clicks, creating a watertight seal.

Warning: Always test the waterproof case without the camera inside first to ensure no leaks. The case is designed for depths up to 30m (100ft).



Image: The AKAMATE Kids Action Camera submerged in its waterproof case, demonstrating its capability for underwater use.

OPERATING THE CAMERA

Basic Controls

Button	Function
Power Button ()	Press and hold to turn ON/OFF. Short press to switch modes (Photo/Video/Playback/Games).

Button	Function
OK Button	Confirm selection, take photo, start/stop video recording.
Up/Down Buttons (▲/▼)	Navigate menu options, zoom in/out (if applicable).
Menu Button	Access settings menu.

Photo Mode

To take photos:

1. Turn on the camera.
2. Press the Power button until you are in Photo Mode (indicated by a camera icon on the screen).
3. Frame your shot using the 2-inch color screen.
4. Press the OK button to capture the photo.

The camera features 5MP photo resolution.



HD 1080p
Video



2" Color
Screen



5MP
Photo



HD Resolution

HD 1080p@/30fps videos and 5MP bright photos, you can capture the most memorable moments.

Image: The camera's screen showing a captured image, highlighting its HD 1080p video and 5MP photo capabilities.

Video Mode

To record videos:

1. Turn on the camera.
2. Press the Power button until you are in Video Mode (indicated by a video camera icon).
3. Press the OK button to start recording. A red dot or timer will appear on the screen.
4. Press the OK button again to stop recording.


The camera records HD 1080p video at 30 frames per second (fps).

Playing Games

The camera includes 3 fun built-in games for entertainment.

1. Turn on the camera.

2. Press the Power button until you are in Game Mode (indicated by a game controller icon).
3. Use the Up/Down buttons to select a game and the OK button to start playing.

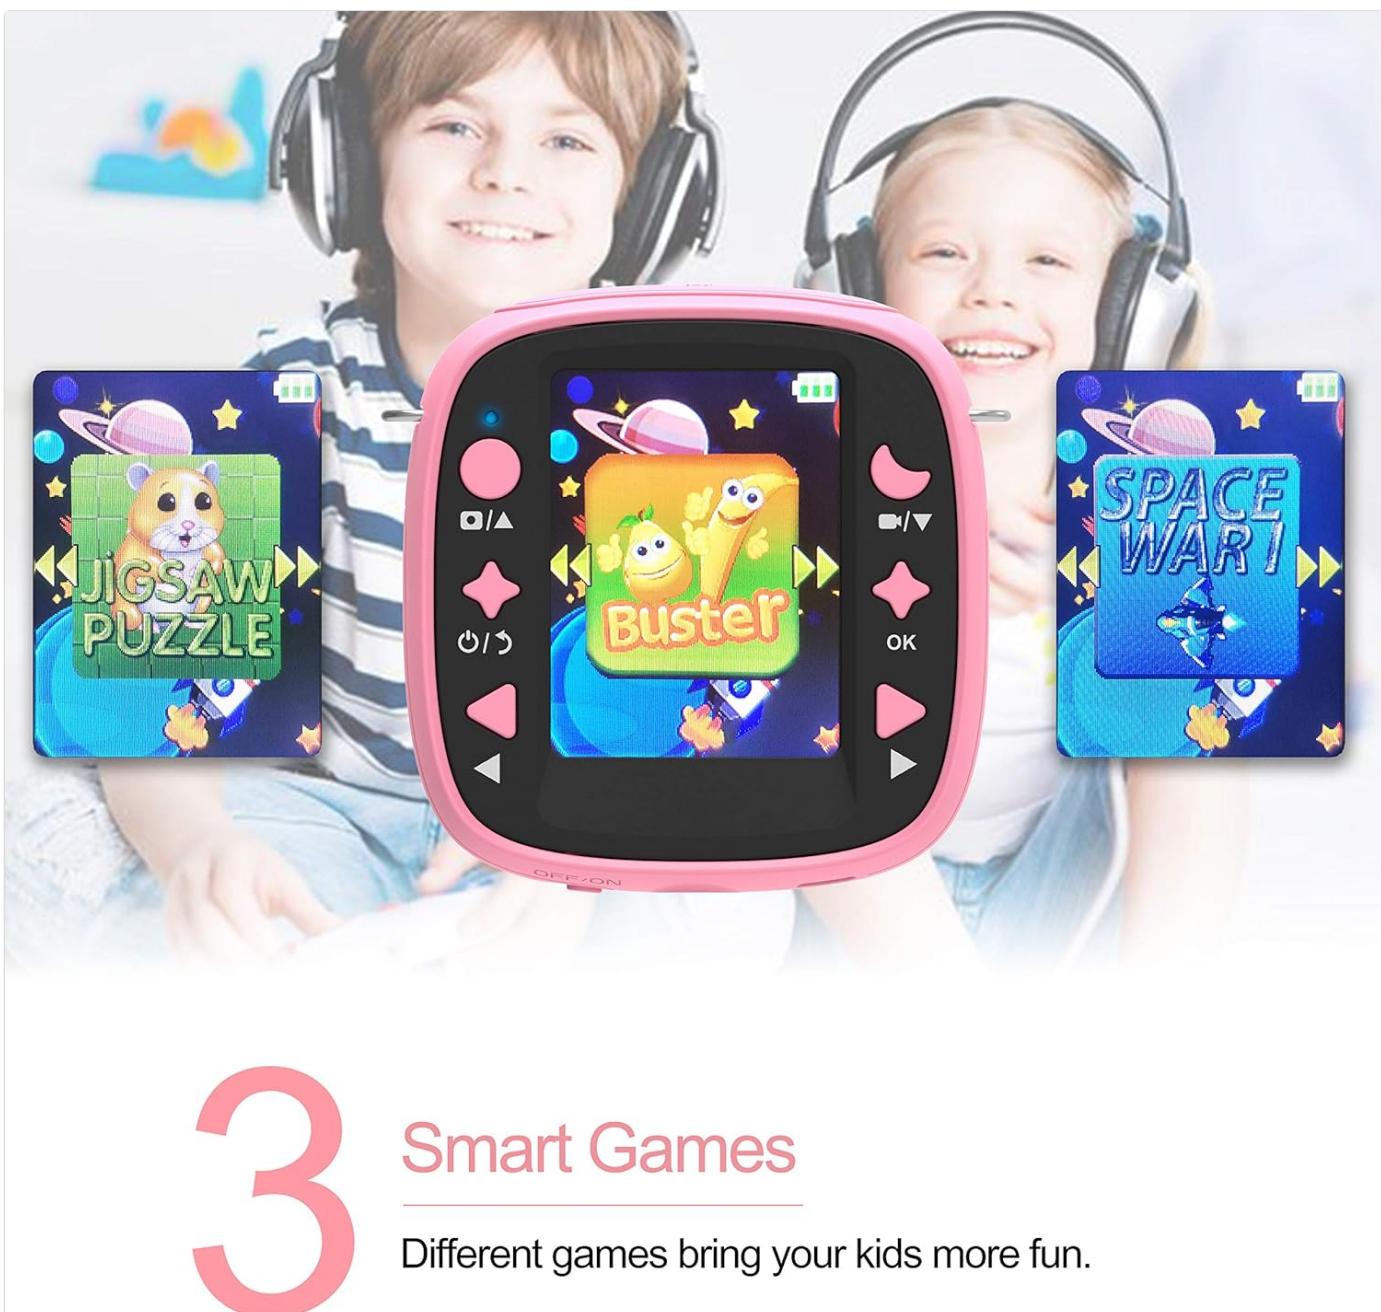

3 Smart Games

Different games bring your kids more fun.

Image: The camera's screen showing the selection of three built-in smart games, offering additional entertainment.

Applying Photo Frames

Enhance your photos with 5 different built-in frame effects.

1. In Photo Mode, press the "right" and "left" buttons to cycle through the available photo frames.
2. Select your desired frame before taking a picture.



5 Different Photo Frames

In photo mode, press “right” and “left” button to switch frame.

Image: A visual representation of the five different photo frames available on the camera, which can be applied in photo mode.

Connecting to a Computer

To transfer photos and videos to a computer:

1. Ensure the camera is powered on.
2. Connect the camera to your computer using the provided USB cable.
3. The camera will appear as a removable disk drive on your computer.
4. You can then drag and drop files to your computer.

Alternatively, you can remove the Micro SD card and insert it into a card reader connected to your computer for faster transfer.

MAINTENANCE

Cleaning the Camera and Case

- Use a soft, dry cloth to clean the camera body.

- For the waterproof case, rinse with fresh water after saltwater use and allow to air dry.
- Avoid using harsh chemicals or abrasive cleaners.

Battery Care

- Charge the battery regularly, even if not in use, to maintain its lifespan.
- Do not expose the battery to extreme temperatures.
- If the camera will not be used for an extended period, store it with a partially charged battery.

Storage

Store the camera and its accessories in the provided zipper carry bag to protect them from dust and damage.



Image: The AKAMATE Kids Action Camera and its various accessories, including the carrying case, demonstrating how to keep all components organized and protected.

TROUBLESHOOTING

Problem	Possible Solution
Camera won't turn on.	Ensure the battery is charged. Check if the battery power switch is "ON".
Camera freezes or is unresponsive.	Remove and reinsert the battery to perform a hard reset.
Cannot take photos/videos.	Check if the Micro SD card is inserted correctly and has sufficient free space. Format the SD card if necessary (this will erase all data).
Poor image/video quality.	Ensure adequate lighting. Clean the camera lens. For best results, use in well-lit environments.
Water inside the waterproof case.	Immediately remove the camera. Dry both the camera and case thoroughly. Check the case's seal and latches for damage or improper closure. Do not use underwater again if leaks persist.

SPECIFICATIONS

- **Model:** K2
- **Video Resolution:** 1080p@30fps, 720p
- **Photo Resolution:** 5MP
- **Screen Size:** 2-inch Color Screen
- **Battery:** Built-in 1000mAh Rechargeable Lithium-Ion
- **Storage:** Supports Micro SD Card up to 32GB (Class 10 recommended)
- **Waterproof Depth:** Up to 30m (100ft) with waterproof case
- **Connectivity:** USB
- **Dimensions:** 6.61 x 4.88 x 2.8 inches
- **Weight:** 1.01 pounds
- **Special Features:** Built-in 4 Games, 5 Photo Frame Effects

WARRANTY AND SUPPORT

AKAMATE provides customer service and support for its products. If you encounter any issues or have suggestions regarding your AKAMATE Kids Action Camera, please contact our customer service team. We offer 24-hour online support to assist you with any problems. For warranty information and further assistance, please refer to the contact details provided on the product packaging or the official AKAMATE website.

PRODUCT VIDEOS

Unboxing of AKAMATE Kids' Action Camera

Your browser does not support the video tag.

Video Description: This video provides an unboxing experience of the AKAMATE Kids' Action Camera, showcasing the contents of the package as they are revealed. It gives a first look at the camera and its accessories.

Excellent Toddler Camera!!

Your browser does not support the video tag.

Video Description: This video highlights the features and quality of the AKAMATE Kids Action Camera, emphasizing its suitability for toddlers. It showcases the camera's build quality, case, and overall contents.

© 2023 AKAMATE. All rights reserved.