

Princess 01.182025.01.001

Princess Digital Airfryer User Manual

Model: 01.182025.01.001

1. INTRODUCTION

Thank you for choosing the Princess Digital Airfryer. This appliance allows you to cook, fry, and grill a variety of delicious snacks and meals with significantly less fat, utilizing hot air circulation technology. Its generous 4.5-liter capacity is ideal for families, enabling you to prepare up to 7 portions of fries in a single session. With its 1500W power, it heats up quickly and cooks efficiently, offering substantial energy savings compared to traditional ovens.

2. IMPORTANT SAFETY INSTRUCTIONS

Please read all instructions carefully before using the appliance and keep them for future reference. Improper use can lead to personal injury and damage to the appliance.

- Always place the appliance on a stable, heat-resistant surface, away from walls or other appliances to ensure proper ventilation.
- Do not immerse the appliance, cord, or plug in water or any other liquid.
- Ensure the voltage indicated on the appliance matches your local mains voltage before connecting.
- Do not operate the appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- Keep children and pets away from the appliance during operation. The outer surfaces may become hot.
- Do not block any ventilation openings.
- Never fill the basket with oil or fat. This appliance works with hot air.
- Unplug the appliance from the outlet when not in use and before cleaning.
- Allow the appliance to cool down completely before handling or cleaning.

3. PRODUCT OVERVIEW

Familiarize yourself with the components of your Princess Digital Airfryer.



Figure 3.1: Front view of the Princess Digital Airfryer, displaying 180 degrees Celsius on its digital screen. This shows the main unit with its sleek black finish and the digital control panel.



Figure 3.2: Detailed view of the digital control panel, showing the temperature and timer dial, along with various cooking icons for pre-set programs.



Figure 3.3: The removable basket and grill plate, designed for easy cleaning thanks to their non-stick coating.

4. SETUP

Before first use, follow these steps:

1. Remove all packaging materials and stickers from the appliance.
2. Clean the basket and grill plate thoroughly with hot water, dish soap, and a non-abrasive sponge.
3. Wipe the inside and outside of the appliance with a damp cloth.
4. Ensure all parts are completely dry before use.

5. OPERATING INSTRUCTIONS

The Princess Digital Airfryer features a user-friendly digital control panel with 8 pre-recorded programs and manual adjustment options.

5.1 Preheating

- Plug the appliance into a grounded wall outlet.
- Press the power button to turn on the display.
- Select your desired temperature using the temperature control button.
- Set the timer for 3-5 minutes for preheating. The appliance will indicate when preheating is complete.

5.2 Cooking with Presets

The airfryer comes with 8 pre-set programs for common dishes:

- Place ingredients into the basket. Do not overfill.
- Insert the basket back into the airfryer.
- Select one of the 8 pre-set programs by pressing the mode button until the desired icon is highlighted. The appliance will automatically set the optimal temperature and time.
- Press the start button to begin cooking.

5.3 Manual Cooking

- Place ingredients into the basket.
- Insert the basket back into the airfryer.
- Use the temperature control to set the desired cooking temperature (e.g., 180°C for fries).
- Use the timer control to set the desired cooking time (up to 30 minutes).
- Press the start button to begin cooking.
- For even cooking, shake the basket halfway through the cooking time, especially for fries or smaller items.



Figure 5.1: The airfryer basket filled with crispy golden fries, ready for serving.



Figure 5.2: The airfryer basket containing colorful chopped vegetables, demonstrating its versatility for various dishes.

6. MAINTENANCE AND CLEANING

Regular cleaning ensures optimal performance and extends the lifespan of your airfryer. The non-stick coating on the basket and pan makes cleaning easy.

- Always unplug the appliance and allow it to cool completely before cleaning.
- Remove the basket and grill plate. Wash them with hot water, dish soap, and a non-abrasive sponge. They are also dishwasher safe.
- Wipe the exterior of the appliance with a damp cloth. Do not use harsh abrasive cleaners.

- Clean the heating element inside the airfryer with a cleaning brush to remove any food residue.
- Ensure all parts are dry before reassembling and storing the appliance.

7. TROUBLESHOOTING

If you encounter issues with your Princess Digital Airfryer, refer to the following common problems and solutions:

- **Appliance does not turn on:** Check if the power cord is securely plugged into a working outlet.
- **Food is not cooked evenly:** Ensure the basket is not overloaded. Shake the basket halfway through cooking for better results. Adjust temperature or cooking time if necessary.
- **White smoke coming from the appliance:** This may be caused by fat residue from previous use. Clean the basket and heating element thoroughly.
- **Fries are not crispy:** Ensure you are using fresh potatoes and that they are properly dried before cooking. Do not overload the basket.

For issues not covered here, please contact customer support.

8. SPECIFICATIONS

Feature	Specification
Brand	Princess
Model Number	01.182025.01.001
Color	Black
Product Dimensions (L x W x H)	31 x 30 x 35 cm
Capacity	4.5 Liters
Power	1500 Watts
Voltage	240 Volts
Material	Plastic
Number of Programs	8
Noise Level	44 dB
Max Timer Setting	30 minutes
Item Weight	4.5 Kilograms
Country of Origin	China

9. WARRANTY AND SUPPORT

Princess products are designed and manufactured to meet high-quality standards and comply with strict European Union regulations, ensuring durability and safety. While specific warranty details may vary by region, Princess is committed to providing reliable home appliances.

For warranty claims, technical support, or any questions regarding your Princess Digital Airfryer, please contact your

local retailer or the official Princess customer support. Keep your proof of purchase for any warranty-related inquiries.

© 2025 Princess. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question