

[Manuals.plus](#) /

› [IKEA](#) /

› IKEA Ribba Frame Black 303.784.30 User Manual

IKEA 303.784.30

IKEA Ribba Frame Black 303.784.30 User Manual

Model: 303.784.30

1. INTRODUCTION

This manual provides essential information for the assembly, use, and maintenance of your IKEA Ribba Frame, model 303.784.30. Please read these instructions carefully before using the product to ensure proper handling and longevity.



Figure 1: Front view of the IKEA Ribba Frame, 16x20 inches, black.

2. SETUP

The IKEA Ribba frame is designed for easy setup. Follow these steps to insert your picture and prepare the frame for display.

1. **Prepare the Frame:** Carefully lay the frame face down on a clean, flat, and soft surface to prevent scratching the front.
2. **Open the Backing:** Locate the metal clips or tabs on the back of the frame. Rotate or bend these clips to release the backing board.

3. **Remove Backing and Mat (if applicable):** Lift off the backing board. If your frame includes a mat (passepartout), decide if you wish to use it. The mat is designed to highlight your artwork and create depth.
4. **Insert Picture:** Place your photograph or artwork face down onto the glass/plastic front. Ensure it is centered and aligned as desired. If using the mat, place your picture behind the mat opening.
5. **Replace Backing:** Carefully place the backing board back into the frame, ensuring it sits flush.
6. **Secure Clips:** Bend or rotate the metal clips back into place to firmly secure the backing board. Ensure all clips are engaged to prevent the picture from shifting.



Figure 2: The IKEA Ribba Frame mounted on a wall, showcasing a picture of barns in a field.

3. OPERATING (DISPLAYING YOUR FRAME)

The IKEA Ribba frame is primarily designed for wall mounting. It can be hung both horizontally and vertically.

- **Wall Mounting:** The frame includes pre-installed hangers on the back for easy wall mounting. Use appropriate wall anchors and screws for your wall type to ensure secure installation. Measure the distance between the hangers to ensure level hanging.

- **Orientation:** The frame can be hung in either portrait (vertical) or landscape (horizontal) orientation, depending on your picture and preference.



Figure 3: The IKEA Ribba Frame displayed on a wall above a white surface with a plant, featuring a historical building image.

4. MAINTENANCE

To keep your IKEA Ribba frame looking its best, follow these simple maintenance guidelines:

- **Cleaning the Frame:** Wipe the frame's plastic surface with a soft, dry cloth. For stubborn marks, a slightly damp cloth can be used, followed by immediate drying. Avoid abrasive cleaners or solvents.
- **Cleaning the Front Protection:** The front protection is made of plastic. Clean it with a soft, dry cloth. Do not use glass cleaner or other chemical sprays, as these can damage the plastic surface.
- **Dusting:** Regularly dust the frame and front protection with a soft, lint-free cloth to prevent dust buildup.
- **Placement:** Avoid placing the frame in direct sunlight or in areas with extreme temperature fluctuations, as this can cause fading of your artwork or warping of the frame over time.



Figure 4: A close-up view of the black frame corner, showing the matte finish.

5. TROUBLESHOOTING

If you encounter any issues with your IKEA Ribba frame, refer to the following common solutions:

- **Picture Does Not Fit:**

- Ensure your picture's dimensions match the frame's opening size (16x20 inches).
- If using the mat, ensure your picture fits within the mat's inner opening. You may need to trim your picture slightly or use a different size.

- **Frame Appears Crooked on Wall:**

- Use a level during installation to ensure the hanging points are aligned.
- Verify that the wall anchors/screws are securely installed and not loose.

- **Dust or Debris Inside Frame:**

- Carefully open the back of the frame as described in the "Setup" section.
- Gently wipe the inside of the plastic front protection and your picture with a clean, dry, lint-free cloth before reassembling.

6. SPECIFICATIONS

Feature	Detail
Brand	IKEA
Model Number	303.784.30
Color	Black
Shape	Rectangular
Mounting Type	Wall Mount
Frame Material	Plastic
Finish Type	Matte
Cover Material	Plastic
Product Dimensions	20 x 16 x 0.99 inches
Picture Size	16x20 inches
Item Weight	1.87 pounds (850 Grams)

7. WARRANTY AND SUPPORT

Specific warranty details for the IKEA Ribba Frame (Model 303.784.30) are not provided within this manual. For information regarding warranty coverage, returns, or customer support, please refer to your purchase receipt or visit the official IKEA website. You may also contact IKEA customer service directly for assistance with product-related inquiries. For further assistance, please visit: www.ikea.com

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question