

Tiny Love TO0630700

Tiny Love Tiny Dreamer Projector Soother Instruction Manual

Model: TO0630700 | Brand: Tiny Love

PRODUCT OVERVIEW

The Tiny Love Tiny Dreamer Projector Soother is a versatile nighttime companion designed to comfort and engage infants and toddlers. This device offers three distinct modes of use: a soothing nightlight, a starlight projector, and a portable lantern. It also features a cry sensor and an MP3 player for customizable audio experiences, providing a nurturing musical environment.

SETUP AND CHARGING

Unpacking

Carefully remove all components from the packaging. Retain packaging for future storage or transport.

Charging

The Tiny Dreamer Projector Soother includes a rechargeable Lithium Polymer battery. Before first use, fully charge the device using the provided USB charging cord. Connect the small end of the USB cable to the charging port on the soother and the larger end to a compatible USB power adapter (not included). The charging indicator light will show charging status.



Image: The bottom of the Tiny Love Tiny Dreamer Projector Soother, highlighting the charging port and control buttons.

OPERATING MODES

Mode 1: Soothing Nightlight

In this mode, the soother emits a warm, soft glow, providing gentle illumination for the nursery. It also features a unique cry sensor designed to activate soothing sounds or lights when the baby cries, helping them to fall back asleep.



Image: The Tiny Love Tiny Dreamer Projector Soother standing upright, emitting a soft glow, with forest animal illustrations visible on its sides.

Mode 2: Starlight Projector

To activate the starlight projector, tilt the product onto its side. This action will project a beautiful starscape onto the ceiling or walls, creating a calming and inspiring visual environment for sweet dreams.



Image: A young child sitting in a crib, looking up at a ceiling illuminated with projected stars and moon shapes from the soother.



Image: An adult holding the Tiny Love Tiny Dreamer Projector Soother on its side, projecting stars onto a wall, with a child sitting nearby observing.

Mode 3: Take-Along Lantern

As your child grows, the integrated secure string allows the soother to be carried around as a portable lantern. This mode provides light wherever needed and allows the child to listen to their favorite tunes on the go.



Image: Two young children sitting on a bed, reading books, with the Tiny Love Tiny Dreamer Projector Soother placed on a bedside table, providing ambient light.

CONTROLS AND FUNCTIONS

The Tiny Dreamer Projector Soother features intuitive controls for easy operation.

- **Power Button:** Press and hold to turn the device on or off.
- **Volume Control:** Adjust the sound output level.
- **Music/Sound Selection:** Cycle through various melodies and sounds, including soothing nighttime melodies and white noise.
- **MP3 Player:** Allows parents to upload and play baby's favorite tunes.
- **Light Brightness/Color:** Adjust the intensity of the nightlight or cycle through different light colors.
- **Timer Settings:** Select between 30-minute, 60-minute, or continuous play options.
- **Projector Activation:** Automatically activates when the device is tilted on its side.

CARE AND MAINTENANCE

- **Cleaning:** Wipe the surface of the soother with a soft, damp cloth. Do not immerse the unit in water.
- **Storage:** Store in a cool, dry place away from direct sunlight when not in use for extended periods.

- **Battery Care:** To prolong battery life, avoid fully discharging the battery frequently. Recharge as needed.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Device does not turn on.	Battery is depleted.	Charge the device using the provided USB cable.
Sound is too quiet (especially white noise).	Volume setting is low; inherent design limitation.	Increase the volume using the volume control buttons. Note that certain sound modes, such as white noise, may have a lower maximum volume output compared to melodies.
Settings are not saved after turning off.	This is expected behavior for certain settings.	Re-select desired sound and light settings each time the device is turned on.
Projector light is dim or not working.	Device not tilted correctly; low battery.	Ensure the soother is placed firmly on its side for projector mode. Recharge the battery if the light is dim.

PRODUCT SPECIFICATIONS

Product Dimensions: 6.25 x 7.75 x 7.88 inches

Item Model Number: TO0630700

Batteries: 1 Lithium Polymer battery (included)

Item Weight: 1.03 pounds

Age Minimum: 0+ months

WARRANTY AND SUPPORT

Tiny Love products are manufactured to high-quality standards. For warranty information, product support, or to inquire about replacement parts, please visit the official Tiny Love website or contact their customer service department.

You can also visit the [Tiny Love Store on Amazon](#) for more information.