

[manuals.plus](#) /› [Esperanza](#) /› [Esperanza EKO010 Microwave Oven 1200W Black User Manual](#)

Esperanza EKO010

Esperanza EKO010 Microwave Oven User Manual

Model: EKO010

1. INTRODUCTION

This manual provides essential instructions for the safe and efficient operation of your Esperanza EKO010 Microwave Oven. Please read this manual thoroughly before using the appliance and retain it for future reference. Proper use and maintenance will ensure optimal performance and extend the lifespan of your microwave oven.

Important Safety Instructions

- Do not attempt to operate this oven with the door open as this can result in harmful exposure to microwave energy.
- Do not place any object between the oven front face and the door or allow soil or cleaner residue to accumulate on sealing surfaces.
- Do not operate the oven if it is damaged. It is particularly important that the oven door closes properly and that there is no damage to the: (1) door (bent), (2) hinges and latches (broken or loosened), (3) door seals and sealing surfaces.
- The oven should not be adjusted or repaired by anyone except properly qualified service personnel.
- Always ensure the turntable and roller ring are correctly positioned before operation.
- Do not heat liquids or other foods in sealed containers as they are liable to explode.
- Only use utensils that are suitable for use in microwave ovens.
- Regularly clean the oven and remove any food deposits.

2. PRODUCT OVERVIEW

The Esperanza EKO010 is a 1200W microwave oven designed for efficient heating, cooking, and defrosting. It features a 20-liter capacity and a user-friendly control panel.

Components

- Microwave Oven Unit
- Glass Turntable

- Roller Ring
- Instruction Manual



Figure 2.1: Front view of the Esperanza EKO010 Microwave Oven. This image displays the microwave oven from the front, showing the door handle, control panel with digital display, and the overall black finish.



Figure 2.2: Interior view of the Esperanza EKO010 Microwave Oven. The image shows the microwave oven with its door open, revealing the interior cavity, the glass turntable, and the roller ring.

Control Panel Description

The control panel features a digital display, function buttons, and a rotary knob for setting time and menu options.

- **Digital Display:** Shows time, power level, and cooking settings.
- **POWER Button:** Adjusts microwave power levels.
- **CLOCK/WEIGHT Button:** Sets the clock and input weight for defrosting.
- **GRILL Button:** Activates the grill function.
- **COMBINATION Button:** Selects combination cooking modes (microwave + grill).
- **STOP/CANCEL Button:** Stops cooking, clears settings, or cancels a program.
- **START/QUICK START Button:** Starts cooking or initiates quick start cooking.
- **TIME/MENU Rotary Knob:** Used to set cooking time, select auto cook menus, and adjust settings.
- **Auto Cook Menu:** A list of preset programs for various food types (e.g., Reheat, Tea/Coffee, Soup, Pizza, Popcorn, Defrost).

3. SETUP AND INSTALLATION

Unpacking

1. Carefully remove the microwave oven and all packing materials from the carton.
2. Check the oven for any damage, such as dents or a misaligned door. Do not operate the oven if it is damaged.
3. Remove any protective film from the cabinet surface.
4. Remove the brown sticker from the door. Do not remove the light brown mica sheet inside the cavity.

Placement

- Place the oven on a flat, stable surface that can support its weight and the heaviest food likely to be cooked in it.
- Ensure adequate ventilation. Leave a minimum of 20 cm (8 inches) of space above the oven, 10 cm (4 inches) at the rear, and 5 cm (2 inches) on both sides.
- Do not block air vents. Blocking them during operation may cause the oven to overheat and malfunction.
- Keep the oven away from heat sources and strong magnetic fields.
- Do not place the oven in a damp area or near water.

Electrical Connection

- Ensure the voltage and frequency of your power outlet match the specifications on the oven's rating label.
- Plug the oven into a properly installed and grounded wall outlet. Do not use extension cords or adapters.

4. OPERATING INSTRUCTIONS

Setting the Clock

1. Plug in the oven. The display will show "0:00".
2. Press the **CLOCK/WEIGHT** button once. The hour digits will flash.
3. Turn the **TIME/MENU** knob to set the hour (0-23).
4. Press the **CLOCK/WEIGHT** button again. The minute digits will flash.
5. Turn the **TIME/MENU** knob to set the minutes (0-59).
6. Press the **CLOCK/WEIGHT** button to confirm the setting.

Microwave Cooking

1. Place food in a microwave-safe container on the turntable.
2. Close the door.
3. Press the **POWER** button repeatedly to select the desired power level (e.g., P100 for 100% power, P80 for 80%, etc.).
4. Turn the **TIME/MENU** knob to set the cooking time.
5. Press the **START/QUICK START** button to begin cooking.

Grill Cooking

1. Place food on the grill rack (if provided) or a heat-resistant dish.
2. Press the **GRILL** button. The display will show "G".
3. Turn the **TIME/MENU** knob to set the grilling time.
4. Press the **START/QUICK START** button to begin grilling.

Combination Cooking

This function combines microwave and grill cooking for faster and crispier results.

1. Press the **COMBINATION** button repeatedly to select the desired combination mode (e.g., C-1, C-2). Refer to the oven's internal guide for specific ratios.
2. Turn the **TIME/MENU** knob to set the cooking time.
3. Press the **START/QUICK START** button to begin.

Auto Cook Menu

The oven has pre-programmed settings for common foods. The Auto Cook menu is listed on the control panel.

1. Turn the **TIME/MENU** knob counter-clockwise to select an Auto Cook program (e.g., A-1 for Auto Reheat).
2. Press the **CLOCK/WEIGHT** button to confirm the selection.
3. Turn the **TIME/MENU** knob to select the weight or quantity of the food.
4. Press the **START/QUICK START** button to begin.

Defrosting by Weight

1. Place the frozen food in the oven.
2. Press the **CLOCK/WEIGHT** button twice. The display will show "dEF1".
3. Turn the **TIME/MENU** knob to set the weight of the food.
4. Press the **START/QUICK START** button to begin defrosting.

5. MAINTENANCE AND CLEANING

Regular cleaning and proper maintenance will ensure the longevity and efficient operation of your microwave oven.

General Cleaning

- Always unplug the oven before cleaning.
- Wipe the exterior with a damp cloth and mild detergent. Avoid abrasive cleaners.
- Clean the interior cavity with a damp cloth after each use. For stubborn stains, place a bowl of water with lemon juice inside and microwave for a few minutes to loosen food particles, then wipe clean.

- The glass turntable and roller ring can be washed in warm soapy water or in a dishwasher. Ensure they are completely dry before placing them back in the oven.
- Wipe the door seals and sealing surfaces regularly to prevent food buildup.

Care for the Turntable

- Do not operate the oven without the turntable and roller ring properly in place.
- Ensure the turntable is centered on the roller ring and the central shaft before placing food.

6. TROUBLESHOOTING

If you encounter issues with your microwave oven, refer to the following table for common problems and solutions.

Problem	Possible Cause	Solution
Oven does not start	Power cord not plugged in; Door not closed properly; Fuse blown or circuit breaker tripped.	Ensure power cord is securely plugged in; Close the door firmly; Check household fuse or reset circuit breaker.
Food not heating	Incorrect cooking time or power level set; Door not closed properly.	Adjust cooking time and power level; Ensure door is fully closed.
Turntable not rotating	Turntable not properly seated; Roller ring dirty or damaged; Motor malfunction.	Ensure turntable and roller ring are correctly positioned; Clean roller ring and oven floor; Contact service if problem persists.
Sparks or arcing inside oven	Metal objects in oven; Food residue buildup; Damaged waveguide cover.	Remove all metal objects; Clean oven interior thoroughly; Contact service if waveguide cover is damaged.

If the problem persists after attempting these solutions, please contact customer support.

7. SPECIFICATIONS

Feature	Specification
Model	EKO010
Brand	Esperanza
Power Output	1200 Watts
Capacity	20 Litres
Color	Black
Material	Stainless Steel (Interior/Exterior details)
Installation Type	Countertop
Special Feature	Timer

Feature	Specification
Control Type	Button-based with Rotary Knob



Figure 7.1: Dimensions of the Esperanza EKO010 Microwave Oven. This image illustrates the approximate external dimensions of the microwave oven: 45.2 cm width, 26.5 cm height, and 36 cm depth.

8. WARRANTY AND SUPPORT

For warranty information, technical support, or service inquiries, please refer to the warranty card included with your product or visit the official Esperanza website. Keep your proof of purchase for warranty claims.

Manufacturer: Esperanza

Website: www.esperanza.pl (Note: This is a placeholder link, actual website may vary)