

Esperanza EKG012

Esperanza EKG012 Deep Fryer 2.5L User Manual

Model: EKG012

INTRODUCTION

Thank you for purchasing the Esperanza EKG012 Deep Fryer. This manual provides important information regarding the safe operation, maintenance, and troubleshooting of your appliance. Please read these instructions carefully before use and retain them for future reference.

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed, including the following:

- Read all instructions before use.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse cord, plugs, or the appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair, or adjustment.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.

- Do not use appliance for other than intended use.
- Ensure the oil level is between the MIN and MAX marks.
- Never leave the deep fryer unattended during operation.
- This appliance is for household use only.

PRODUCT OVERVIEW

Familiarize yourself with the components of your Esperanza EKG012 Deep Fryer.



Image 1: The Esperanza EKG012 Deep Fryer with its lid open, revealing the removable frying basket and the internal oil reservoir. The control panel with temperature dial and indicator lights is visible on the front.



Image 2: The main body of the Esperanza EKG012 Deep Fryer shown alongside its separate frying basket. This illustrates the removable nature of the basket for easy cleaning and food handling.

Key components include:

- **Lid:** With viewing window and filter.
- **Frying Basket:** Removable, with a foldable handle.
- **Oil Reservoir:** Non-stick coated for easy cleaning.
- **Control Panel:** Includes temperature dial and indicator lights (Power, Heating).
- **Heating Element:** Integrated for efficient heating.
- **Housing:** Durable exterior.

SETUP

1. **Unpacking:** Carefully remove the deep fryer and all accessories from the packaging. Dispose of packaging materials responsibly.
2. **Initial Cleaning:** Before first use, clean the frying basket and the inside of the oil reservoir with warm soapy water. Wipe the exterior with a damp cloth. Ensure all parts are completely dry before assembly.
3. **Placement:** Place the deep fryer on a stable, heat-resistant, and dry surface. Ensure there is adequate ventilation around the appliance. Do not place it near flammable materials.
4. **Oil Filling:** Pour cooking oil into the oil reservoir. Ensure the oil level is between the MIN and MAX marks indicated inside the reservoir. Do not overfill or underfill.
5. **Basket Insertion:** Place the frying basket into the oil reservoir. Ensure the handle is securely attached and in the upright position.

OPERATING INSTRUCTIONS

Follow these steps for safe and effective operation of your deep fryer.

- 1. Connect Power:** Plug the power cord into a grounded electrical outlet. The Power indicator light will illuminate.
- 2. Set Temperature:** Turn the temperature control dial to your desired frying temperature. Refer to cooking charts for recommended temperatures for various foods. The Heating indicator light will turn on, indicating the oil is heating.
- 3. Preheating:** Allow the oil to preheat until the Heating indicator light turns off. This indicates the oil has reached the set temperature.
- 4. Add Food:** Carefully lower the food into the hot oil using the frying basket. Do not overload the basket, as this can lower the oil temperature and result in soggy food. For best results, fry in small batches.



Image 3: The Esperanza EKG012 Deep Fryer in operation, showing a basket full of French fries submerged in hot oil. This demonstrates the appliance's primary function.

5. **Frying:** Fry the food until it is golden brown and cooked through. Periodically check the food.
6. **Remove Food:** Once cooked, carefully lift the frying basket out of the oil. Allow excess oil to drain back into the reservoir.
7. **Serve:** Transfer the fried food to a plate lined with paper towels to absorb any remaining oil.
8. **Turn Off:** After use, turn the temperature control dial to the "OFF" position and unplug the appliance from the wall outlet.
9. **Cool Down:** Allow the oil and appliance to cool completely before cleaning or storing. This may take several hours.

MAINTENANCE AND CLEANING

Regular cleaning and maintenance will prolong the life of your deep fryer.

1. **Cool Down:** Always ensure the appliance and oil have cooled completely before cleaning.
2. **Drain Oil:** Carefully pour the cooled oil into a suitable container for disposal or reuse. Filtered oil can be reused several times depending on the type of food fried.
3. **Clean Basket:** Remove the frying basket and wash it with warm, soapy water. Use a non-abrasive sponge. Rinse thoroughly and dry completely.
4. **Clean Reservoir:** The non-stick oil reservoir can be cleaned with warm, soapy water and a soft cloth or sponge. Do not use abrasive cleaners or scouring pads, as these can damage the non-stick coating. Rinse thoroughly and dry completely.
5. **Clean Exterior:** Wipe the exterior housing with a damp cloth. Do not immerse the main unit in water or any other liquid.
6. **Lid:** The lid can be washed with warm, soapy water. Ensure the viewing window is clean.
7. **Storage:** Store the clean and dry deep fryer in a cool, dry place.

Caution: Never immerse the electrical components or the main body of the fryer in water.

TROUBLESHOOTING

If you encounter issues with your deep fryer, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Appliance does not turn on.	No power supply.	Check if the power cord is securely plugged into a working outlet. Check the circuit breaker.
Oil is not heating.	Temperature dial not set correctly or heating element malfunction.	Ensure the temperature dial is set to a desired temperature. If the issue persists, contact customer support.
Food is soggy or not crispy.	Oil temperature too low or basket overloaded.	Allow oil to fully preheat. Do not overload the basket; fry in smaller batches. Ensure food is dry before frying.

Problem	Possible Cause	Solution
Excessive smoke during frying.	Oil is old, overheated, or food contains too much moisture.	Replace old oil. Ensure oil is not heated beyond its smoke point. Pat food dry before frying.

SPECIFICATIONS

Model: EKG012

Brand: Esperanza

Power: 1800 W

Capacity: 2.5 Liters

Material: Stainless Steel (internal components), Durable Housing

Dimensions (approx.): 25.4 x 5.08 x 6.86 cm

Weight: 2.15 kg

Color: White

Note: The provided dimensions (25.4 x 5.08 x 6.86 cm) appear to be for a component or packaging, not the overall fryer. Actual product dimensions may vary slightly.

WARRANTY AND SUPPORT

The Esperanza EKG012 Deep Fryer comes with a standard manufacturer's warranty. Please refer to the warranty card included with your purchase for specific terms and conditions, including warranty duration and coverage.

For technical support, service, or spare parts, please contact your local retailer or the Esperanza customer service department. Keep your purchase receipt as proof of purchase for warranty claims.

Contact Information: (Please refer to your product packaging or the Esperanza official website for up-to-date contact details.)