

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [FRTEC](#) /
- › [FRTEC INARI Gaming Headset User Manual \(Model BL-HEADINARI\)](#)

FRTEC BL-HEADINARI

FRTEC INARI Gaming Headset User Manual

MODEL: BL-HEADINARI

Introduction

This manual provides instructions for the FRTEC INARI Gaming Headset, Model BL-HEADINARI. This headset is designed for an immersive audio experience across multiple gaming platforms. Please read this manual carefully before using your headset to ensure proper setup and operation.



Image: Front view of the FRTEC INARI Gaming Headset, featuring its black and red design with the microphone extended. This image illustrates the overall appearance of the headset.

Key Features

- **HD Stereo Sound:** Delivers clear audio for gaming.
- **50mm Speakers:** Provides robust sound output.
- **Retractable Microphone:** Multi-directional microphone for clear communication.

- **Braided Anti-Tangle Cable:** Enhances durability and prevents tangling.
- **In-line Volume Control:** Conveniently adjust audio levels.
- **Comfortable Headband:** Woven fabric and simulated leather for extended wear.
- **Enhanced Ear Pads:** Designed for improved sound isolation and immersion.

Compatibility

The FRTEC INARI Gaming Headset is compatible with a wide range of gaming platforms and devices:

- PlayStation 4 (PS4)
- Xbox One (XONE)
- PC (Windows 7 and above)
- Mac
- Nintendo Switch
- Xbox 360

Connectivity is via a standard 3.5mm mini-jack.

Setup Guide

1. Connecting the Headset

1. Locate the 3.5mm audio jack on your gaming console controller, PC, Mac, or Nintendo Switch.
2. Insert the headset's 3.5mm mini-jack firmly into the audio port.
3. For PC/Mac, ensure your device's audio settings are configured to use the connected headset as the input and output device.



Image: Side view of the FRTEC INARI Gaming Headset, highlighting the ear cup and the retractable microphone in a retracted position. This image helps visualize the headset's profile and microphone integration.

2. Adjusting the Microphone

- The microphone is retractable. Gently pull it out from the left ear cup to extend it.
- Position the multi-directional microphone approximately 1-2 inches from your mouth for optimal voice clarity.
- When not in use, gently push the microphone back into the ear cup.

3. Volume Control

- The headset features an in-line volume control located on the cable.
- Rotate the dial to increase or decrease the audio volume to your preferred level.

Operating Instructions

Once connected and configured, the FRTEC INARI Gaming Headset is ready for use. Ensure your device's audio output is directed to the headset for sound and input is from the headset's microphone for

communication.

- For optimal audio, adjust the headset's volume control and your device's master volume.
- Periodically check your game or communication application settings to ensure the correct audio input/output devices are selected.

Care and Maintenance

- **Cleaning:** Use a soft, dry cloth to clean the ear cups and headband. Avoid using harsh chemicals or abrasive materials.
- **Cable Care:** The braided cable is designed to resist tangles. Avoid sharp bends or excessive pulling on the cable to prevent damage.
- **Storage:** Store the headset in a cool, dry place away from direct sunlight and extreme temperatures.
- **Microphone:** When retracting the microphone, do so gently to avoid damaging the mechanism.

Troubleshooting

No Sound or Low Volume

- Ensure the 3.5mm mini-jack is fully inserted into the device's audio port.
- Check the in-line volume control on the headset cable and turn it up.
- Verify your device's master volume and application-specific volume settings are not muted or set too low.
- Test the headset with another device to rule out a device-specific issue.

Microphone Not Working

- Ensure the microphone is extended and positioned correctly near your mouth.
- Check your device's audio input settings to confirm the headset microphone is selected as the default input device.
- Verify that the microphone is not muted within your operating system or communication application.
- Test the microphone with another application or device.

Sound Distortion or Static

- Ensure the 3.5mm mini-jack connection is secure and free of debris.
- Try adjusting the volume levels on both the headset and your device.
- Avoid placing the headset near strong electromagnetic interference sources.
- Test with another device to determine if the issue is with the headset or the source device.

Technical Specifications

Model Number	BL-HEADINARI
Connectivity Technology	Wired (3.5mm mini-jack)
Speaker Size	50mm
Microphone Type	Retractable, Multi-directional

Cable Length	1.2 meters (approx. 3.9 feet)
Control Type	In-line Volume Control
Headband Material	Woven Fabric, Simulated Leather
Ear Pad Material	Simulated Leather
Item Weight	536 Grams (1.18 Pounds)
Product Dimensions	8.27 x 7.09 x 3.94 inches

Warranty and Support

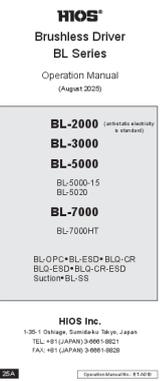
FRTEC products are manufactured to high-quality standards. For information regarding warranty coverage, please refer to the warranty card included with your purchase or visit the official FRTEC website.

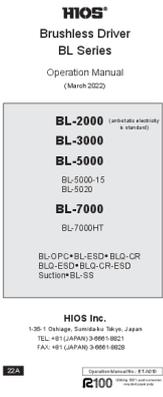
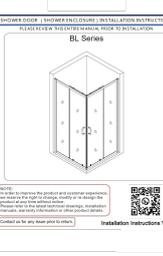
For technical support, troubleshooting assistance beyond this manual, or inquiries about replacement parts, please contact FRTEC customer service through their official support channels.

Please retain your proof of purchase for warranty claims.

© 2023 FRTEC. All rights reserved. Information in this manual is subject to change without notice.

Related Documents - BL-HEADINARI

 <p>Panasonic Operating Instructions Network Camera BL-VT164 Series BL-VP100 Series</p>	<p>Panasonic Network Camera BL-VT164/BL-VP100 Series Operating Instructions</p> <p>Detailed operating instructions for Panasonic BL-VT164 Series and BL-VP100 Series network cameras. Covers setup, configuration, monitoring, and maintenance.</p>
 <p>HIOS Brushless Driver BL Series Operation Manual (August 2023)</p> <p>BL-2000 (certificates availability is standard) BL-3000 BL-5000 BL-5000-15 BL-5030 BL-7000 BL-7000HT</p> <p>BL-OPC*BL-ESD*BL-CR BL-ESD*BL-CR-ESD Suction*BL-SS</p> <p>HIOS Inc. 1-35-1 Oshino, Chiyoda-ku, Tokyo, Japan TEL: +81 (JAPAN) 3-6961-8821 FAX: +81 (JAPAN) 3-6961-8828</p>	<p>HIOS Brushless Driver BL Series Operation Manual</p> <p>Comprehensive operation manual for HIOS BL Series Brushless Drivers, covering specifications, parts identification, accessories, operating procedures, torque adjustment, and troubleshooting for models like BL-2000, BL-3000, BL-5000, and BL-7000.</p>

 <p>HIOS Brushless Driver BL Series Operation Manual (March 2022)</p> <p>BL-2000 (Certified standard) BL-3000 BL-5000 BL-5000-15 BL-5030 BL-7000 BL-7000HT</p> <p>BL-OPC*BL-ESD*BL-CR BL-L-ESD*BL-G-CR-ESD Suction*BL-SS</p> <p>HIOS Inc. 1-35-1 Oshino, Chiyoda-ku, Tokyo, Japan TEL: +81 (JAPAN) 3-6961-8821 FAX: +81 (JAPAN) 3-6961-8828</p> <p>22A 100</p>	<p>HIOS Brushless Driver BL Series Operation Manual</p> <p>This operation manual provides detailed information on the HIOS Brushless Driver BL Series, including models BL-2000, BL-3000, BL-5000, and BL-7000. It covers parts identification, specifications, accessories, power supplies, operating procedures, torque adjustment, and troubleshooting.</p>
 <p>Panasonic Setup Guide Network Camera — BL-C210 — — BL-C230 —</p>	<p>Panasonic Network Camera Setup Guide: BL-C210 & BL-C230 Installation and Configuration</p> <p>Comprehensive setup guide for Panasonic network cameras, models BL-C210 and BL-C230. Learn how to install, configure network settings, access remotely, and use viewer software.</p>
 <p>BL Series</p> <p>INSTALLATION MANUAL</p> <p>INSTALLATION VIDEO</p>	<p>LIVIZA BL Series Shower Door Installation Manual</p> <p>Installation manual for the LIVIZA BL Series shower door, providing detailed steps, parts list, and maintenance information for safe and proper assembly.</p>
 <p>SUBCOLD</p> <p>ACE SERIES</p> <p>USER MANUAL</p>	<p>Subcold ACE Series User Manual: Installation, Operation, and Safety Guide</p> <p>Comprehensive user manual for the Subcold ACE Series refrigerators, covering safety warnings, operating instructions, maintenance, troubleshooting, and product specifications. Learn how to install and use your Subcold appliance safely and efficiently.</p>