

[Manuals.plus](#) /

› [Karcher](#) /

› Karcher RR 5025 Portable CD Radio Player User Manual

Karcher RR 5025-C

Karcher RR 5025 Portable CD Radio Player

User Manual

1. INTRODUCTION

The Karcher RR 5025 portable CD radio is an ideal companion for music enthusiasts of all ages. Designed for versatile use, this compact boombox features a convenient carrying handle and supports both AC power and battery operation, making it suitable for use in the kitchen, outdoors, or anywhere you desire. It includes an FM tuner with 30 storable stations, a top-loading CD player, and an AUX input for connecting external audio sources. The stereo speakers deliver a clear sound with 2 x 1.1 W RMS output power. For private listening, a headphone jack is also available. This model is available in various colors, including blue.



Figure 1.1: Front view of the Karcher RR 5025 Portable CD Radio Player.

2. PRODUCT FEATURES

- Portable CD player suitable for both children and adults.
- Supports playback of CD, CD-R, and CD-RW discs.
- Integrated FM tuner with 30 station presets for easy access to your favorite radio stations.
- AUX-IN port for connecting external audio devices such as MP3 players or smartphones.
- Headphone output for private listening.
- Stereo sound with 2 x 1.1 W RMS output power.
- Flexible power options: operates via AC power or batteries (batteries not included).
- Compact design with a convenient carrying handle.



**STEREO
SOUND**

**COMPACT
disc
DIGITAL AUDIO**



Figure 2.1: Karcher RR 5025 highlighting stereo sound and CD digital audio capabilities.

3. COMPONENTS AND CONTROLS

Familiarize yourself with the various parts and controls of your Karcher RR 5025 for optimal use.



Figure 3.1: Detailed view of the control panel and display.

Key Controls:

- **Display:** Shows current frequency, track number, and mode.
- **Power/Function Button:** Turns the unit on/off and switches between modes (CD, FM, AUX).
- **Play/Pause Button:** Controls CD playback.
- **Stop Button:** Stops CD playback.
- **Skip/Search Buttons (◀ ◁ / ▷ ▶):** Skips tracks on CD or tunes radio frequency.
- **Volume Control:** Adjusts the audio output level.
- **MEM./P-MODE Button:** Used for programming CD playback or storing radio stations.
- **M-/M+ Buttons:** Navigates through stored radio stations.
- **FM Antenna:** Extendable antenna for improved FM radio reception.
- **CD Compartment:** Top-loading area for inserting CDs.
- **AUX-IN Jack:** For connecting external audio devices.

- **Headphone Jack:** For connecting headphones.

4. SETUP

4.1 Power Supply

Your Karcher RR 5025 can be powered by either AC mains or batteries.

- **AC Power:** Connect the supplied power cable to the AC input jack on the unit and then to a standard wall outlet.
- **Battery Power:** Open the battery compartment on the bottom of the unit. Insert the required number of batteries (not included), ensuring correct polarity (+/-). Close the compartment securely.

4.2 Antenna Setup

For optimal FM radio reception, fully extend the telescopic FM antenna. Adjust its position for the best signal clarity.

5. OPERATING INSTRUCTIONS

5.1 Powering On/Off

Press the **Power/Function** button to turn the unit on. Press it again to turn the unit off.

5.2 Radio Operation (FM)

1. Turn on the unit and press the **Power/Function** button repeatedly until 'FM' mode is selected.
2. Extend the FM antenna fully.
3. Press the ◀ ◀ or ▶ ▶ buttons to manually tune to a desired frequency. Press and hold these buttons for automatic station scanning.
4. To store a station: Tune to the desired station, then press the **MEM./P-MODE** button. The display will show a preset number. Use **M-** or **M+** to select the desired preset number, then press **MEM./P-MODE** again to confirm.
5. To recall a stored station: Use the **M-** or **M+** buttons to navigate through your presets.

5.3 CD Playback

1. Turn on the unit and press the **Power/Function** button repeatedly until 'CD' mode is selected.
2. Open the CD compartment lid.
3. Place a CD (CD, CD-R, or CD-RW) onto the spindle with the label side facing up.
4. Close the CD compartment lid securely. The CD will begin to spin, and playback should start automatically.
5. Use the **Play/Pause** button to pause or resume playback.
6. Use the **Stop** button to stop playback.
7. Press ▶ ▶ or ◀ ◀ to skip to the next or previous track. Press and hold these buttons to fast forward or rewind within a track.

5.4 AUX Input

The AUX input allows you to connect external audio devices like smartphones or MP3 players.

1. Connect one end of a 3.5mm audio cable (not included) to the AUX-IN jack on the Karcher RR 5025.

2. Connect the other end of the audio cable to the headphone jack or audio output of your external device.
3. Turn on the Karcher RR 5025 and press the **Power/Function** button repeatedly until 'AUX' mode is selected.
4. Start playback on your external device. The audio will now play through the Karcher RR 5025 speakers.
5. Adjust the volume using the volume control on the Karcher RR 5025 and/or your external device.



AUX-Eingang zum Anschluss weiterer Geräte und 3,5mm Kopfhörerausgang



Radio mit 30 Senderspeicher



Liest CD, CD-R, CD-RW



Figure 5.1: Overview of connectivity options including AUX-Input, Radio, and CD functions.

5.5 Headphone Use

To enjoy your music privately, connect a pair of headphones (not included) to the headphone jack. The sound will automatically switch from the speakers to the headphones.

6. MAINTENANCE AND CARE

- **Cleaning:** Use a soft, dry cloth to clean the exterior of the unit. Do not use abrasive cleaners or solvents.
- **CD Care:** Handle CDs by their edges. Keep them clean and free from scratches. If a CD is dirty, wipe it gently with a

soft, lint-free cloth from the center outwards.

- **Storage:** When not in use for extended periods, remove batteries to prevent leakage. Store the unit in a cool, dry place away from direct sunlight and extreme temperatures.
- **Ventilation:** Ensure proper ventilation around the unit to prevent overheating. Do not block any ventilation openings.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Unit does not power on.	No power supply; batteries depleted or incorrectly inserted; AC cable not connected.	Check AC cable connection. Replace batteries or ensure correct polarity.
No sound from speakers.	Volume too low; headphones connected; incorrect mode selected.	Increase volume. Disconnect headphones. Ensure correct mode (CD, FM, AUX) is selected.
CD does not play or skips.	CD is dirty or scratched; CD inserted incorrectly; unsupported disc type.	Clean or replace CD. Ensure CD is inserted label-side up. Verify disc is CD, CD-R, or CD-RW.
Poor FM radio reception.	Antenna not extended or positioned incorrectly; strong interference.	Fully extend and adjust the telescopic antenna. Move unit away from other electronic devices.
AUX input not working.	Incorrect mode selected; audio cable faulty; external device volume too low.	Ensure 'AUX' mode is selected. Check audio cable. Increase volume on external device.

8. TECHNICAL SPECIFICATIONS

Feature	Specification
Model Number	RR 5025-C
Brand	Karcher
Color	Blue
Connectivity Technology	Auxiliary
Speaker Type	Stereo
Output Power	2 x 1.1 Watts RMS
Power Source	AC Powered, Battery Powered
Compatible Devices	Smartphone, MP3 player, other portable audio devices
Dimensions (L x W x H)	22.5 x 24.2 x 12.6 cm (approx. 8.86 x 9.53 x 4.96 inches)
Item Weight	3.06 pounds (approx. 1.39 kg)

Feature	Specification
Special Features	Night light (as per specification, though not explicitly detailed in product description)
CD Compatibility	CD, CD-R, CD-RW
FM Tuner	Yes, with 30 station memory presets

9. WARRANTY AND SUPPORT INFORMATION

For detailed warranty information and customer support, please refer to the warranty card included with your product or visit the official Karcher website. The product package includes the Karcher RR 5025 child's radio in blue, a power cable, and a user manual (German/English). Karcher has been a strong and competent partner in consumer electronics since 1978, offering a wide range of audio products.



Figure 9.1: Karcher Brand Logo.

© 2023 Karcher. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question