

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Curtis](#) /

› [Curtis Frigidaire EFMIS2129 Retro Mini Compact Refrigerator User Manual](#)

**Curtis EFMIS2129**

# Curtis Frigidaire EFMIS2129 Retro Mini Compact Refrigerator User Manual

Model: EFMIS2129

## 1. INTRODUCTION

---

Thank you for choosing the Curtis Frigidaire EFMIS2129 Retro Mini Compact Refrigerator. This appliance is designed for cooling beverages, snacks, and skincare products, offering a convenient and portable solution for various environments. Please read this manual thoroughly before use to ensure proper operation and maintenance.



Image: Front view of the Frigidaire Retro Mini Compact Refrigerator in red.

## 2. SAFETY INFORMATION

---

- Read all instructions before using the appliance.
- Do not immerse the unit, cord, or plug in water or other liquids.
- Supervise children when the appliance is in use.
- Unplug from the outlet when not in use and before cleaning.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- Ensure adequate ventilation around the unit. Do not block ventilation openings.
- This appliance is designed to cool, not freeze. Do not store items requiring freezing temperatures.
- Do not store perishable items like dairy products that require strict temperature control, as this unit may not maintain sufficiently low temperatures for extended periods.

### 3. PACKAGE CONTENTS

---

Verify that all items are present in the package:

- Frigidaire Retro Mini Compact Refrigerator Unit
- AC Power Cord (for home outlets)
- 12V DC Power Cord (for car adapters)
- Removable Shelf

### 4. SETUP

---

#### 4.1 Placement

Place the refrigerator on a flat, stable surface. Ensure there is at least 2-3 inches of space around the back and sides of the unit for proper ventilation. Avoid placing it in direct sunlight or near heat sources.

#### 4.2 Power Connection

The refrigerator can be powered by either an AC home outlet or a 12V DC car adapter.

- **For Home Use (AC):** Connect the AC power cord to the AC input port on the back of the refrigerator, then plug the other end into a standard 110V AC wall outlet.
- **For Car Use (DC):** Connect the 12V DC power cord to the DC input port on the back of the refrigerator, then plug the other end into your vehicle's 12V cigarette lighter socket.

**COMPACT AND PORTABLE WITH A CARRYING HANDLE  
SO IT CAN BE EASILY TAKEN ON THE GO**



**INCLUDES AC (HOME)**

**12V CAR CORDS**

**FRIGIDAIRE**

Image: Rear view of the refrigerator highlighting the AC and 12V DC power input ports.

#### **4.3 Initial Use**

Before placing items inside, allow the refrigerator to operate empty for at least 30 minutes to reach its optimal cooling temperature.

### **5. OPERATING INSTRUCTIONS**

#### **5.1 Turning On/Off**

Once connected to a power source, the unit will begin cooling automatically. There is typically no separate on/off switch; unplugging the unit will turn it off.

#### **5.2 Loading Contents**

The refrigerator has a 4-liter capacity, capable of holding up to 6 standard 12oz beverage cans. Arrange items to allow for air circulation for efficient cooling.

## REMOVABLE SHELF FOR EASY CLEANING AND ABILITY TO ARRANGE CONTENTS AS NEEDED



Image: Interior view of the refrigerator showing the removable shelf.

### 5.3 Using the Removable Shelf

The removable shelf allows for flexible storage arrangements. Slide it out to accommodate taller items or to clean the interior.



Image: Example items stored in the mini refrigerator, including cosmetics, skincare products, cans, and snacks.

## 6. MAINTENANCE

### 6.1 Cleaning

Always unplug the refrigerator before cleaning.

- Wipe the interior and exterior surfaces with a soft cloth dampened with mild soap and water.
- Do not use abrasive cleaners or harsh chemicals.
- Ensure the unit is completely dry before plugging it back in.

## 6.2 Defrosting

This unit features a frost-free design, minimizing ice buildup. If any frost accumulates, unplug the unit and allow it to melt naturally, then wipe away excess water.

## 7. TROUBLESHOOTING

---

Problem	Possible Cause	Solution
Unit is not cooling	No power; Fan obstructed; Poor ventilation	Check power connection; Ensure fan is clear; Provide adequate space around unit.
Excessive noise	Unit not level; Fan obstruction	Place on a level surface; Clear any fan obstructions.
Condensation inside	Door not closed properly; High humidity	Ensure door is securely latched; Wipe away condensation.

## 8. SPECIFICATIONS

---

Feature	Detail
Brand	Curtis
Model	EFMIS2129-RED
Capacity	4 Liters (1 Gallon)
Dimensions (L x W x H)	7 x 10 x 10.5 inches
Item Weight	4 pounds
Voltage	110 Volts (AC), 12V (DC)
Defrost System	Frost Free
Installation Type	Tabletop
Color	Red

## 9. WARRANTY AND SUPPORT

---

For warranty information or technical support, please refer to the documentation included with your purchase or contact Curtis customer service. Keep your proof of purchase for warranty claims.

