

[Manuals.plus](#) /

› [Fun Express](#) /

› Fun Express Deluxe 54-Key Electronic Keyboard Instruction Manual

Fun Express 0889070901987

Fun Express Deluxe 54-Key Electronic Keyboard Instruction Manual

Model: 0889070901987

INTRODUCTION

The Fun Express Deluxe 54-Key Electronic Keyboard is designed as an educational tool for aspiring musicians. It features 54 keys, 100 rhythms, and five percussion instrument sounds, along with a record and playback function. This manual provides essential information for the safe and effective use of your keyboard.



Image: Fun Express Deluxe 54-Key Electronic Keyboard, top view showing keys and control panel.

Key Features:

- 54 standard-sized keys for comprehensive musical exploration.
- 100 built-in rhythms to accompany your playing.
- Five distinct percussion instrument sounds.
- Record and playback function for reviewing compositions.
- Durable plastic construction.
- Compact size: 10 1/2" x 29" x 2 1/2".

IMPORTANT SAFETY INFORMATION

- **Age Recommendation:** Suitable for ages 3 years and up. Adult supervision is recommended for younger children.
- **Battery Safety:**

- Requires four "AA" batteries (not included).
 - Do not mix old and new batteries.
 - Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.
 - Insert batteries with correct polarity (+ and -).
 - Remove exhausted batteries promptly.
 - Remove batteries if the unit is to be stored for an extended period.
 - Do not dispose of batteries in fire; they may explode or leak.
- **Choking Hazard:** Keep small parts away from young children.
 - **Electrical Safety:** Do not expose the keyboard to water or moisture. Do not attempt to disassemble or repair the unit yourself.
 - **Placement:** Place the keyboard on a stable, flat surface to prevent accidental falls.

WHAT'S IN THE BOX

Your package should contain the following item:

- 1 x Fun Express Deluxe 54-Key Electronic Keyboard

Note: Four "AA" batteries are required for operation and are not included.

SETUP

Battery Installation:

1. Locate the battery compartment on the underside of the keyboard.
2. Using a Phillips head screwdriver (not included), unscrew the battery compartment cover.
3. Insert four (4) new "AA" batteries, ensuring correct polarity (+ and -) as indicated inside the compartment.
4. Replace the battery compartment cover and secure it with the screw.



Image: Underside of the keyboard, indicating the battery compartment location.

OPERATING INSTRUCTIONS

1. Power On/Off:

Locate the **ON/OFF** switch on the control panel. Slide it to the **ON** position to power on the keyboard. Slide it to **OFF** to power down.

2. Adjusting Volume:

Use the **VOLUME UP** and **VOLUME DOWN** buttons to adjust the sound output to your desired level.

3. Selecting Instruments/Tones:

The keyboard offers various instrument sounds. Refer to the labels on the control panel for instrument categories (e.g., *Piano*, *Organ*, *Guitar*). Use the corresponding number buttons or instrument selection buttons to choose your desired tone.

4. Selecting Rhythms:

Choose from 100 built-in rhythms. Use the **RHYTHM** selection buttons or number pad to select a rhythm. Press **START/STOP** to begin or end the rhythm playback.

5. Percussion Sounds:

Activate the five percussion instrument sounds by pressing the dedicated percussion buttons on the control panel.

6. Record and Playback:

- Press the **RECORD** button to begin recording your performance.
- Play your desired melody on the keys.
- Press **PLAYBACK** to listen to your recorded piece.

7. Demo Songs:

Press the **DEMO** button to play pre-programmed demonstration songs. Press it again to cycle through available demos or stop playback.

MAINTENANCE

Cleaning:

Wipe the keyboard surface with a soft, dry cloth. For stubborn marks, a slightly damp cloth can be used, followed immediately by a dry cloth. Do not use abrasive cleaners or solvents.

Storage:

Store the keyboard in a cool, dry place away from direct sunlight and extreme temperatures. If storing for an extended period, remove the batteries to prevent leakage.

TROUBLESHOOTING

- **No Power:**
 - Ensure the ON/OFF switch is in the ON position.
 - Check if batteries are inserted correctly with proper polarity.
 - Replace old or depleted batteries with new "AA" batteries.
- **No Sound:**
 - Check the volume level and increase it if necessary.
 - Ensure the keyboard is powered on.
- **Keys Not Responding:**
 - Ensure the keyboard is powered on.
 - If only some keys are not responding, contact customer support.

SPECIFICATIONS

Brand	Fun Express
Model Number	0889070901987
Number of Keys	54
Power Source	Battery Powered (4 x "AA" batteries, not included)
Dimensions (Box)	10 1/2" x 29" x 2 1/2"
Recommended Age	3 years and up
Instrument Type	Electronic Keyboard
Skill Level	Beginner

WARRANTY AND SUPPORT

Specific warranty information for the Fun Express Deluxe 54-Key Electronic Keyboard is not provided in this manual. For warranty details, technical support, or replacement parts, please contact the manufacturer, Fun Express, directly through their official website or customer service channels.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question