

[Manuals.plus](#) /

› [Tekswamp](#) /

› Tekswamp Replacement Remote Control for Adcom GCD-575 User Manual

## Tekswamp TeK-314050

# Tekswamp Replacement Remote Control for Adcom GCD-575

User Manual

## INTRODUCTION

---

This manual provides instructions for the Tekswamp Replacement Remote Control, designed for use with the Adcom GCD-575 device. This remote offers most of the original commands for your device without requiring additional programming. Please read this manual carefully to ensure proper use and longevity of your remote control.

## SETUP

---

### Battery Installation

The remote control requires two AAA batteries (not included) for operation. Follow these steps to install the batteries:

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery compartment cover downwards or outwards to open it.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Replace the battery compartment cover by sliding it back into place until it clicks securely.



Image: Back view of the remote control, illustrating the location of the battery compartment.



Image: The remote control with its battery cover removed, revealing the slots for two AAA batteries. This demonstrates the correct

orientation for battery insertion.

## No Programming Required

This Tekswamp replacement remote control is pre-programmed and does not require any additional setup or coding. Simply insert the batteries, and it is ready for use with your Adcom GCD-575 device.

## OPERATING INSTRUCTIONS

---

The remote control provides most of the essential functions for your Adcom GCD-575. Below are general guidelines for its operation:



Image: A clear view of the remote control's front face, displaying the layout of all buttons, including power, navigation, and function keys.

- **Power Button:** Located at the top, typically red, to turn the device on and off.
- **Menu/Setup Buttons:** Access and navigate the device's menu system.
- **Navigation Buttons (Arrow Keys and OK):** Used to move through menus and confirm selections.
- **Input/Source Button:** Selects the input signal for your device.

- **Volume/Channel Buttons:** Adjust volume levels and change channels (if applicable to your device).
- **Numeric Keypad:** For direct input of numbers.

## ON Indicator Light

An ON indicator light illuminates after any active button on the remote has been pressed. This indicates that the remote is functioning correctly and sending an infrared (IR) signal to your device.

## Functionality Notes

While this remote provides most original commands, please note the following:

- Some specific functions, such as page flip, keystone correction, video adjustment, and certain number functions, may not work properly with all devices in rare cases.
- This remote control does not include a laser pointer function.

## MAINTENANCE

---

### General Care

To ensure the longevity of your remote control:

- Avoid dropping the remote or subjecting it to strong impacts.
- Keep the remote away from direct sunlight, high temperatures, and moisture.
- Do not expose the remote to corrosive liquids.

### Cleaning

Wipe the remote control with a soft, dry cloth. For stubborn dirt, lightly dampen the cloth with water or a mild cleaning solution, then wipe dry immediately. Do not use abrasive cleaners or solvents.

### Battery Replacement

Replace batteries when the remote's response becomes sluggish or the ON indicator light fails to illuminate consistently. Always replace both batteries at the same time with new AAA alkaline batteries. Do not mix old and new batteries or different types of batteries.

## TROUBLESHOOTING

---

Problem	Possible Cause	Solution
Remote not responding	Dead or incorrectly inserted batteries. Obstruction between remote and device.	Check battery orientation and replace if necessary. Ensure clear line of sight to the device's IR receiver.
ON indicator light not working	Low battery power. Remote malfunction.	Replace batteries. If issue persists, contact support.
Some functions do not work	Specific function not supported by this replacement remote or device.	Refer to the "Functionality Notes" section. This is expected for certain advanced functions.

## SPECIFICATIONS

---

- **Brand:** Tekswamp
- **Model Number:** TeK-314050
- **Connectivity Technology:** Infrared

- **Compatible Devices:** Adcom GCD-575 (Home Theater)
- **Max Number of Supported Devices:** 1
- **Color:** Black
- **Button Quantity:** 31
- **Maximum Range:** 8 Meters
- **Battery Type:** 2 x AAA Alkaline batteries (not included)
- **Item Weight:** Approximately 2 Ounces
- **Manufacturer:** TL Electronics CO.

## SAFETY INFORMATION

---

This remote control includes a security screw, a childproofing feature designed to prevent unauthorized access to the small internal parts and mitigate choking hazards associated with them. Ensure the security screw is always in place.

## SUPPORT

---

For further assistance or inquiries regarding your Tekswamp Replacement Remote Control, please refer to the seller's contact information on your purchase platform. Tekswamp remotes are designed for durability and reliable performance.

