

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Lorell](#) /

› [Lorell Soho Mid-Back Task Chair LLR41842 User Manual](#)

Lorell LLR41842

Lorell Soho Mid-Back Task Chair (Model LLR41842) User Manual

Your guide to assembly, operation, and maintenance.

INTRODUCTION

Thank you for choosing the Lorell Soho Mid-Back Task Chair. This manual provides essential information for the safe and efficient use of your new chair. Please read it thoroughly before assembly and operation, and retain it for future reference.

SAFETY INFORMATION

- Always read and follow the assembly instructions carefully.
- Be cautious when adjusting the height and tilt mechanisms to prevent injury.
- Do not exceed the maximum weight capacity of 250 pounds (113 kg).
- Ensure all components are securely fastened before use.

SETUP AND ASSEMBLY

Minimal assembly is required for your Lorell Soho Mid-Back Task Chair. Please refer to the included assembly instructions for detailed steps. Ensure all parts are present and undamaged before beginning assembly.



Figure 1: Front view of the Lorell Soho Mid-Back Task Chair.



Figure 2: Chair dimensions for placement and space planning.

OPERATING INSTRUCTIONS

Your task chair is designed with several adjustable features to enhance comfort and support.

Adjustable Features:

- **Pneumatic Seat-Height Adjustment:** Use the lever located under the seat to raise or lower the seat to your desired height. To raise, lift the lever with no weight on the seat. To lower, lift the lever while seated.
- **Adjustable Armrests:** The armrests can be adjusted to provide optimal support for your arms and shoulders. Refer to the assembly guide for specific adjustment mechanisms.
- **Tilt Tension:** Rotate the knob under the seat to adjust the resistance of the chair's tilt function. Turn clockwise for more resistance, counter-clockwise for less.
- **Tilt Lock:** Use the lever to lock the chair in an upright position or allow it to recline.
- **360-Degree Swivel:** The chair features a full 360-degree swivel for easy movement and access to your workspace.



Figure 3: Key adjustable features of the chair.

MAINTENANCE

To ensure the longevity and appearance of your Lorell Soho Mid-Back Task Chair, follow these maintenance guidelines:

- **Cleaning:** Spot clean the fabric and mesh surfaces as needed. Use a mild detergent and a damp cloth. Avoid harsh chemicals that may damage the material.
- **Regular Checks:** Periodically check all screws and bolts to ensure they are tight. Re-tighten if necessary.
- **Casters:** Keep the casters clean from debris to ensure smooth rolling.

TROUBLESHOOTING

If you encounter any issues with your chair, please refer to the following common solutions:

- **Difficulty with Assembly:** Ensure all parts are correctly oriented and that the correct screws are used for each step. If screws appear too short or do not thread properly, verify against the assembly instructions and contact customer support if the issue persists.
- **Chair Not Adjusting:** Check that the adjustment levers are fully engaged or disengaged as required. Ensure no obstructions are preventing movement.
- **Squeaking Noises:** Apply a small amount of silicone lubricant to moving parts or joints if squeaking occurs.

SPECIFICATIONS

Feature	Detail
---------	--------

Feature	Detail
Brand	Lorell
Model Name	Lorell Soho Mid-back Task Chair
Model Number	LLR41842
Color	Black
Product Dimensions	30"D x 8"W x 6"H (Package)
Overall Height	34 1/2" - 37 4/5"
Seat Height	16 3/4" - 20"
Seat Depth	16 3/8"
Seat Width	18 3/8"
Back Height	17 1/2"
Backrest Width	17.2 Inches
Arm Style	With arms
Material	Mesh (Back), 100% Polyester Fabric (Seat), Foam (Fill)
Maximum Weight Recommendation	250 Pounds
Special Feature	Adjustable Height, Lumbar Support, 360-degree Swivel, Tilt Tension, Tilt Lock
Item Weight	30 pounds



Figure 4: Complies with ANSI/BIFMA standards for office furniture.

WARRANTY AND SUPPORT

For warranty information or technical support, please contact Lorell customer service directly. Details can typically be found on the product packaging or the manufacturer's official website. Please have your model number (LLR41842) and purchase date available when contacting support.

