

MONDIAL FE-04

Mondial Fast Cook Electric Stove FE-04 110V 1 Burner User Manual

1. INTRODUCTION

Thank you for choosing the Mondial Fast Cook Electric Stove FE-04. This appliance is designed for convenient and efficient cooking, featuring a 1000W heating plate and six temperature settings. This manual provides essential information for safe operation, maintenance, and troubleshooting to ensure optimal performance and longevity of your electric stove.

Key features of your Mondial Fast Cook Electric Stove:

- **Compact and Portable:** Rapid heating plate without the need for gas, easy to use and transport.
- **1000W Power:** Ensures quick heating and maintains temperature effectively.
- **Versatile Cooking:** Suitable for preparing meats, pasta, vegetables, soups, and more.
- **Temperature Control:** Six adjustable settings for precise cooking.
- **Stainless Steel Design:** Durable, resistant, and easy to clean.
- **Safety Features:** Includes a pilot light to indicate operation and a safety thermostat.

2. SAFETY INSTRUCTIONS

Please read all safety instructions carefully before using the appliance to prevent injury or damage.

- Always ensure the voltage of your electrical outlet matches the appliance's requirements (110V).
- Do not immerse the appliance, cord, or plug in water or other liquids.
- Keep the appliance out of reach of children and pets.
- Place the stove on a stable, heat-resistant surface, away from flammable materials.
- Do not touch hot surfaces. Use handles or knobs.
- Unplug the appliance from the outlet when not in use and before cleaning.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- Ensure proper ventilation around the appliance during use.
- Never leave the appliance unattended while operating.

- Use only accessories recommended by the manufacturer.

3. PRODUCT OVERVIEW

Familiarize yourself with the components of your Mondial Fast Cook Electric Stove.



Image 1: Top-down view of the Mondial Fast Cook Electric Stove FE-04, showing the single heating plate and control knob.

⚡ POTÊNCIA
1000W



COMPACTO E PORTÁTIL

Chapa com aquecimento rápido e sem utilização de gás

Image 2: Angled view of the electric stove, emphasizing its compact design and 1000W power, suitable for portable use.

1,3kg

Fast Cook



Image 3: Diagram showing the dimensions of the electric stove: 22.5cm width, 24.5cm depth, and 7cm height, weighing 1.3kg.

The stove features a single heating plate, a temperature control knob, and a pilot light indicator. Its stainless steel body ensures durability and ease of cleaning.

4. SETUP

Before first use, follow these steps:

1. Unpack the electric stove and remove all packaging materials.
2. Place the stove on a flat, stable, and heat-resistant surface. Ensure there is adequate space around the appliance for ventilation.
3. Wipe the heating plate and exterior with a damp cloth to remove any dust from manufacturing. Dry thoroughly.
4. Plug the power cord into a grounded 110V electrical outlet.
5. For the first use, turn the temperature control to the maximum setting for approximately 3-5 minutes without any cookware. This will burn off any manufacturing residues. A slight odor or smoke may occur, which is normal. Ensure the area is well-ventilated.
6. Turn the knob to the 'OFF' position and allow the stove to cool completely before proceeding with

cooking.

5. OPERATING INSTRUCTIONS

Using your Mondial Fast Cook Electric Stove is straightforward:

1. Place appropriate cookware (flat-bottomed, heat-resistant) on the heating plate.
2. Plug the appliance into a 110V power outlet.
3. Turn the temperature control knob clockwise to select your desired heat setting. The pilot light will illuminate, indicating that the stove is heating.
4. The stove offers 6 temperature adjustments. Start with a lower setting and gradually increase as needed for your recipe.
5. Once cooking is complete, turn the temperature control knob counter-clockwise to the 'OFF' position. The pilot light will turn off.
6. Unplug the appliance from the wall outlet and allow it to cool completely before cleaning or storing.



CONTROLE DE **TEMPERATURA**

São 6 ajustes: escolha o ideal para cada preparo



ACABAMENTO **EM AÇO INOX**

Mais resistente, durável e de fácil limpeza

Image 4: Close-up of the temperature control knob, illustrating the six adjustable settings for precise heat management.

The rapid heating plate ensures your food cooks efficiently. The pilot light serves as a visual indicator that the

stove is active.

6. MAINTENANCE AND CLEANING

Regular cleaning and maintenance will extend the life of your electric stove.

- Always ensure the appliance is unplugged and completely cool before cleaning.
- Wipe the stainless steel exterior with a soft, damp cloth and mild detergent. Avoid abrasive cleaners or scouring pads, as they can scratch the surface.
- For the heating plate, use a damp cloth to wipe away any food residue. For stubborn stains, a non-abrasive cleaner specifically designed for cooktops can be used, followed by wiping with a clean, damp cloth.
- Do not immerse the stove in water or place it under running water.
- Ensure all parts are thoroughly dry before storing or next use.
- Store the appliance in a dry place.

7. TROUBLESHOOTING

If you encounter any issues with your electric stove, refer to the table below for common problems and solutions.

Problem	Possible Cause	Solution
Stove does not turn on / Pilot light is off	Not plugged in; Power outage; Faulty outlet; Temperature knob not turned on.	Check power cord connection; Verify power supply; Test outlet with another appliance; Turn temperature knob to a heat setting.
Stove heats slowly or not enough	Incorrect temperature setting; Cookware not suitable; Voltage issue.	Increase temperature setting; Use flat-bottomed cookware that covers the heating plate; Ensure correct 110V supply.
Smoke or odor during first use	Manufacturing residues burning off.	This is normal for first use. Ensure good ventilation. It should dissipate after a few minutes.
Stove turns off unexpectedly	Overheating protection activated.	Unplug the stove and let it cool down completely. Check for proper ventilation.

If the problem persists after trying these solutions, please contact customer support.

8. SPECIFICATIONS

Detailed technical specifications for the Mondial Fast Cook Electric Stove FE-04.

Feature	Detail
Brand	MONDIAL
Model	FE-04

Feature	Detail
Color	Inox (Stainless Steel)
Voltage	110 Volts
Power	1000 Watts
Number of Heating Elements	1
Material Type	Stainless Steel
Product Dimensions (LxWxH)	22.5 x 26 x 6.8 cm
Item Weight	1.33 kilograms
Energy Efficiency Label (ENCE)	A
Special Features	Electric

9. WARRANTY AND SUPPORT

Your Mondial Fast Cook Electric Stove FE-04 comes with a manufacturer's warranty.

- **Warranty Period:** The product is covered by a one-year warranty from the date of purchase against manufacturing defects.
- **Extended Warranty:** Extended warranty options may be available for 12 or 24 months against failures and defects. Please refer to your purchase documentation for details.
- **Warranty Claims:** In case of a defect during the warranty period, please contact Mondial customer service or an authorized service center. Do not attempt to repair the appliance yourself.

For further assistance, product information, or to locate an authorized service center, please visit the official Mondial website or refer to the contact information provided in your product packaging.