

[Manuals.plus](#) /

› [Cecotec](#) /

› Cecotec Fun Gofrestone 3-in-1 Waffle, Donut, and Muffin Maker Instruction Manual

Cecotec 08005

Cecotec Fun Gofrestone 3-in-1 Waffle, Donut, and Muffin Maker

Model: 08005 | Brand: Cecotec

1. INTRODUCTION AND OVERVIEW

The Cecotec Fun Gofrestone 3-in-1 is an electric waffle maker designed for versatility and ease of use. It features a circular design and 700 W of power, allowing you to prepare waffles, donuts, and muffins with its three sets of interchangeable plates. The plates are coated with RockStone non-stick material, ensuring easy food release and simplified cleaning.



Image 1.1: The Cecotec Fun Gofrestone 3-in-1 Waffle Maker in a kitchen setting, showcasing its compact design and the variety of treats it can produce.

2. SAFETY INSTRUCTIONS

- Read all instructions before using the appliance.
- Do not touch hot surfaces. Use the cool-touch handle and oven mitts if necessary.
- To protect against electrical hazards, do not immerse the cord, plugs, or the appliance body in water or other liquids.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from the outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner. Contact customer service for examination, repair, or adjustment.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let the power cord hang over the edge of a table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.

- Exercise extreme caution when moving an appliance containing hot oil or other hot liquids.
- The appliance is equipped with overheat protection for safe operation.
- Ensure the appliance is placed on a stable, heat-resistant, and non-slip surface.

3. COMPONENTS

The Cecotec Fun Gofrestone 3-in-1 Waffle Maker includes the following components:

- 1 x Electric Waffle Maker main unit
- 2 x Waffle plates (one set)
- 2 x Heart-shaped muffin plates (one set)
- 2 x Donut plates (one set)
- 1 x Instruction Manual



Image 3.1: Top view of the closed waffle maker, highlighting its compact form and the Cecotec branding.

4. SETUP

1. **Unpacking:** Carefully remove the appliance and all accessories from the packaging. Dispose of packaging materials responsibly.

2. **Initial Cleaning:** Before first use, wipe the exterior of the appliance with a damp cloth. Wash the interchangeable plates with warm, soapy water, rinse thoroughly, and dry completely.
3. **Plate Installation:** Ensure the appliance is unplugged and cool. To install plates, align the plate with the grooves on the heating element and gently press down until it clicks into place. Repeat for both upper and lower plates. To remove, locate the plate release buttons (if present, typically on the side or front) and press them while lifting the plate.
4. **Placement:** Place the waffle maker on a clean, dry, stable, and heat-resistant surface, away from walls or other heat-sensitive objects. Ensure there is adequate ventilation around the appliance.



Image 4.1: Demonstrating the easy removal and installation of the interchangeable cooking plates.

5. OPERATING INSTRUCTIONS

5.1 General Operation

1. Ensure the desired plates are correctly installed and the appliance is closed.
2. Plug the power cord into a suitable electrical outlet (240V). The indicator light will illuminate, signaling that the appliance is pre-heating.
3. Allow the waffle maker to pre-heat completely. The indicator light will turn off or change color (depending on the model) when the appliance has reached the optimal cooking temperature and is

ready for use. This typically takes a few minutes.

4. For best results, lightly grease the plates with cooking spray or a small amount of oil before each use, especially for the first batch.

5.2 Using Waffle Plates

1. Once the waffle maker is pre-heated, open the lid.
2. Pour your waffle batter evenly onto the lower waffle plate, filling the grids without overfilling.
3. Carefully close the lid. Do not force it shut.
4. Cook for approximately 3-5 minutes, or until the waffles are golden brown and cooked to your desired crispness. Cooking time may vary based on batter consistency and personal preference.
5. Open the lid and carefully remove the cooked waffles using a heat-resistant plastic or wooden utensil. Avoid using metal utensils, which can damage the non-stick coating.



Image 5.1: The waffle maker in use, showing cooked waffles ready for serving.

5.3 Using Donut Plates

1. Ensure the donut plates are installed and the appliance is pre-heated.
2. Lightly grease the donut molds.

3. Carefully spoon or pipe donut batter into each mold, filling approximately two-thirds full.
4. Close the lid and cook for 3-6 minutes, or until the donuts are golden brown and firm to the touch.
5. Remove cooked donuts with a non-metal utensil.

5.4 Using Muffin Plates

1. Ensure the heart-shaped muffin plates are installed and the appliance is pre-heated.
2. Lightly grease the muffin molds.
3. Spoon muffin batter into each mold, filling approximately two-thirds full.
4. Close the lid and cook for 5-8 minutes, or until the muffins are fully cooked and a toothpick inserted into the center comes out clean.
5. Remove cooked muffins with a non-metal utensil.

6. CLEANING AND MAINTENANCE

1. **Always unplug the appliance** from the power outlet and allow it to cool completely before cleaning.
2. **Cleaning the Plates:** The interchangeable plates are easily removable and dishwasher-safe. For manual cleaning, wash them with warm, soapy water using a soft sponge or cloth. Rinse thoroughly and dry completely before storing or re-installing. Do not use abrasive cleaners or scouring pads, as these can damage the RockStone non-stick coating.
3. **Cleaning the Main Unit:** Wipe the exterior of the waffle maker with a soft, damp cloth. Do not use abrasive cleaners. Never immerse the main unit, power cord, or plug in water or any other liquid.
4. **Storage:** Once clean and dry, store the waffle maker with the plates installed or separately in a dry, safe place. The compact design allows for easy storage.

7. TROUBLESHOOTING

- **Appliance does not heat up:**

- Ensure the power cord is securely plugged into a working electrical outlet.
- Check if the outlet is functional by plugging in another appliance.

- **Food sticks to the plates:**

- Ensure the plates were lightly greased before adding batter, especially for the first use or if the coating is new.
- Make sure the appliance is fully pre-heated before adding batter (indicator light should signal readiness).
- Avoid using metal utensils that can scratch and damage the non-stick coating.

- **Food is not cooking evenly or is undercooked:**

- Ensure the appliance is fully pre-heated.
- Check that the batter is evenly distributed across the plates.
- Adjust cooking time as needed for different recipes or desired doneness.

- **Plates are difficult to remove:**

- Ensure the appliance is completely cool before attempting to remove plates.
- Press the plate release buttons firmly and simultaneously while lifting the plate.

8. SPECIFICATIONS

Brand	Cecotec
Model Number	08005
Power	700 Watts
Voltage	240 Volts
Material	RockStone Coating
Color	White
Product Dimensions (L x W x H)	23.5 x 23 x 29 cm
Item Weight	1.55 Kilograms
Special Features	3-in-1 (Waffles, Donuts, Muffins), Interchangeable Plates, Non-stick, Dishwasher-safe Plates, Overheat Protection, Cool-touch Handle, Non-slip Base

9. WARRANTY AND SUPPORT

For warranty information, please refer to the documentation provided at the time of purchase. Cecotec offers spare parts availability for 10 years from the date of purchase.

For technical support, service, or to inquire about spare parts, please contact Cecotec customer service through their official website or the contact details provided in your purchase documentation.